




P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: '04-'05 Dodge Durango V8-4.7L/ 5.7L Hemi

Kit Part #	54-10622	Tools Required:	Part List:	1 3/8 - 16 x 1" screw
Make:	Dodge	5/16" nut driver or slotted screwdriver	1 Air filter (replacement # 24-91031)	1 3/8"-16 self-locking nut
Model		10mm socket or wrench	1 Intake tube	2 3/8" flat washer
Year		13mm socket or wrench	1 Intake housing	1 Trim seal (11.5in and 18in length)
Engine		14mm socket or wrench	1 Intake housing bracket	1 1/4" ID x 3/4" OD cushioned washer
Durango	'04-'05	Ratchet	1 Coupler	1 3/4" ID x 23" in vent hose
Durango	'04-'05		2 Clamps #064	1 Washer, flat M6
			1 M6 x 1 x 16 screw	
			1 M6 x 1 x 12 screw	



Step 1 Complete kit components

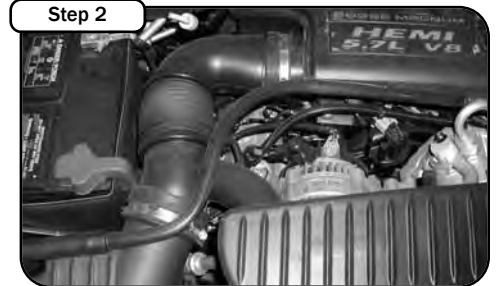

Step 2 Complete stock intake.



Step 3 Remove crank case breather line from airbox and oil fill chamber.



Step 4 Loosen clamp where intake tube meets resonator box.



Step 5 Undo clips that hold stock intake box lid on and remove this complete assembly along with stock intake tube.



Step 6 Remove 2 screws on side fender well area and remove lower portion of airbox.



Step 7 Remove 13mm screw from radiator core support. This will be reused once heat shield is installed.




Step 8 Loosen screw but do not remove completely. Slide bracket that was supplied in the kit into place and retighten screw. This new bracket is placed in between the accumulator bracket and side fender well.




Step 9 Place intake housing into vehicle and fasten down securely reusing core support screw from step 7 and use M6 x 1 x 12 for the bottom screw.



Step 10 Install trim seal onto intake housing.

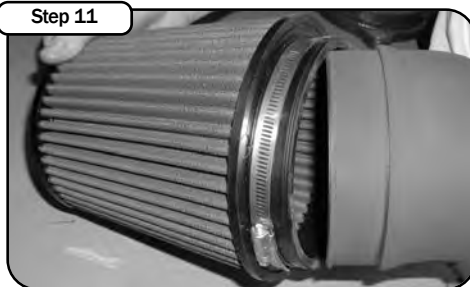

Step 11 Install filter onto end of intake tube and fasten securely. Also place coupler onto end of resonator and fasten securely.

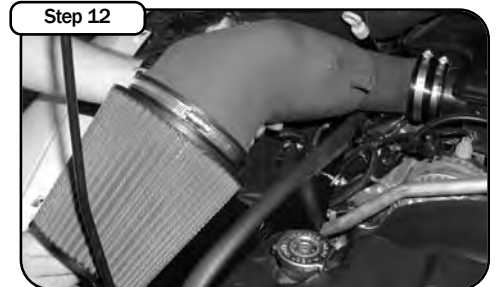

Step 12 Install intake tube assembly into vehicle.



Step 13 Once tube is set into place fasten securely using supplied M6 x 1 x 16 screw and cushioned washer. Attach new vent line to tube and to oil fill chamber (On 4.7L engine you must trim hose to 13" for proper fit).



Step 14 Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check inspection. Your installation is now complete. Tighten all connections and clamps. Re-check after a few hours.

Filter Service Note:
 Tube and filter assembly must be removed as a complete unit, due to space constraints.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).
 Filter Replacement: Magnum FLOW PN: 24-91031 (black w/blue media).