




P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Super Stock Intake Kit Installation Instructions: '00-'04 Porsche Boxster H6-2.7L/ Boxster S H6-3.2L

Kit Part #	55-10720	Tools Required:	Part List:
Make:	Porsche	5/16" nut driver	1 Air filter (PN 30-10090)
Model	Year	Engine	1 Intake tube
Boxster	'00-'04	H6-2.7L	1 Coupler Straight 3.25"x2" red
Boxster S	'01-'04	H6-3.2L	1 Coupler Straight 3"x2" red
			4 Clamp #052



Step 1
 Complete kit. Make sure all components are present prior to beginning installation.

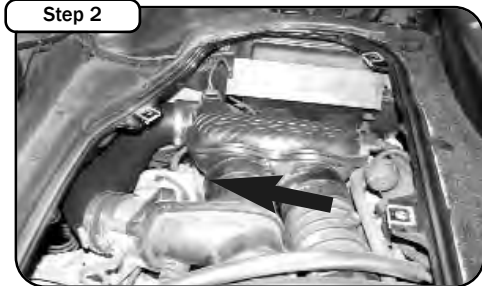

Step 2
 Complete stock intake.



Step 3
 In order to access engine compartment. Refer to your owner's manual for engine access instructions.



Step 4
 Disconnect hose clamps on both ends of the intake tube.



Step 5
 Carefully remove intake tube out of the engine compartment.



Step 6
 Install the smaller 3" coupler and clamps on the throttle body. Do not tighten clamps at this time.



Step 7
 Install the larger 3.25" coupler and clamps on the air box. Do not tighten clamps at this time.



Step 8
 Carefully install the new intake tube in the engine compartment. Tighten all four clamps securing intake tube.



Step 9
 Open the air filter access tray on the side of the air box and remove the OE air filter.



Step 10
 Install the new aFe high flow air filter and reinstall the air filter access tray.



Step 11
 Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check inspection. Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).
 Filter Replacement: Magnum FLOW PN: 30-10090 (Red w/gold media).