



P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: '95-'99 Volkswagen Golf GTI/ Jetta GLX V6-2.8L (VR6)

Kit Part #	54-10821	Tools Required:	Part List:	3 Washer wavy M6
Make:	Volkswagen	5/16" nut driver or slotted screwdriver	1 Air filter (replacement # 24-40505)	1 7/16 Trim seal (26.5")
Model	Year	Engine	1 Housing	1 Self Tapping Screw
Golf GTI VR6	'95-'99	V6-2.8L	1 Intake Tube	
Jetta III GLX	'95-'99	V6-2.8L	1 Breather Filter	
			1 Hose Clamp #052	
			3 Screw M6x1x25	
			3 Nut M6	
			4 Washer flat M6	



Step 1
 Complete intake system. Verify all parts listed are present prior to beginning installation.



Step 2
 Stock intake system.



Step 3
 Unclip the top portion of the air box and remove from the engine bay. Remove the breather hose at the valve cover.



Step 4
 Remove the factory air filter.



Step 5
 Remove the bottom half factory air box by grabbing the air box by the sides and lift up and out.



Step 6
 Place the supplied breather air filter on the OE location. Secure with the supplied hose clamp.



Step 7
 Secure the new intake tube to the new housing using the supplied screws, washers and nuts.




Step 8
 Place the supplied trim seal along the edge of the housing.



Step 9
 Position the new intake into the engine bay. Slide the MAF unit into the intake tube. Secure with the provided hose clamp.



Step 10
 Secure the side of the housing with the supplied self tapping screw and washer.

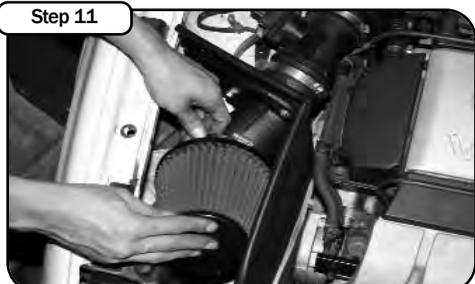

Step 11
 Install the new air filter into the housing secure the filter with the provided clamp. The air filter is pre oiled from the factory.



Step 12
 Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check inspection. Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically.

Installation Tip

For proper air filter installation. Mark the intake tube at 1" from the end of the tube. Insert air filter on tube up to the 1" line you marked. Tighten clamp to secure air filter to intake tube.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil Filter Replacement: Magnum FLOW PN: 24-40006 (black w/ blue media).