



P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: '99-'06 Cadillac Escalade V8-5.3L/6.0L


Kit Part #	51/54-80092	Tools Required:	Part List:	3 Clamp #064
Make:	Cadillac	5/16" nut driver or slotted screwdriver	1 Air filter (replacement # 24-91007) or Pro Dry S™ 21-90015	5 Washer M6
Model		10mm socket or wrench	1 Intake tube	2 Clamp #060
Year		Ratchet and extension	1 Intake housing	1 Coupler Straight 4"x2"
Engine			1 Intake housing cover	9 Screw, Btn Head M6x1x12
Escalade '99-'06	V8-5.3L		1 Air filter adapter	1 Coupling Elbow 3-1/4"D by 15 deg.
Escalade '99-'06	V8-6.0L		1 Coupler reducer 4" x 3-3/4"	
			1 Clamp #072	



Step 1
Complete kit.



Step 2
Complete stock intake.

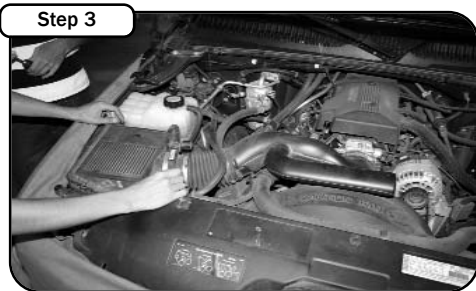

Step 3
Disconnect negative terminal from battery. Remove the four Phillips screws securing the top of the air box. Disconnect the MAF sensor.



Step 4
Loosen the hose clamp connecting the MAF sensor to the air box. Remove upper portion of the air box and MAF sensor. Carefully set to the side for later use.




Step 5
Grab the lower portion of the air box. lift up and out. The box is secured with rubber gromets.




Step 6
Remove the four 10mm bolts that secure the air box base to the chassis. Save bolts for later use. Remove air box tray out of vehicle.



Step 7
Place the air filter adapter inside the housing. Secure the adapter with the supplied screws and washers.

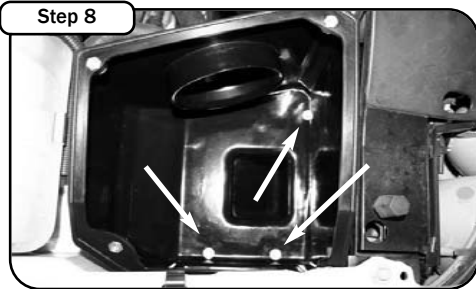

Step 8
Install housing into vehicle using factory hardware removed from step 6.

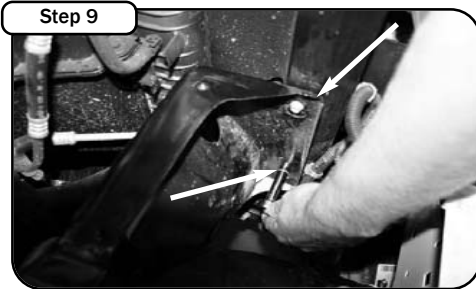

Step 9
NOTE: CHECK HOUSING HOOD CLEARANCE BEFORE CONTINUING ON WITH KIT INSTALLATION. IF HOOD CLEARANCE IS AFFECTED LOOSEN TWO SCREWS ON RADIATOR OVERFLOW BRACKET. LOWER BRACKET AND TIGHTEN SCREWS. GO BACK TO STEP 8.




Step 10
Install MAS using supplied clamps and reducer coupler. Do not tighten clamps at this time.




Step 11
Place straight coupler on throttle body (4"Dia x 2"Long) and elbow coupler on tube. Slide tube onto throttle body coupler. Attach elbow to MAS. Tighten clamps. Rotate fan to ensure sufficient clearance.



Step 12
Install filter into housing. Reconnect the MAS.

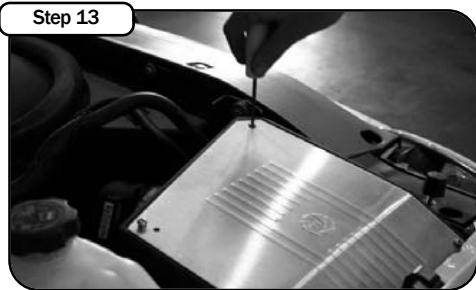

Step 13
Install housing cover onto box using supplied button head screws.

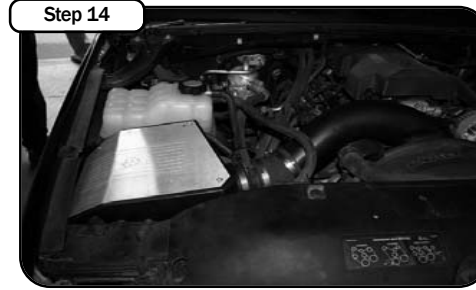

Step 14
Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. Your installation is now complete. Re-check after a few hours of operation. Make sure all clamps are tight and that all electrical components are secure.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil. Filter Replacement: Magnum FLOW PN: 24-91007 (black w/blue media). **Pro Dry S™** P/N: 21-90015 (black w/ white media) **Pro Dry S™** cleaning: see cleaning instruction sheet 06-00074