



P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: '05-'06 Hummer H3 Stage 2 Intake System

| | | | | |
|-------------------|-------------|--|--|--------------------|
| Kit Part # | 51/54-10862 | Tools Required: | Part List: | 3 Nut, M6 |
| Make: | Hummer | 5/16 nut driver or slotted screwdriver | 1 Air Filter (24-90023) or Pro Dry S™ 21-90023 | 2 Washer, Flat, M8 |
| Model | Year | Engine | 1 Housing | 6 Washer, Flat, M6 |
| H3 | 05-06 | L5 3.5L | 1 Intake Tube | 3 Washer, lock, M6 |
| | | | 1 Coupler | 2 Washer, lock, M8 |
| | | | 2 Screws, M4 | 2 Spacer |
| | | | 2 Screws, M8 | 3 Screw, M6 |
| | | | 2 Clamp, #060 | 1 Trim Seal (29") |
| | | | | 1 Gasket, MAS |




Step 1
Complete kit with parts.




Step 2
Complete stock intake.



Step 3
Disconnect MAF sensor. With 5/16 nut driver loosen factory intake tube.

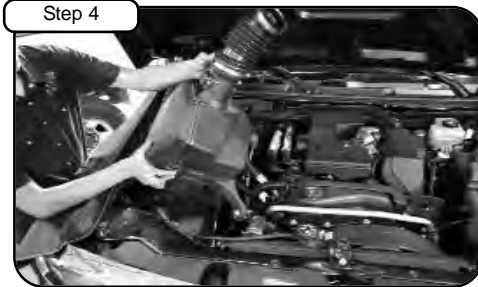

Step 4
With 13mm socket, loosen both screws holding factory airbox. Carefully pull out complete air box assembly.

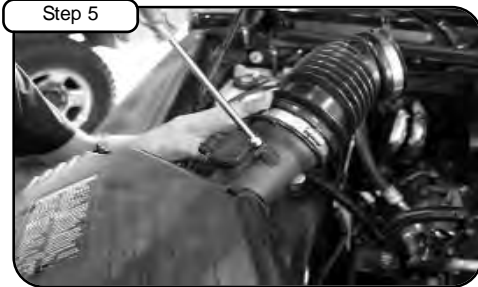

Step 5
Carefully remove MAF sensor with the appropriate driver.



Step 6
Place new housing into vehicle. With the supplied screws, tighten using 10mm and 13mm socket.




Step 7
Install 3/4 bulb trim seal on to top of aFe housing.



Step 8
Install hump coupler onto factory plenum box with clamps. Place tube through housing on to the coupler.



Step 9
With supplied screws, mount new tube onto housing using 10mm socket or wrench.

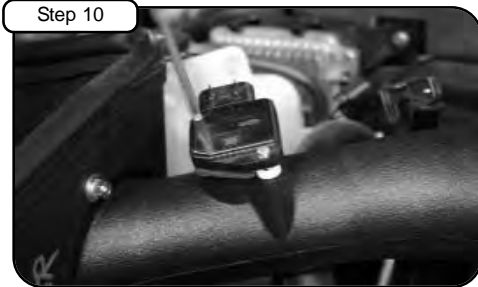

Step 10
Install factory MAF sensor onto new tube using supplied gasket and M4 screws. The plastic spacers are installed under the MAF sensor.



Step 11
Install 4" aFe high flow air filter to tube. Tighten all clamps with 5/16 nut driver. Re-connect MAF sensor. Your installation is now complete. Check and re tighten periodically.