





advanced FLOW engineering™
 P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFepower.com

Intake kit Installation Instructions: 2005-2007 Chevrolet Corvette C6 V8-6.0L LS2 Stage 2

Kit P/N: 51/54-10902	Tools Required: 5/16" nut driver Flat head screwdriver	Parts list: 1 Air filter (Pro-5R™ 24-90033 Pro Dry S™ 21-90033)
Make: Chevrolet		1 Tube, rotomold
Model: Corvette (C6)	Year: 05-07	Engine: V8-6.0L LS2
		1 Coupler, reducer (4" x 3-1/2" X 3-1/2")
		1 Clamp, #072
		2 Clamp, #060
		1 Cap, 3/4"

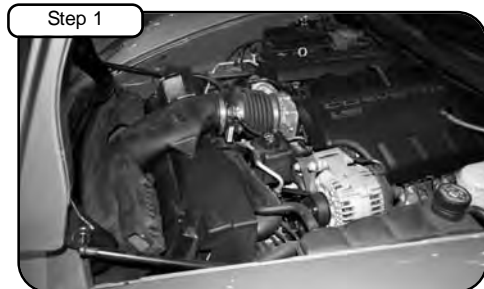


Step 1
 Complete Stock Intake.

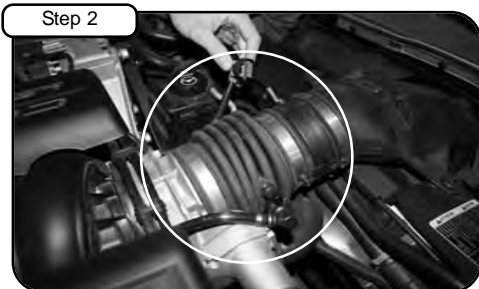

Step 2
 Disconnect MAF sensor harness and vacuum line. Loosen clamps with 5/16" nut driver.



Step 3
 Lift up air box carefully from middle. Pull back MAF sensor from OE tube.

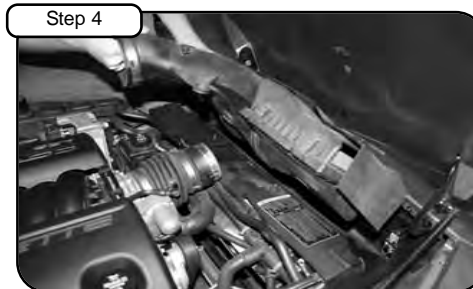

Step 4
 Take air box out of vehicle.



Step 5
 Remove OE tube with MAF sensor.



Step 6
 Remove OE plastic fitting from tube and install into new coupler.



Step 7
 Install MAF sensor to inside of tube with clamp. *Do not tighten.*




Step 8
 Install air filter and tighten with 5/16" nut driver. Place 3/4" cap through hole on filter.



Step 9
 Install coupler to throttle body using clamps provided. Place tube to factory position and install completely. *Do not tighten.*



Step 10
 Tighten all clamps using 5/16" nut driver.

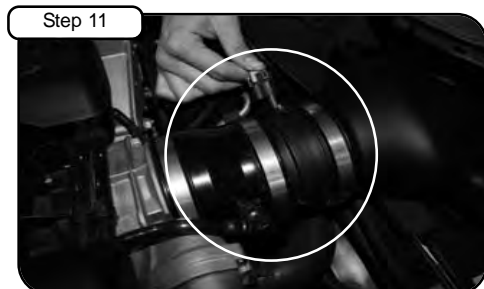

Step 11
 Re-connect MAF sensor harness and vacuum line.



Step 12
 Your installation is now complete. Please check all bolts and clamps periodically. Re-tighten if necessary. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil).
 Filter Replacement: **Pro-5R™** P/N: 24-90033 (black w/blue media). **Pro Dry S™** P/N: 21-90033 (black w/white media) **Pro Dry S™** cleaning: see cleaning instruction sheet 06-00074.
 For replacement part(s) or "Restore Kit" please call aFe sales/tech support @ 951-493-7100