



Intake kit Installation Instructions: 2008 Kawasaki Teryx 750cc Powersports

6F9	Kit P/N: 85-10036		036	Tools Required:	Parts list:		1	
	Make:	ke: Kawasaki		10mm socket or wrench	2 Air filters (Pro-GUARD 7 [™] 87-40011	6 Washer, flat M6		RESTORE
	Make.			5/16" nut driver	& Pro Dry S [™] 81-40011)	4 Washer, wavy M6		
	Model:	Year:	Engine:	Flat head screwdriver	1 Housing	2 Nut, M6		Sil
200	Teryx	2008	750cc	Ratchet w/ extension	1 Coupler, reducer 4" x 3"	1 7/16" trim seal @ 27.5"L		
					1 Clamp, #064	1 Pre-filter		
advanced FLOW engineering™	NOTE:	Jetting	Required, 1		1 Clamp, #052	1 Cleaning kit		
P.O. Box 1719	size up on needle, 1 size				4 Screw, hex M6 x 1 x 12	•		
Corona, CA 92878	up on	main jet	over stock.					
Support: 951-493-7100								
www.aFepowersports.com							Complete Kit w/ Parts	

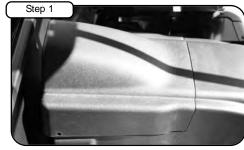

Complete Stock Intake.

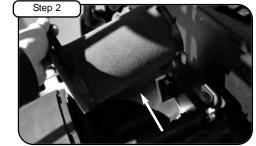


Remove air-box cover. Un-clip upper half of air-box with OE air filter and remove.



Remove engine cover. Remove plastic push clips using flat head screwdriver.



With 10mm socket or wrench loosen and remove the 4 bolts holding in OE air-box. (*Be careful not to drop any-thing into the opening*) Remove air-box.

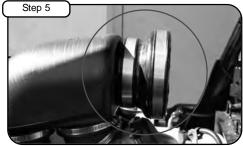

Install coupler with clamps to factory tube. Do not tighten.



Install 7/16" trim seal to housing.




To install housing into Teryx guide into coupler and postion to bracket. Use screws, washer, and wavy washer to bracket. Tighten using 10mm socket or wrench.



Install screws with washer though tab. Using washer, wavy washer, and M6 nut place on other side of screw.



Tighten all screws with 10mm socket and wrench.

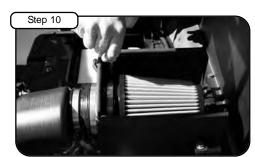


Install air filter to housing and tighten using 5/16" nut driver.



Tighten clamps on coupler using 5/16" nut driver.



Install pre-filter to air filter.

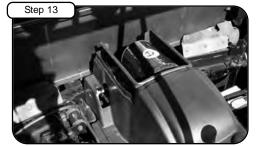

Re-install engine cover with push clips.



Install air box cover using push clips. Your installation is now complete Please check all bolts and clamps perodically. Re-tighten if necessary. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil). Filter Replacement: Magnum FLOW PN: 87-40011 Pro-GUARD 7[™] (black w/gold media) or Pro Dry S [™] P/N: 81-40011 (black w/white media) Pro Dry S [™] cleaning: see cleaning instruction sheet 06-00074.