



advanced FLOW engineering™
 P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 aFepower.com

Intake kit Installation Instructions: 1994-2002 Dodge Ram 2500-3500 Cummins (td)

Kit P/N: 51/54/75-80072 75-80082-1V	Tools Required: 13mm socket or wrench 7/16" socket or wrench 5/16" nut driver Flat head screwdriver Ratchet w/ extension 5/32" allen key	Parts list: 1 Air filter (P/N Pro-GUARD 7™ 72-90040) 1 Housing, rotomold 1 Cover, aluminum 1 Tube, rotomold 1 Coupler, straight hi-temp 4" x 2-1/2" 1 Coupler, hump 6" x 3" 2 Clamp, #064 2 Clamp, #104 3 Screw, hex 1/4"-20 x 3/4" 3 Washer, flat 1/4"	Value Pack Part List (75-80072-1V only): 1 Air filter P/N (Pro Dry S™ 21-90038) 1 Restore kit, gold squeeze 1 Pre-filter
Make: Dodge			
Model: Ram 2500 Ram 3500	Year: '94-'02 '94-'02	Engine: L6-5.9L(td) L6-5.9L(td)	



Complete Kit w/ Parts



Complete Stock Intake.



Use 5/16" nut driver to loosen clamps on OE tube at turbo/air box and remove.




Un-clip upper half of air box and remove.



Carefully lift and pull bottom half of air box to remove from vehicle.




With 13mm socket or wrench remove top bolt on inner fender next to air inlet hole.

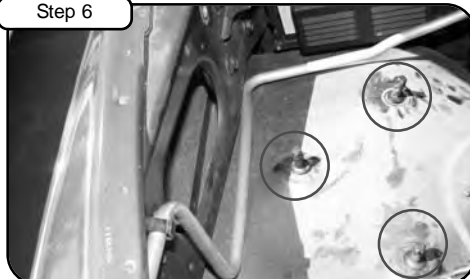

Remove plastic fittings from bolts on existing stock location mounts. Make sure 1/4-20" screw is showing.



Install housing into vehicle and position.

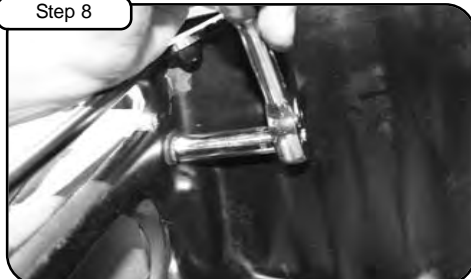

From step 5, re-install bolt through housing hole and tighten.



Secure housing using fender washers and nuts provided. Tighten using 7/16" socket or wrench.



Install filter adaptor to outside of housing using supplied screws, washers, and nuts. Tighten with 7/16" socket or wrench.



Install high temp coupler to turbo using clamps provided. Do not tighten.



Attach 6" hump coupler with clamps provided to tube and install tube to turbo and filter adaptor. Adjust and tighten all clamps with 5/16" nut driver. Install filter minder grommet in hole provided and install filter minder.



Install air filter and tighten with 5/16" nut driver.



Install cover and tighten using button head screws provided. Tighten with 5/32" allen key.



Place the included CARB EO Sticker on or near the intake system on a smooth, clean surface. E.O. identification label is required in passing the Smog Check Inspection. Your installation is now complete. Please check all clamps and hoses periodically and tighten.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" aFe P/N: 90-50000 gold aerosol oil, aFe P/N: 90-50500 gold squeeze oil. Filter Replacement **Pro-GUARD 7™** P/N: 72-90040 (black w/gold media). For replacement part(s) or "Restore Kit" please call aFe sales/tech support @ 951-493-7100.