



# Intake kit Installation Instructions: 2009 Kawasaki Teryx 750cc Stage 1

advanced FLOW engineering™  
 P.O. Box 1719  
 Corona, CA 92878  
 Support: 951-493-7100  
 www.aFepower.com

Kit P/N: 85-10062	<b>Tools Required:</b> 10mm socket and wrench 5/16" nut driver Flat head screwdriver Ratchet w/ extension	<b>Parts list:</b> 1 Air filter ( <i>Pro-GUARD 7</i> ™ 72-90042) 1 Air filter ( <i>PDS</i> ™ 21-90042) 1 Housing 4 Screw, hex M6 x 1.0 x 12mm 6 Washer, flat M6	2 Nut, M6 1 7/16" trim seal @ 25.50"L 1 7/16" trim seal @ 11"L 1 Restore kit
-------------------	---	--	---




Complete Stock Intake.




Remove top half of engine cover. Un-clip upper half of engine cover and remove.



Remove engine cover. Remove plastic push clips using flat head screwdriver and remove two front screws with a philips screw driver.

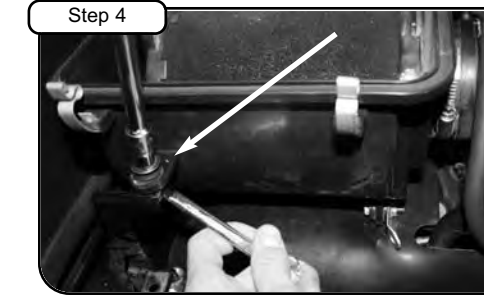

With 10mm socket or wrench loosen and remove the 4 bolts holding in OE air-box. (Be careful not to drop anything into the opening) Loosen clamp & remove air-box.

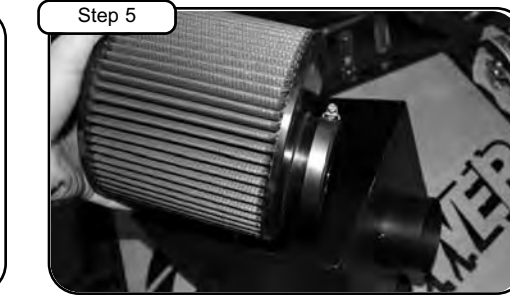

Install Filter with clamp in aFe air intake housing.



Install 7/16" trim seal on housing.



Install housing using stock coupling and clamp. Use provided screws, washers and nuts to attach bracket on bottom of housing to vehicle.



Install screws with washer through tab. Place washer and M6 nut on other side of screw.



Tighten all screws with 10mm socket and wrench.



Tighten clamp to housing using 5/16" nut driver or flat head screwdriver.



Re-install engine cover with push clips and two philips screws.



Install upper half of engine cover using push clips.



Your installation is now complete. Please check all bolts and clamps periodically. Re-tighten if necessary. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" ( aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil ).  
 Filter Replacement: Magnum FLOW PN: 72-90042 *Pro-GUARD 7*™ (black w/gold media)