



Installation

Kit P/N:

TA-1003P

Make:

Honda

Model:

Fit (GE)

Year:

2009

Engine:

L4-1.5L vtec


Parts Identification:

- 1 Air filter (Pro Dry S™ TF-9002D)
- 1 Intake tube, 05-T1003P1
- 1 Coupling, straight 05-00570
- 2 Clamp #044
- 1 3/8" hose @ 2"L
- 1 Grommet
- 1 3/8" fitting
- 1 Flat washer M6
- 1 Hex screw M6 x 1 x 20
- 1 Wavy washer M6
- 2 Screw M4 x .7 x 8
- 1 Pre filter

Tools Required:

- 10mm socket or wrench
- Ratchet w/ extension
- Phillips screw driver
- Flat head screw driver
- 5/16" nut driver
- Pliers

Note: Read instructions before installation and have tools ready.

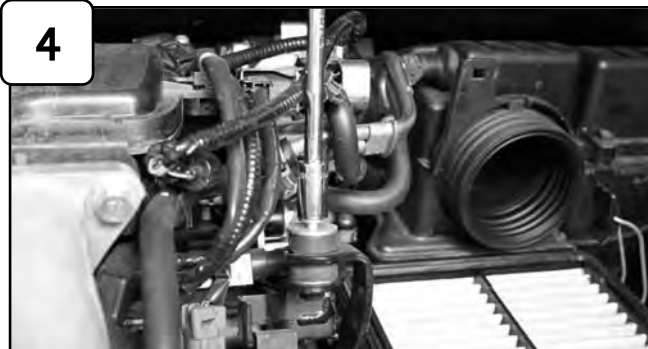

Loosen the bolt mounting air box isolation mount, use 10mm socket or wrench.



Remove air box cover lid using phillips screw driver.



Complete Stock intake. *Please disconnect battery terminals before installation.*



Loosen the 2nd bolt behind the battery mounting the air box, use 10mm socket or wrench.



Pull vacuum line away from air box and remove complete air box.



Disconnect MAF sensor harness and remove upper half of air box.



Loosen the clamp on throttle body using phillips screw driver.



Remove MAF sensor from stock air box using phillips screwdriver.



Accessories



Replacement Filter P/N:
TF-9002D



Pre Filter P/N:
TP-7011B

Note: Filter Cleaning: When cleaning your **Pro Dry S™** filter, be sure to use only "Restore Kit" (Takeda P/N: TP-7015C **Pro Dry S™** cleaner only.)

Pro Dry S™ cleaning:
see cleaning instruction sheet TF-9000I.


For replacement part(s) or "Restore Kit" please
log on to takedausa.com
P.O. Box 1719 Corona CA, 92878

10



Install MAF sensor to intake tube using provided M4 screws.

11

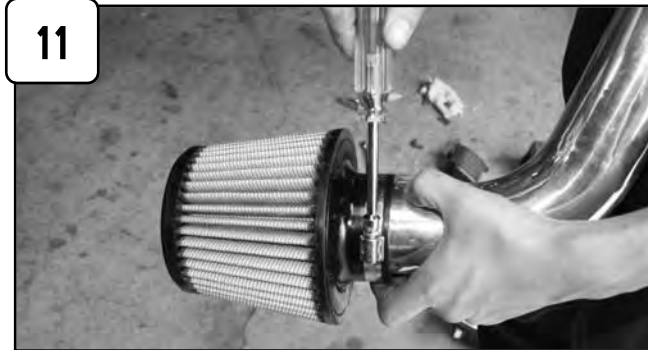

Install air filter to intake tube and tighten using 5/16" nut driver. Install provided grommet to hole on top of tube. Install pre filter to filter.

12



Install straight coupler to throttle body and position using clamps provided. Do not tighten.

13



Install intake into vehicle.

14



Position tab to mounting point and coupler.

15



Tighten down intake using provided flat washer, wavy washer and hex screw.

16



Tighten all clamps using 5/16" nut driver.

17



With 3/8" elbow and hose, attach hose to factory location and insert elbow fitting into grommet. Re-connect MAF sensor harness and battery terminals.

18



The installation of your Takeda performance intake is now complete. Please check all components and re-tighten if necessary. Thank you for choosing Takeda!