



Dynamic Air Scoop Installation Instructions: BMW '01-'07 E46 3-Series D.A.S.

Kit P/N: 54-10468, 55-10460, 55-10461

Tools Required:
Screwdriver, Phillips
Pliers or Panel Popper

Parts List:
1 05-01045 D.A.S.

Make: BMW

Model: Year: Engine:
E46(3-Series) 01-07 ALL

Note: Your vehicle may differ from vehicle in photos.



Complete Kit

advanced FLOW engineering™
P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFepower.com

Step 1



Complete Stock Configuration.

Step 2



Remove inlet duct retaining pins and inlet duct.

Step 3




Remove retaining screws. (2)

Step 4



Gently pull grill forward to insert the aFe DAS.

Step 5

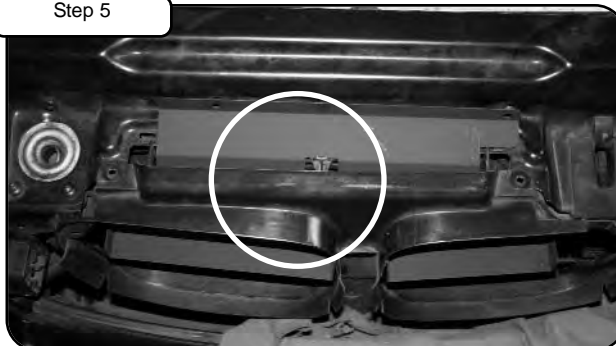

Grill support should pass through the clearance hole in the DAS.

Step 6



Replace the screws removed in step 3.

Step 7



Scoops with screw installed.

Step 8



Replace inlet duct and retaining pins and enjoy your aFe DAS.