



advanced FLOW engineering  
P.O. Box 1719  
Corona, CA 92878  
Support: 951-493-7100  
www.aFeFilters.com

# aFe Silver Bullet

Throttle Body Spacer  
**Part Number**  
**46-36001**


## Important!

**This kit includes the parts for several different installations; please verify the parts list and read all instruction steps before you begin installation.**

**Make:** NISSAN TRUCK/SUV

<b>Model</b>	<b>Year</b>	<b>Engine</b>	<b>Model</b>	<b>Year</b>	<b>Engine</b>
Armada	2005-2008	5.8L	Titan	2005-2008	5.6L

1. Loosen and remove engine cover. Loosen and remove PCV vent hoses from air inlet tube. Loosen and remove air inlet tube from throttle body and air filter assembly. Remove engine cover bracket from intake manifold.
2. Loosen and remove the four socket cap bolts from the throttle body with a 5mm hex. Remove throttle body away from intake manifold.
3. Install the aFe Silver Bullet throttle body spacer (engraved side towards throttle body) and a gasket onto the manifold with the longer bolts and washers (supplied in kit). Tighten the bolts to 10 Nm (89 lb/in).
4. Install air inlet tube onto the throttle body and air filter assembly. Reconnect the PCV vent hose to air inlet tube. Reattach the engine cover bracket to intake manifold. Reinstall the engine cover to bracket.

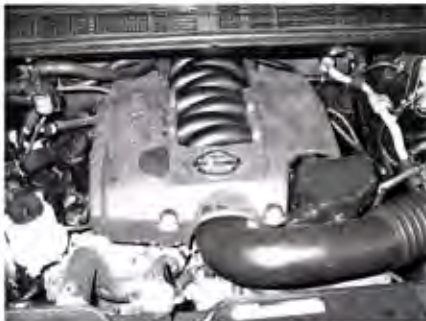

### Parts List

- 1 aFe Silver Bullet Spacer
- 1 Gasket
- 4 6mm x 70mm bolts
- 4 6mm flat washers
- 4 6mm lock washers