




INSTALLATION INSTRUCTIONS

MAKE: FORD
MODEL: POWER STROKE
YEAR: 2008-2010
ENGINE: V8-6.4L (td)
WHEELBASE: 156" - 172"

4" Down-Pipe Back
49-03004 (w/ Muffler)
49-03004NM (w/o Muffler)

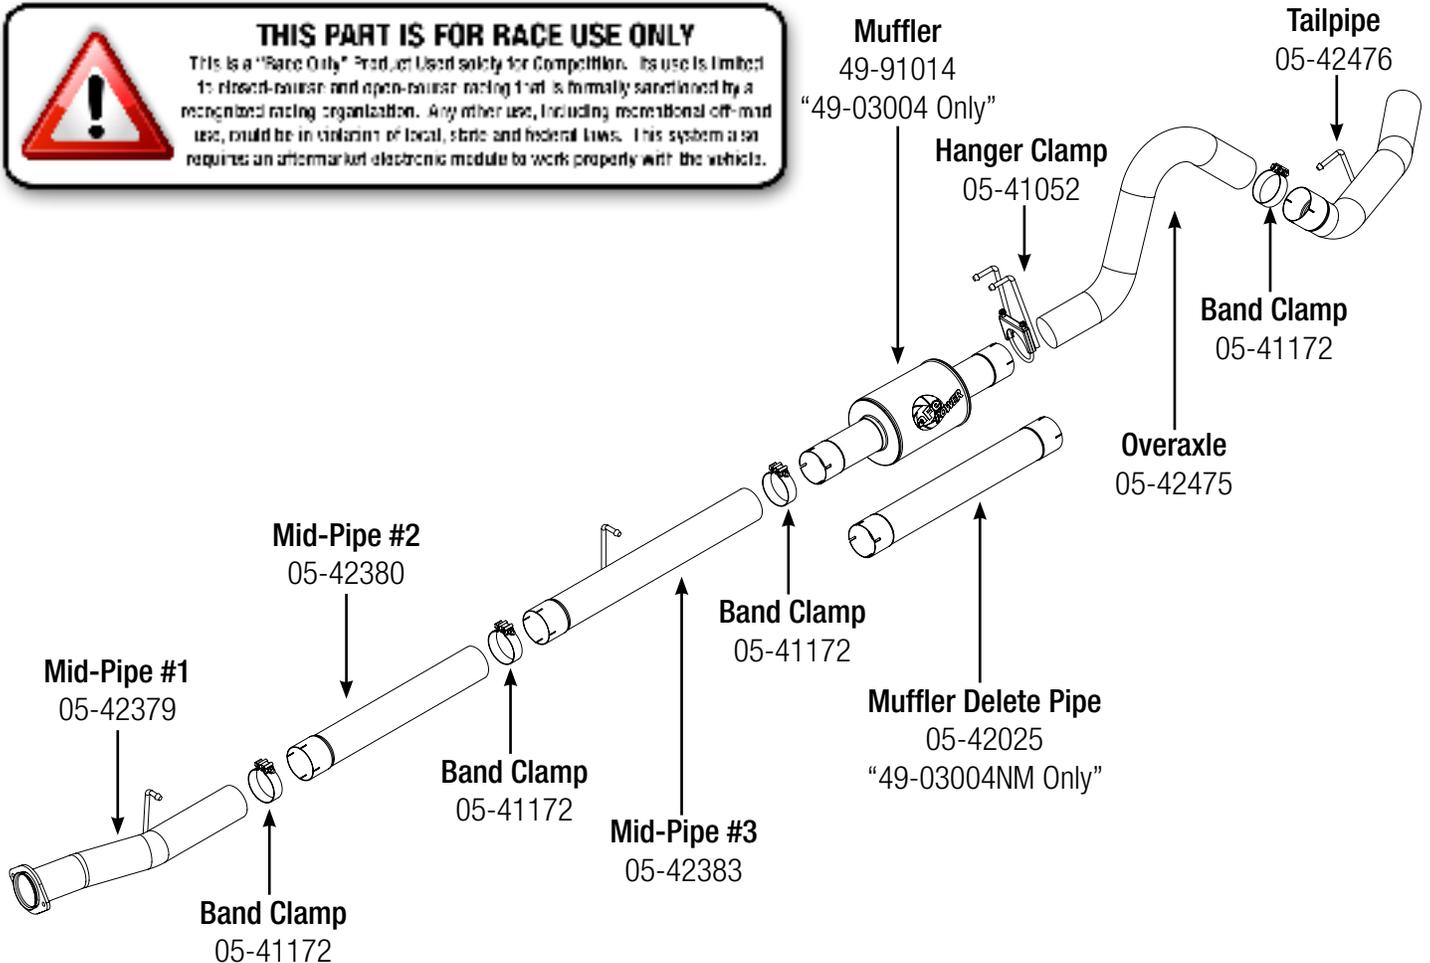

Step 1: (Read Instructions prior to installation) Remove the stock exhaust from the rear of the truck working your way forward. Take caution not to damage the factory isolation mounts as they will be reused. Disconnect sensors at the connections. Take caution as not to damage any sensors. **It is recommended to not fully tighten the clamps until the entire system has been installed.**

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install mid-pipe #1 first, then install the mid-pipes #2 and #3 with the band clamps. You may need to shorten mid-pipe #3 depending on the wheelbase length. **Do not fully tighten.**

Step 4: Install the muffler ("49-03004 only") or muffler delete pipe ("49-03004NM only") using the two clamps indicated. **Do not fully tighten.**

Step 5: Utilizing the factory isolation mounts now install 2-piece overaxle/tailpipe section.

Step 6: Adjust for alignment and tighten all connections. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**
- Controller/Programmers are required to operate this system.

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**