


INSTALLATION INSTRUCTIONS

MAKE: GM

MODEL: DURAMAX YEAR: 2007.5-2010 ENGINE: V8-6.6L (td) LMM

WHEELBASE: 153"

4" Race Pipe 49-04014 (AL) 49-44019 (409 SS) CCSB (Crew Cab Short Bed)

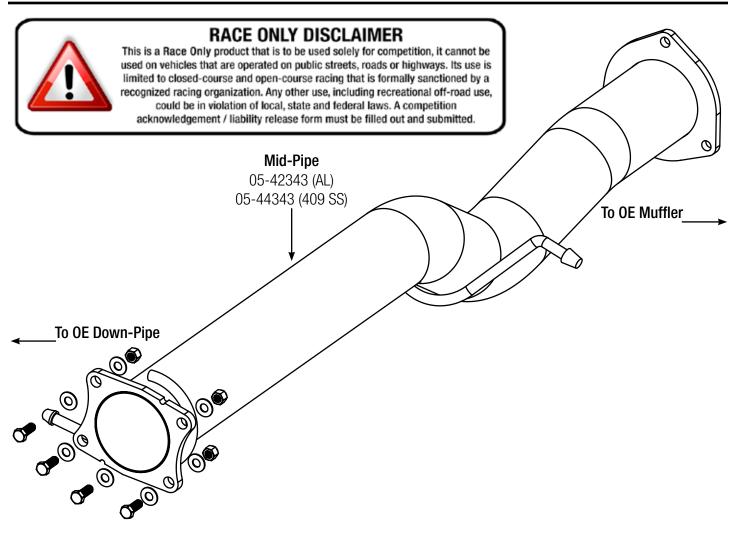

- Step 1: (Read Instructions prior to installation) Disconnect sensors at the connections. Take caution as not to damage any sensors. Remove CAT/DPF section of your trucks exhaust working your way forward. Take caution not to damage the factory isolation mounts as they will be reused. It is recommended to not fully tighten the clamps until the entire system has been installed.
- Step 2: For ease of installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.
- **Step 3:** Attach mid-pipe using the supplied hardware.
- **Step 4:** Re-install OE sensor and connect to harness.
- **Step 5:** Adjust for alignment and tighten all connections. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. Tighten and secure.
- Controller/Programmers are required to operate this system.

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**