



P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
www.aFeFilters.com

Stage 2 Intake Kit Installation Instructions: '04-'06 Cadillac CTS/ SRX V6-3.6L

Kit Part #	51/54-10892	Tools Required:	Part List:	
Make:	Cadillac	Slotted Screwdriver	1 Air Filter (P/N: #24-91031) or Pro Dry S™ 21-90045	1 Reducer coupler (3-1/4"x3")
Model		6mm Allen wrench	1 Intake tube	1 Reducer coupler (4-3/8"x3-1/2")
Year		10mm Socket or Wrench	1 Housing	1 Straight coupler (3-1/4"x2")
Engine		5/16 Nut driver	1 Housing cover	1 Clamps #48
CTS	'04-'06		1 Adapter Injection Molded	3 Clamps #52
SRX	'04-'06		7 M6x1x10 Button head screws	1 Clamps #56
			5 M6 Wavy Washer	1 Clamps #72

Components



Complete Intake System

Step 1



Complete Stock Intake

Step 2



Remove oil cap, then pull up on engine cover to release from its retainers.

Step 3



Remove the three screws that secure the air box to the vehicle.

Step 4



Loosen the two hose clamps from the intake plenum. Remove plenum from vehicle.

Step 5




Pull out factory air box and remove MAS from factory airbox.

Step 6



Install provided 3-angle adaptor onto aFe housing using supplied M6 hardware.

Step 7

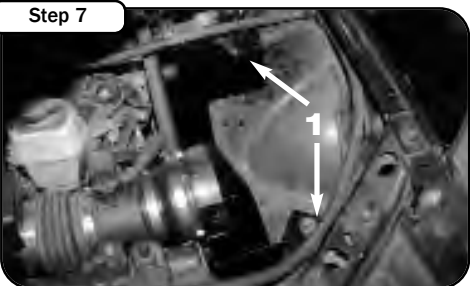


Install housing into vehicle. (1) Re-use all factory screws from airbox.

Step 8



Install mass sensor and reducer coupler onto 3-angle adaptor.

Step 9

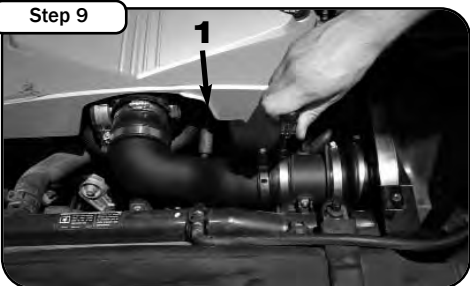

Install tube onto vehicle using supplied couplers and (1) reconnect Crank Case Breather onto tube.

Step 10




Install aFe filter onto 3-angle adaptor.

Step 11



Install housing cover with supplied button head screws.

Step 12

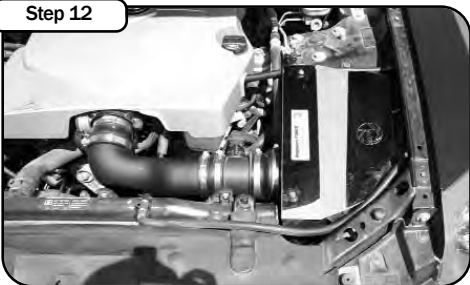

Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).
Filter Replacement: Magnum FLOW PN: 24-91031 (black w/ blue media). **Pro Dry S™** P/N: 21-90045 (black w/ white media) **Pro Dry S™** cleaning: see cleaning instruction sheet 06-00074