




P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: '96-'00 GM Trucks/SUV's V8-5.0/5.7L

| | | | |
|--------------------|---------------------------|---|---------------------------------------|
| Kit Part # | 54-10531 | Tools Required: | Part List: |
| Make: | Chevrolet/ GMC/ Cadillac | 5/16" nut driver or slotted screwdriver | 1 Air filter (replacement # 24-90015) |
| Model | Year Engine | 8mm socket or wrench | 1 Housing |
| C/K 1500/ 2500 | '96-'99 V8-5.0L Fi | 10mm socket or wrench | 1 Air filter adapter |
| C/K 1500/ Suburban | '96-'99 V8-5.7L Fi | Ratchet and extension | 5 Screw Hex head m6x1x12 |
| C/K 2500/ Suburban | '96-'00 V8-5.7L Fi | | 5 M6 washer wavy |
| C/K 3500 | '96-'00 V8-5.7L Fi | | 1 Clamp #064 |
| Tahoe/ Yukon | '96-'00 V8-5.7L Fi | | 1 Clamp#072 |
| Yukon Denali | '99-'00 V8-5.7L Fi | | 1 Trim seal 3/4" bulb (32") |
| Escalade | '99-'01 V8-5.7L Fi | | 1 Grommet |
| | | | 1 Coupler |



Step 1
 Complete stage 1 intake. Make sure all components listed are present prior to installation.

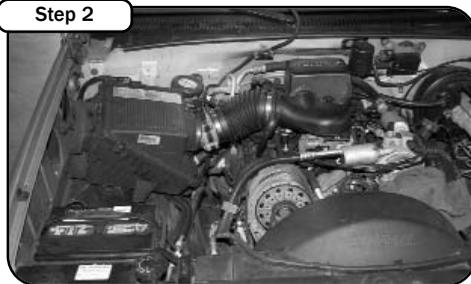

Step 2
 Complete stock intake.



Step 3
 Disconnect and loosen the clamp on the MAF sensor (1). Remove the three 10mm bolts securing the air box. Disconnect the Temp sensor located on the side of the air box.



Step 4
 Lift up and remove the airbox assembly.



Step 5
 Loosen 10mm bolt on side of coolant reservoir. Remove airbox bracket from inner fender panel. Remove 10mm bolt near batter tray.




Step 6
 Place housing in engine bay. Secure with the bolts removed in step 5. Rear housing tab slips in behind plastic.



Step 7
 Re install 7/8"mm bolt in the bottom of the housing. Insert bolt thru the fenderwell and secure with supplied lock nut and washer.




Step 8
 Place the air filter adapter in the housing. secure with the supplied M6 bolts and washers.

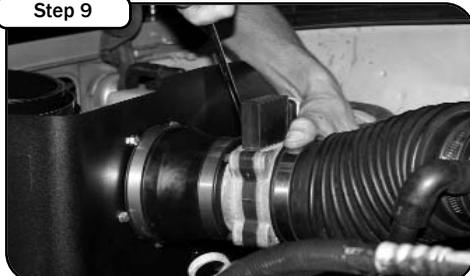

Step 9
 Place the supplied coupler and clamps on the air filter. Secure the MAF sensor and tighten all the clamps.



Step 10
 Slide the supplied grommet in the side of the housing. Install the Temp sensor.

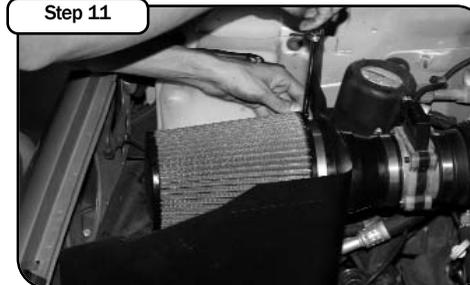

Step 11
 Install the pre-oiled air filter in the housing and secure with the supplied clamp. Do not use any grease or oil.



Step 12
 Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check inspection. Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).
 Filter Replacement: Magnum FLOW PN: 24-90015 (black w/blue media).