




P.O. Box 1719  
 Corona, CA 92879  
 Support: 877-512-8111  
 www.aFeFilters.com

# Intake Kit Installation Instructions: 03-07 Honda Element L4-2.4L Stage 1 Cx


<b>Kit Part #</b>	51 / 54-11291	<b>Tools Required</b>	<b>Part List:</b>
<b>Make:</b>	Honda	5/16 nut driver 10mm socket w/ Ratchet or wrench Phillips screwdriver	1 Air Filter P/N (24-33507 or Pro Dry S 21-33507)
<b>Model:</b>	<b>Year:</b>		1 Housing, powder coated wrinkle black
Element	2003-2006	<b>Engine:</b>	3 Screw, hex M6 x 1 x 16"
<i>Excludes 2007 models and up</i>			3 Washer, flat M6
			1 3/4" trim seal @ 38"L
			1 Rubber edge trim @ 3-1/2"L

## Step 1

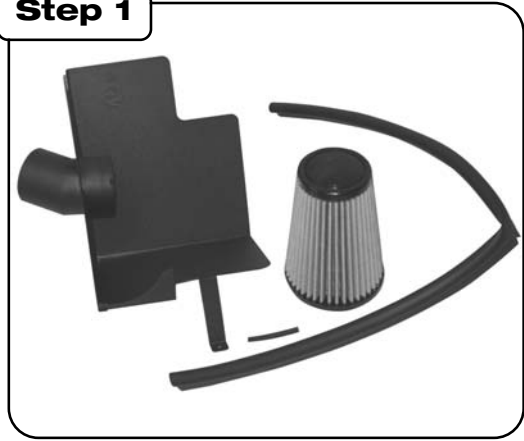

**Complete Kit**

## Step 2

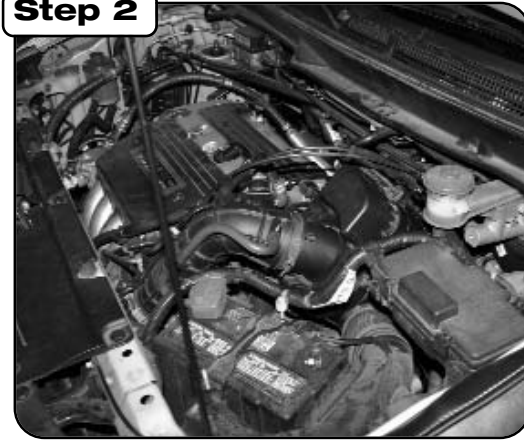


**Complete stock intake**

## Step 3



With phillips screwdriver, loosen OE intake tube clamp @ airbox and pull away.

## Step 4

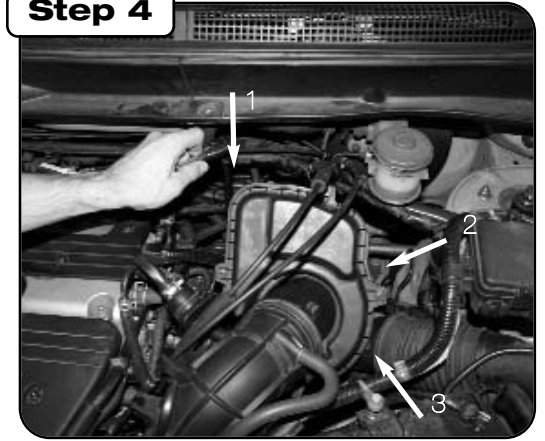


With 10mm socket and extension, loosen the 3 OE bolts holding in airbox. Carefully remove OE airbox out of vehicle.

## Step 5




Install new housing into vehicle. Place 3-1/2" rubber edge trim in groove above *Magnum Force* decal. Have both cable lines between groove in housing. Now install 3/4" trim seal to housing.

## Step 5

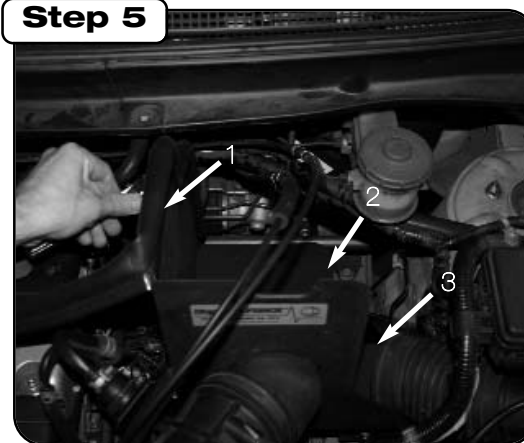

Tighten down housing using 3 M6 screws and washers provided with 10mm socket. Re-connect OE intake tube to new housing and tighten using phillips screwdriver.

## Step 6

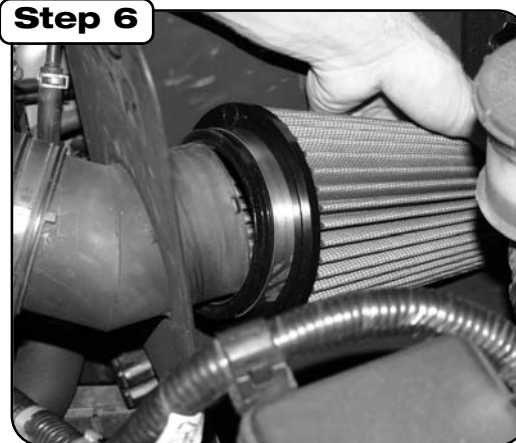

Install aFe air filter and tighten using 5/16" nut driver.

## Step 7



Your installation is now complete! Check all hoses, clamps and connections periodically. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" ( aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil ).  
 Filter Replacement P/N: 24-33507 ( black w/blue media ) Pro Dry S™ P/N: 21-33507 (black w/white media) Pro Dry S™ cleaning: see cleaning instruction sheet 06-00074