



Silver Bullet

Throttle Body Spacer

PN 46-32002


Important!

This kit includes the parts for several different installations; please verify the parts list and read all instruction steps before you begin installation.

Make: Chrysler/Dodge/Dodge Truck

Model	Year	Engine	Model	Year	Engine
300C	05-07	5.7L	Magnum	05-07	5.7L
300C R/T	05-07	5.7L	Magnum R/T	05-07	5.7L
300C SRT8	06-07	6.1L	Magnum SRT8	06-07	6.1L
Charger	06-07	5.7L	RAM 1500	03-08	5.7L
Charger R/T	06-07	5.7L	RAM 2500	03-08	5.7L
Charger SRT8	06-07	6.1L	RAM 3500	03-08	5.7L

1. Disconnect the Inlet Air Temperature (IAT) sensor. Loosen and remove air inlet tube from the throttle body. Unplug the Throttle Air Control (TAC) harness plug from throttle body. Loosen and remove four throttle body bolts. Remove throttle body. Leave factory-sealing o-ring in place if applicable.
2. **For 5.7L HEMI installation:** Install the aFe Silver Bullet throttle body spacer (AIR IN engraving side faces the throttle body), gasket and throttle body onto intake manifold. Using the washers and longer bolts (90mm bolts for RAM series Trucks, 80mm bolts for 5.7L HEMI cars) secure the throttle body to intake manifold. Tighten the bolts to 10 Nm (89 lb/in).
For 6.1L HEMI installation: Install a gasket, the aFe Silver Bullet throttle body spacer (AIR IN engraving side faces the throttle body), another gasket and throttle body onto intake manifold. Using the washers and 70mm long bolts secure the throttle body to intake manifold. Tighten the bolts to 10 Nm (89 lb/in).
3. Reconnect TAC harness. Reinstall the air inlet tube to throttle body. Reconnect the IAT sensor harness.

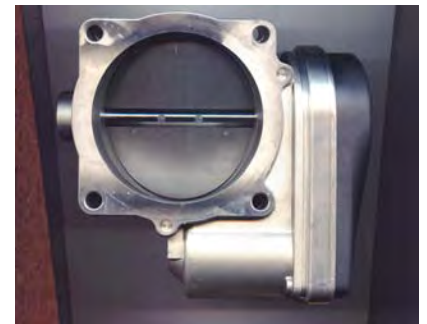

Parts List

- 1 aFe Silver Bullet Spacer
- 2 Gaskets
- 4 6mm x 90mm bolts
- 4 6mm x 80mm bolts
- 4 6mm x 70mm bolts
- 4 6mm lock washers

advanced FLOW engineering
 252 Granite Street, Corona, CA 92879
 Support: 951-493-7100
 www.aFePower.com

advanced FLOW engineering
252 Granite Street, Corona, CA 92879
Support: 951-493-7100
www.aFePower.com