



# Installation

**Kit P/N:**  
TR-5302P

**Make:**  
Ford

**Model:**    **Year:**    **Engine:**  
Fusion    '06-'09    V6-3.0L

## Parts Identification:

- 1 Air filter ( *Pro Dry 5™* TF-9010D)
- 1 Intake tube, 05-T5302P
- 1 Coupling, straight 05-00417
- 2 Clamp #044
- 1 Isolation mount M8
- 1 5/8" Hose @ 13.5"L
- 1 Flat washer M8
- 1 Nut M8
- 2 Screw M4 x .7 x 8
- 1 Grommet
- 1 Fitting, elbow 1/2"
- 1 Cap, plastic
- 1 1/2" Hose @ 9"L
- 2 Mini clamps, #006

## Tools Required:

- 10mm socket or wrench
- 13mm socket or wrench
- Ratchet w/ extension
- Phillips screw driver
- Flat head screw driver
- 5/16" nut driver

*Note: Read instructions before installation and have tools ready.*

1



2



Complete Stock intake. *Please disconnect battery terminals before installation.*

3




With 5/16" nut driver loosen clamp on throttle body. Disconnect MAF sensor harness.

4



Remove crank case line. If vehicle is equipped with an EVAP vent line, disconnect the rubber line from the metal EVAP line.

5

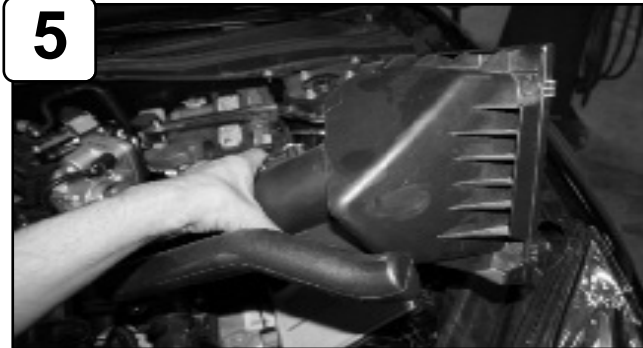

Remove upper half of air box and stock tube assembly.

6



Carefully remove stock air box assembly out of vehicle.

7



Remove plastic cover.

8



Remove MAF sensor using phillips screwdriver.

9



With provided M4 screws, install MAF sensor to new intake tube.



## Accessories



Replacement Filter P/N:  
TF-9010D




Pre Filter P/N:  
TP-7011B

Note: Filter Cleaning: When cleaning your **Pro Dry 5™** filter, be sure to use only "Restore Kit" (Takeda P/N: TP-7015C **Pro Dry 5™** cleaner only.)

**Pro Dry 5™** cleaning:  
see cleaning instruction sheet TF-9000I.

For replacement part(s) or "Restore Kit" please  
log on to [takedausa.com](http://takedausa.com)  
P.O. Box 1719 Corona CA, 92878

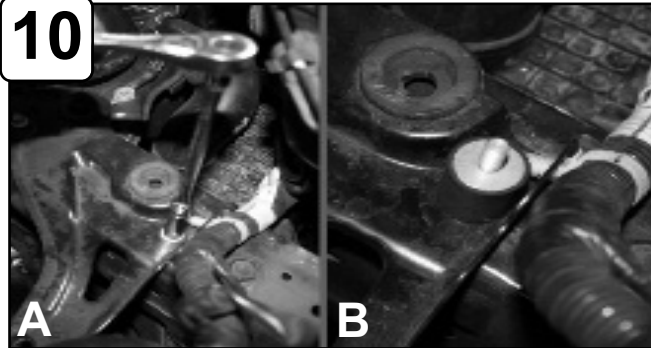

10 A) Loosen bolt next to grommet with 10mm socket or wrench. B) Replace using provided M8 isolation mount.



11 Attach air filter and tighten using 5/16" nut driver.




12 Attach coupling to throttle body using provided clamps. Do not tighten.



13 Install intake assembly and position tab to isolation mount. Do not tighten.




14 Using provided flat washer and nut, secure tab using 13mm socket or wrench.

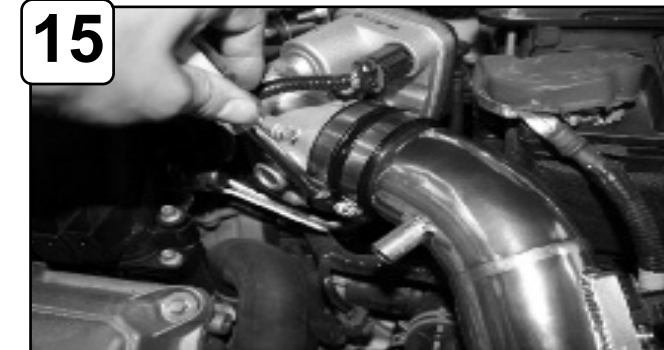

15 Tighten all clamps using 5/16" nut driver.



16 Re-connect MAF sensor harness.

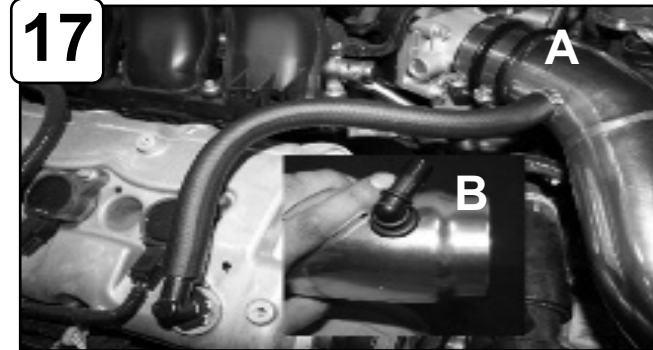

17 A) Reinstall crank case line using the provided 5/8" hose. B) If vehicle is equipped with EVAP vent line, use the provided 1/2" fitting and hose and secure using the provided mini clamps. If not applicable, please use provided cap and grommet to close off the hole.



18 The installation of your Takeda performance intake is now complete. Please check all components and re-tighten if necessary. Thank you for choosing Takeda!