



Tools needed 11mm deep socket and flat head screw driver to remove punch pins.




Remove the four pins to remove the plastic cover.



Remove the plastic screws to remove the carpet cover.



These are the pieces that should be removed.

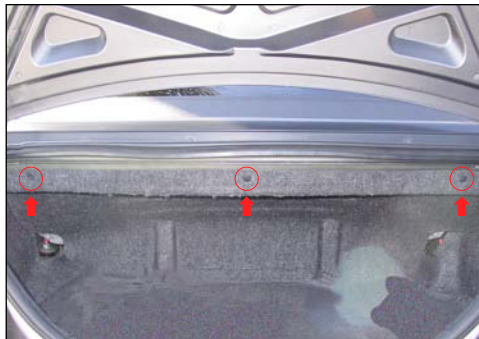


Remove the three plastic push pins that hold the top carpet shroud.



This is the shroud out of the car.



Remove the side carpet pieces to reach the 11mm nuts.

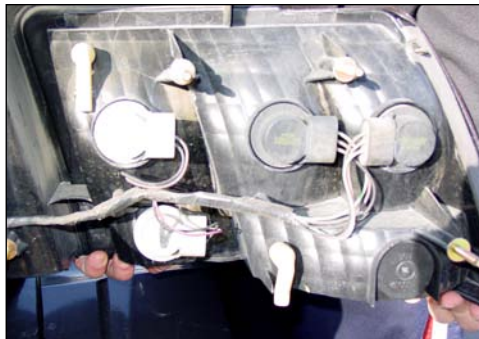

Pull the taillight housing straight out, twist and pull the plugs as if you were changing the bulbs.



Remove the bulbs from the socket leaving the reverse bulb intact for you will need it for the new L.E.D taillights.



Place the resistor boxes behind the bumper and out of the way of the taillight housing.



Plug the pigtails into the stock harness making sure the wires line up black to black. Be sure to secure the reverse bulb in tact.



Reinstall the taillights making sure all functions are working properly.

Technical Support :
1 - (888) - 360 - 3696
techsupport@anzousa.com