



Description: Tailgate Spoiler with LED  
Part Number: 861125  
Application: 07.5-13 Silverado and Sierra

Note: If your vehicle did not come equipped with a spoiler you will need to purchase the following hardware from your local GM dealership.

Qty 4 - PART # 11518684 Nut  
Qty 4 - PART # 15151978 Bolt



Tools Needed  
3/8 ratchet  
#30 Torx bit

Remove the 4 torx bolts holding the front of the spoiler to the tailgate. Retain your bolts as they will be re-used.

Once you have removed the 4 torx bolts you can now remove the stock spoiler. You do this by twisting the spoiler up and towards the bed of the truck as there is 3m tape attaching it to the back of tailgate. After you have removed the stock spoiler you may need to clean off the 3m tape left behind.



To install your new tailgate spoiler you will need to run the wires through the tailgate. The wires go through the last hole on the tailgate on the passenger side.

The wires will come out through bottom passenger side of the tailgate.



Now that the wires are ran through the tailgate you can peel off the paper strip across the back of the tailgate bar. This 3m tape is to secure the back of the spoiler like factory.



The external white wire that you routed down through the tailgate with the trailer connector gets spliced into the positive reverse wire. On your taillight.



Once you have the new spoiler mounted you can plug the 4 prong connector into the trailer hook up. If you do not have a 4 prong connector you can purchase an adapter at your local auto parts store.

Last thing to do is to test all the functions.

**Also available from**



**UNIVERSAL  
DUAL 4 WIRE FLAT ADAPTER**




**851009**

**Dual 4 Wire Flat Adapter**

- **Simple plug and play**
- **Plugs into any vehicle side 4 wire flat**

**UNIVERSAL  
7 PIN UNIVERSAL TRAILER ADAPTER**

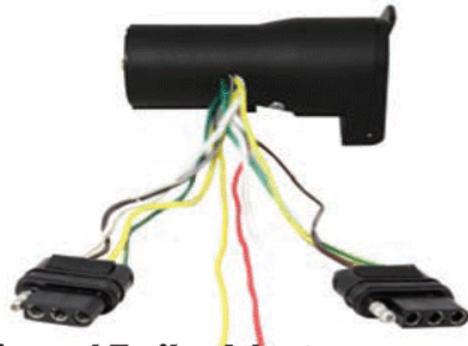

**851010**

**7 Pin Universal Trailer Adapter**

- **Plugs into most 7 pin trailer outlets**
- **Two 4 wire flat connectors**
- **12v + and reverse leads for auxiliary lighting**
- **Color coded wiring to match most trailer application**

*AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.*