



Installation Instructions
Part Number 200-512-1
Poweraid Spacer For 99-03
GM Trucks and SUVs W/
4.8L, 5.3L & 6.0L Engines
04 Pontiac GTO W/ 5.7L



Parts List

#1	Poweraid Spacer	x1
#2	6mmx45mm Bolts	x3
#3	6mm Flat Washers	x3
#4	Fiber Gasket	x1
#5	1/2" Extension Plate	x3
#6	6mm Flat Head Screw	x3


Tools Required For Installation

5/16", 4mm, & 10mm Sockets
 5/32" Allen Wrench
 Ratchet and Extension

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.




1. Disconnect the negative battery cable!
 Loosen one bolt and remove the beauty cover. Pry the tube from the clamp on the radiator hose. Loosen the hose clamps on each end of the intake tube and remove the tube.

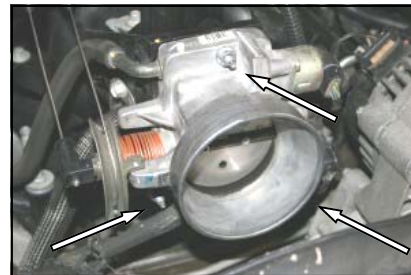

2. With a 10mm socket, remove the three nuts that hold the throttle body to the intake manifold.




3. With a 4mm socket, remove the three studs that hold the throttle body to the intake manifold. No need to remove the throttle body, leave it hang where it is.

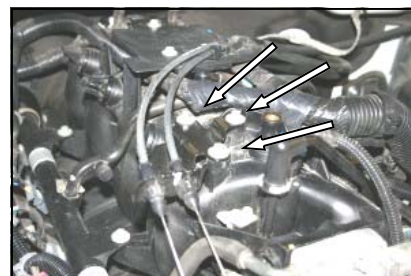

4. With a 5/16" socket, remove and save 3 bolts that hold the throttle cable bracket to the intake manifold.



5. Install three 1/2" extension plates (#3) using the provided flat head countersunk bolts(#4). Point the long end towards the radiator, and snug them down.

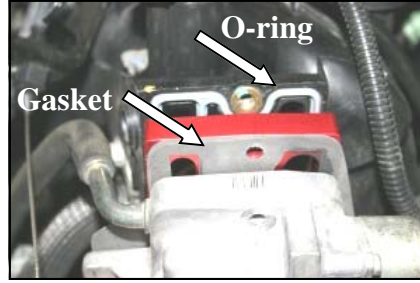

6. Place one fiber gasket (#4) between the Poweraid spacer (#1) and the throttle body. Make sure the flat face of the Poweraid spacer is against the throttle body with the bore extending into the intake manifold. **Use caution to retain the factory o-ring gasket on the intake manifold.**



7. Install the top bolt (#2) and washer (#3) first, run it in a few threads with your fingers, leave it loose, and then align the two bottom holes and install the bolts and washers. Use caution not to cross thread the bolts. **Do Not Over Tighten The Bolts!**



8. Re-install the throttle cable bracket and the 3 factory bolts removed in step 4. Some minor adjustments to the extension plates may be necessary to get all three bolts to be aligned in position.

9. Inspect & test the throttle linkage for full open and closed travel before driving. Some cruise and kickdown cables may require adjustment. Please refer to vehicles service manual for proper adjustment.



10. Re-install the intake tube and tighten the hose clamps. Re-install the plastic holder from step #1. Re-install the beauty cover and bolt.



The sound of power...The "whistle" means its working!

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Instructions Revision
02/22/06

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com