




## Installation Instructions

Part Number: 201-719 Jr. Kit

2005-06 GM Full Size Trucks & SUVs

2007 "Classic" Full Size Trucks

W/4.8L,5.3L,6.0L Engines W/ Electric Cooling Fans

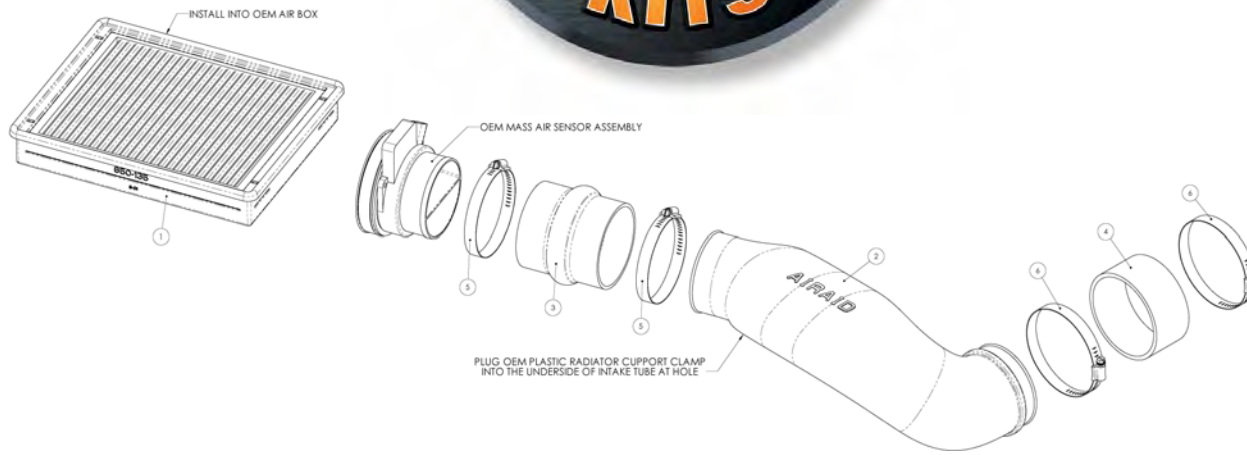

### Packing List:

#1	851-135	Airaid Premium Filter	1
#2	KIT919T	Modular Intake Tube	1
#3	KITHUMPS02	Urethane Hump Hose	1
#4	KITCOUPLER10	Urethane Coupler	1
	KIT919HP	Hardware & Instructions	1
#5	KITHS60	#60 Hose Clamp	2
#6	KITHS64	#64 Hose Clamp	2

\* Filter included only in 200-719 kit

### Tools Required For Installation:

5/16" Socket  
Ratchet & Extension  
Flat Screwdriver  
#25 Torx Bit



1. **Disconnect negative battery cable.**  
With a 5/16" socket, remove one bolt on the top of the beauty cover. Set the bolt and the cover aside for re-installation later.



2. Loosen the hose clamps on both ends of the factory intake tube.



3. With a screwdriver, pry the factory tube away from the plastic tab on the radiator hose clamp, and remove the tube.



4. Install the hump hose (#3) and two #60 hose clamps (#5) on the Mass Air Flow sensor as shown. Leave the clamps loose for now.



5. Install the coupler (#4) and two #64 hose clamps (#6) on the throttle body as shown. Leave the hose clamps loose for now.



6. Install the Modular Intake Tube (#2) into the hump hose first, and then into the throttle body. Adjust for fit, and tighten all four hose clamps. Re-insert the plastic piece from step #3 into the hole on the bottom of the MIT.



7. Re-install the beauty cover and bolt. If you purchased the 200-919 MIT Kit, skip to step #10. If you purchased the 200-719 Jr. Kit, proceed to step #8.



8. If you purchased the 201-719 Jr. Kit, remove 4 screws in the factory airbox with a #25 Torx bit, and remove the factory air filter.



9. Install the Airaid Premium filter into the factory airbox, and re-install the 4 screws.

**10. Double check your work!**

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight.

**11. Re-connect the negative battery cable!**

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY!

*Before!*



*After!*



**SynthaMax**®

**Do Not Oil**

Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

Instructions Revision  
Date: 10/26/10