



**Installation Instructions**  
**Part Number 250-634**  
**2010-15 Chevrolet Camaro**  
**6.2L V-8**



**Parts List**

#1	Poweraid Spacer	x1
#2	6mmx50mm Bolt	x4
#3	6mm Flat Washer	x4
#4	Fiber Gasket	x1

**Tools Required For Installation**

5/16", 10mm Socket  
Ratchet and Extension

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.



**1. Disconnect the negative battery cable!**


Remove the oil fill cap and set it aside.  
Lift straight up on the engine beauty cover and set it aside.  
Reinstall the oil fill cap after the beauty cover has been removed to prevent any foreign material from entering the crankcase.



**2.** Disconnect the breather hose elbow by pulling it straight away from the intake tube. It is only held in place by an O-ring. Loosen the two hose clamps that secure the intake tube to the throttlebody, and the air box lid.  
Remove the air intake tube.



3. Remove the four bolts that secure the throttlebody to the intake manifold.

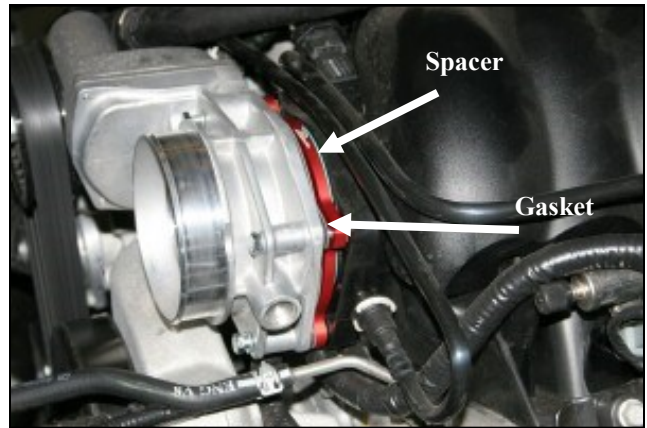

4. Install the Poweraid Spacer between the throttlebody and the intake manifold with the supplied gasket next to the throttlebody as shown. Make sure the "flow" arrow that is printed on the spacer is pointing towards the intake manifold.



5. Install the provided bolts and washers thru the throttlebody, gasket, and Poweraid Spacer and tighten to the manufacturer's specifications.



6. Reinstall the intake tube, tighten the two hose clamps, and reconnect the crankcase breather tube. Reinstall the beauty cover, and oil cap in the reverse order that they were removed. **Re-connect the negative battery cable!**



***The sound of power...The "whistle" means its working!***

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Instructions Revision 11.18.14

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com