

AIR RAID®

INTAKE SYSTEMS

#300-143 INSTALLATION INSTRUCTIONS

04-07 DODGE DURANGO 4.7L/5.7L HEMI

2007 CHRYSLER ASPEN 4.7L/5.7L HEMI

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ 800-498-6951 8:00 AM – 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid.

THANK YOU FOR SELECTING AIRAID.



Packing List:

700-450	Airaid Premium Filter	1
KIT143A	Air Filter Adapter	1
KIT143MAFC	Steel Panel	1
KIT143FFC	Steel Panel	1
KITELBOW03	Nylon Fitting	1
KITWSTRIP02	Weather Strip 17"	1
KIT143HP	Hardware & Instructions	1
- KITSNP24GHS	Speed clamp	2
- KIT109H18	Hose	1
- KITHOSE05	Hose	1
- KIT15DHC3050	1/4-20 Button Head Screw	2

Packing List Continued:

- KIT09FWZ019	1/4" Flat Washer	2
- KIT6C31MXPPZ	6-32 x 5/16" Phillips Screw	4
- KIT6CNKEPZ	6-32 Keps Nut	4
- KIT6NWSAPZ	#6 Flat Washer	4

Tools Required for this Installation:


Flat Blade Screwdriver
13mm Socket and Ratchet



Installation Instructions. Read Me!



1. Disconnect negative battery cable. Disconnect the factory breather hose and remove from the vehicle. (*Note: 4.7L engines require the removal of the breather hose end section only. 5.7L Hemi required removal of entire hose assembly.*)

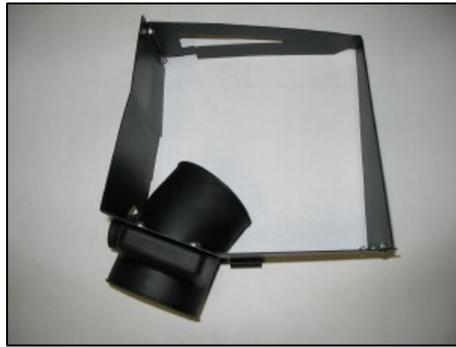

4. Using the supplied #6 screws, nuts and washers, assemble the two panels as shown above. Next, install the supplied sir filter adapter using the supplied 1/4-20 bolts and washers.



7. *4.7L engines only.* Using supplied pre-formed 3/4" hose, connect the nylon fitting to the remaining plastic factory hose as shown. Fasten both ends of the hose using the supplied nylon speed clamps. Adjust the fitting downward to clear the factory intake tube assembly.




2. Loosen hose clamp on air box lid and remove lid from air box base.



5. Install the supplied nylon fitting into the air filter adaptor as shown.



8. *5.7 Hemi engines only.* Using the supplied straight 3/4" hose, connect both ends to the nylon fitting and oil fill nipple as shown. Fasten both ends using the supplied nylon speed clamps. Adjust the nylon fitting downward to clear the factory intake tube assembly.

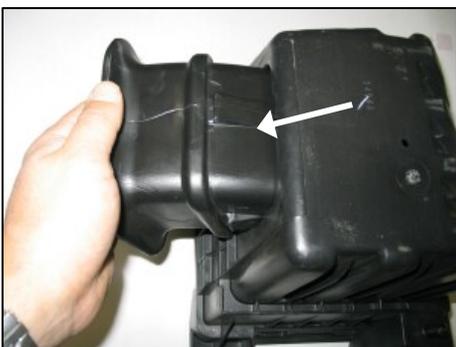

3. Using a 13mm socket, remove air box base from engine compartment. Using a flat blade screwdriver, carefully unsnap the box inlet from the base and remove it. Reinstall the factory base in the engine compartment with out the inlet.



6. Install the Airaid Cool Air Dam assembly on top of the factory air filter base. Tighten hose clamp.





9. Install the Airaid Premium Filter on the end of the air filter adaptor. Install the supplied weather strip on the Cool Air Dam. (*Note: start from one end and work your way around to insure proper alignment of weather strip.*)

- 10. Double check your work to be certain that all nuts, bolts, and clamps are securely fastened.
- 11. Reconnect the negative battery cable.

Before



After!



Don't Forget Your AIRAID Filter Tune-Up Kit!



P/N 790-550

Instructions Revision
Date: 09/19/06