



## **INSTALLATION INSTRUCTIONS #300-928 MODULAR INTAKE TUBE OR**

### **#300-728 AIRAID JR. KIT**

## **03-04 DODGE DIESEL 5.9L MODULAR INTAKE TUBE**

Thank you for purchasing the Airaid Modular Intake Tube. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ 800-498-6951 8:00 AM – 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Modular Intake Tube was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid.

***THANK YOU FOR SELECTING AIRAID.***



### **Packing List:**

KIT928T	Modular Intake Tube	1
---------	---------------------	---

### **Tools Required for this Installation:**

Flat Head Screwdriver
7mm Socket



# Installation Instructions. Read Me!

## I DISCONNECT NEGATIVE (-) BATTERY CABLE

## II Remove Factory Intake Assembly

- Remove the electrical connector by using a flat head screwdriver to carefully push the retaining clip away from the intake sensor. See Fig#1
- Loosen the hose clamp on the bottom of the factory intake tube that connects to the turbo housing. See Fig#2
- Unclip the factory air box lid and remove entire filter/intake assembly from vehicle. Refer to Fig#3
- Loosen hose clamps on the factory intake assembly above and below the factory silencer tube. Refer to Fig#3

## III Install Airaid Modular Intake Tube

- Replace the factory silencer tube in the removed intake assembly with the Airaid MIT using the stock hose clamps. See Fig#3 (Note: on each side of the MIT tube are notches that must be aligned with the notches on the stock connector tubes. Also, the flow arrow must point down toward the turbo housing). See Fig#4
- Install complete intake assembly onto turbo charger using the stock hose clamps.
- Replace the air filter box lid and re-clamp.
- Re-connect intake sensor to the harness on the air filter box lid.

## IV Airaid Jr. P/N 300-724 Replacement Filter

- If you purchased the Airaid Jr. kit P/N 300-724, replace the factory air filter with the Airaid Premium Filter included in the Airaid Jr. kit.


## IV Finishing Up

- Inspect overall work and be sure all clamps are securely fastened.
- Check hood clearance.
- Ensure that no foreign objects are in the intake path!
- Re-connect negative battery cable.



*Airaid Cool Air Dam P/N 300-128 is also available for this application. Please contact your local dealer for details.*

Fig#1

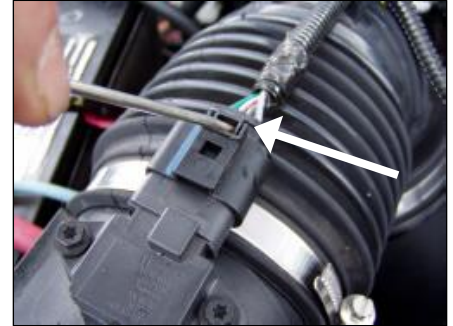

Fig#2



Fig#3



Fig#4

