




INTAKE SYSTEMS

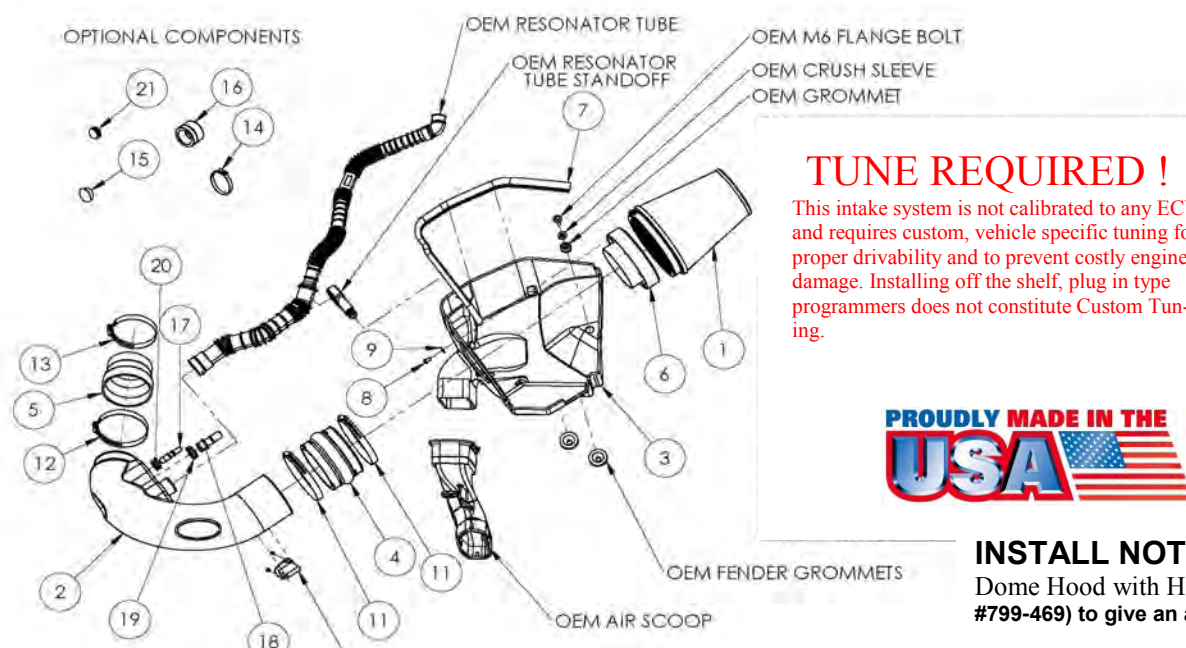

Installation Instructions Part Number 450-303 2011-14 Ford Mustang GT 5.0L V-8 Race Only

Packing List:

#1	700-461	Airaid Premium Filter	1
#2	KIT264T	Intake Tube	1
#3	KIT264CAB	Cool Air Box	1
#4	KITHUMPHS05	Urethane Hump Hose	1
#5	KITRDCR18	Silicone Reducing Coupler	1
#6	KIT1121MAFADA	Filter Adapter	1
#7	KITWSTRIP03	Weather Strip 25"	1
KIT303HP Hardware and Instructions			
#8	KIT15DHC3050	1/4-20 x 1/2" Button Head Cap Screw	x3
#9	KIT09FWZ019	1/4" Flat Washer	x3
#10	KIT15BHC3038	8-32 x 3/8" Button Head Cap Screw	x2
#11	KITHS72	#72 Hose Clamp	x2
#12	KITHS64	#64 Hose Clamp	x1
13	KITHS56	#56 Hose Clamp	x1
14	KITCLAMP60SS	40-60mm Hose Clamp	x1
15	KITPLUG01	Firewall Plug	x1
16	KITCAP02	Urethane Cap	x1
17	KITFITTING05	PCV Connector Fitting	x1
18	KITFITTING15	PCV FITTING	x1
19	KITGRMT10	GROMMET	x1
20	KITGRMT03	GROMMET	x1
21	KITGRMT17	Grommet Plug	x1
22	KITBIT01	#20 Torx Driver	x1

INSTALL NOTE: If you are installing this kit on a vehicle equipped with a Power Dome Hood with Heat Extractors we suggest the use of our optional AIRAID pre-filter (Part #799-469) to give an added layer of protection from the elements.




Disconnect The Negative Battery Terminal!

1. Remove the strut tower brace, if so equipped. Remove the Engine cover by simply lifting up, and set aside.



2. A) Loosen the hose clamps on the factory intake tube B) Squeeze the clamp and disconnect the resonator from the air intake tube. C) Carefully depress the hose lock tabs, and disconnect the crank case breather line and the brake aspirator line (if equipped, AT models only). D) Remove the factory intake tube.

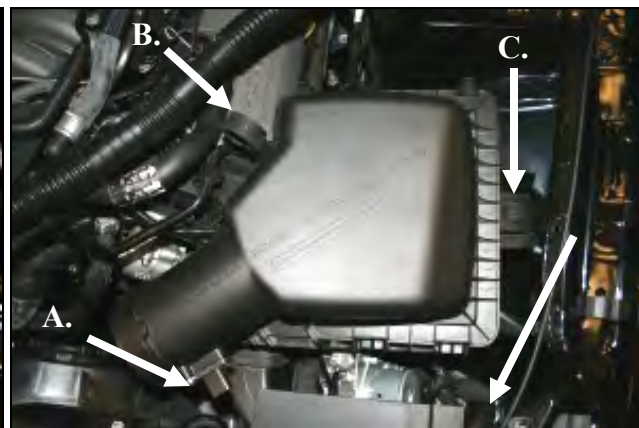

3. A) Slide the red tab, and disconnect the wiring harness from the Mass Air Flow sensor (MAF). Carefully pry the harness anchor from the air box using a screwdriver. B) Separate the resonator tube from the stand off attached to the Air box lid. C) Using a 10mm socket, remove the bolt securing the air box to the inner fender and remove the air box assembly. This bolt will be reused in step 9.



4. Install the Grommets and Fittings into the Airaid intake tube (#2). A) All models will require the use of the 5/8" Fitting (#17) and the 5/8" Grommet (#19). B) Automatic transmission equipped vehicles will also use the 3/8" Fitting (#17) and 3/8" Grommet (#20). Manual transmission vehicles will not need the 3/8" components and will use the Blind Grommet (#21).




5. Using the supplied Torx driver, remove the MAF sensor from the factory airbox and install the MAF sensor into the intake tube using two provided 8-32x3/8" screws (#10).

Do Not Use The Factory Screws!




6. Install the filter adapter (#6) using three 1/4-20 button head bolts (#8), and flat washers (#9) into the Airaid Cool Air Box (CAB) (#3) as shown.

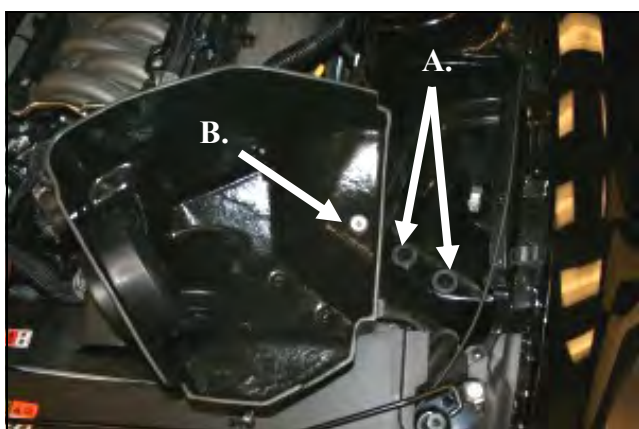

7. Transfer the factory air box mounting grommets. A) Locate and remove the Two Lower air box mounting grommets, and install them in the inner fender. B) Remove the Upper air box mounting grommet and steel sleeve, and re-install into the Airaid CAB.



8. Install the hump hose (#4) onto the filter adapter using two #72 hose clamps (#11) as shown. Leave the two hose clamps loose for now. Transfer the resonator stand off from the factory air box into the CAB.

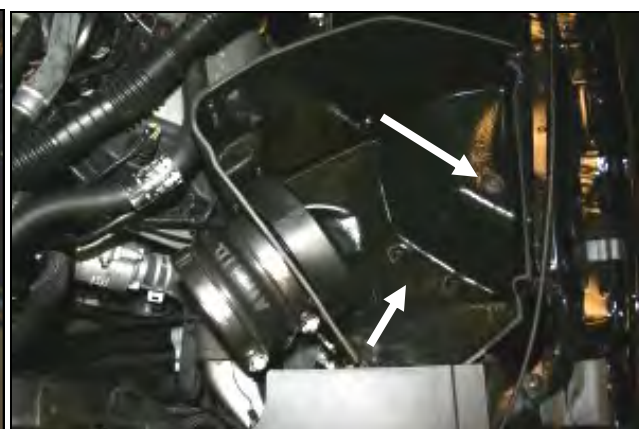


9. Install the CAB into the vehicle. Make sure that the Air inlet of the CAB aligns with the factory duct, and the two locating pins on the bottom align with the factory grommets. Next reinstall the factory bolt that was removed in step #3 thru the steel sleeve and grommet and into the inner fender.



10. Install the Silicone Reducer (#5) and Hose clamps onto the throttle body. Place the #56 clamp (#13) on the Throttle body side of the reducer, and the #64 clamp (#12) on to the tube side.



11. Install the Airaid Intake Tube into the couplers as shown, and tighten all Hose clamps. **A)** Reconnect the Resonator tube to the Airaid Intake using the OEM clamp. **B)** Reconnect the breather line/lines to the Aluminum Fittings depending on your application.

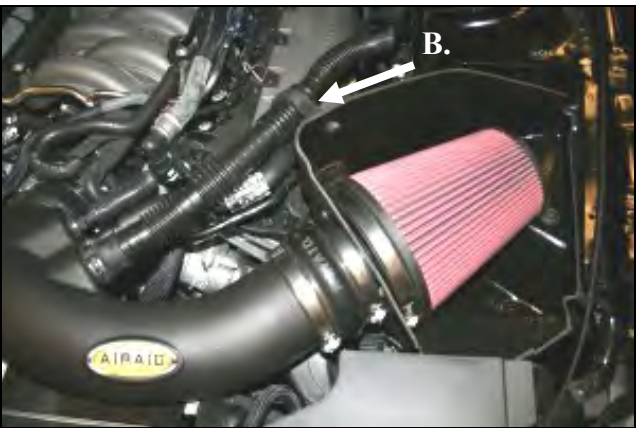

12. **A)** Install the Airaid Premium Filter (#1) onto the filter adapter and tighten the hose clamp. **B)** re install the Resonator tubing into the factory Stand off.



13. Reconnect the Mass Air Flow sensor, which is now located in the lower back side of the intake. Slide the locking tab back into the connector.



14. Install the Weather Strip (#7) onto the CAB with the contoured edge going away from the filter. Start at the front of the vehicle and work your way back. Replace the engine cover.

15. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight. Double check the hood clearance!

Reconnect the negative battery cable!


Optional Installation Notice!

Airaid has made it possible to eliminate the factory induction roar resonator if you so desire. The removal of the resonator from the intake has no negative effect on the performance of this kit.

Remove the entire Resonator tube assembly and all associated stand offs from the intake tube to the Fire wall.

A.) Install the Urethane cap (#16) with the 60mm Hose Clamp (#14) onto the Airaid Intake tube.

B.) Snap the Firewall plug (#15) into the firewall hole.

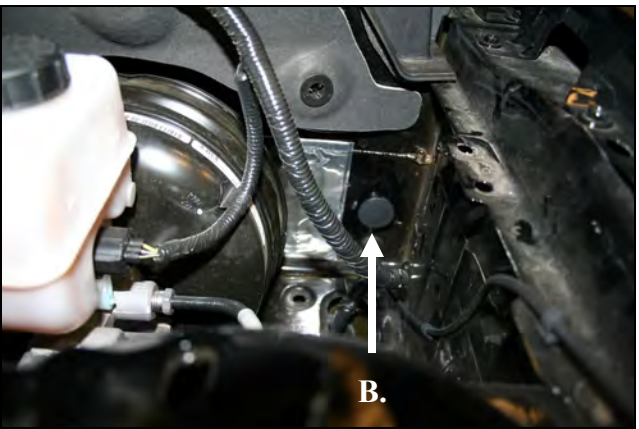

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. **WATER INGESTION IS THE DRIVERS RESPONSIBILITY!** The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

Full color instructions can be viewed on our web site at [Airaid.com](http://www.airaid.com). Use the **Product Search** function to find your part number, and click **View Details** or go to <http://www.airaid.com/InstallationPDF/450-303.pdf>

Before!



After!



Don't Forget Your AIRAID Filter Tune-Up Kit!

**P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray**



Instructions Revision
Date: 03.01.13