



200-555 INSTALLATION INSTRUCTIONS 03-04 Chevrolet TrailBlazer LT/GMC Envoy 5.3L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



Parts List

- (1) Power Plate
- (1) Gasket
- (3) 6mm x 55mm Bolts
- (3) 6mm Flat Washers
- (1) Extension Plate
- (1) 6mm x 16mm Flat Head Screw

Tools List

- 10mm Deep
- E5 Female Torx Socket
- 5/16" Nutdriver
- 8mm Socket
- Standard Screwdriver


Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake assembly.
3. Remove (3) nuts and studs from the throttle body.
4. Install power plate using (3) 6mm x 55mm bolts and (3) 6mm flat washers. **(Ref. "B")**
 - * **Please Note: Place gasket between throttle body and the power plate.**
5. Install extension plate using (1) 6mm x 16mm flat head screw. **(Ref. "C")**
6. Reinstall throttle body air intake assembly using **Step 2** as an example.
7. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Included with your Poweraid Spacer is a sticker with a **California Air Resources Board (C.A.R.B.) Executive Order (EO)** number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

Ref. C- (1) Extension Plate
(1) 6mm x 16mm Flat Head Screw

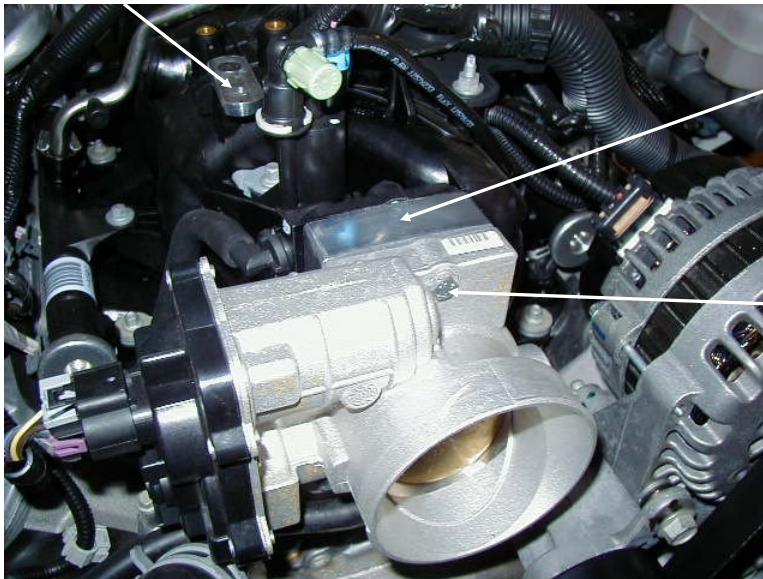

Ref. A- (1) Power Plate
(1) Gasket

Ref. B- (3) 6mm x 55mm Bolts
(3) 6mm Flat Washers

Instructions Revision
12.07.15