



200-557 INSTALLATION INSTRUCTIONS 2001-04 Chevy/GMC Duramax Diesel 6.6L

*** Please Note: 2004 Duramax: VIN Eighth Digit '1', fits LB7 engine only**

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.

**THROTTLE BODY SPACERS FOR VEHICLES LISTED ARE
50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON
EACH PART FOR A SPECIFIC VEHICLE.**



* Also for your Chevrolet Duramax Diesel- The Airaid Intake System.
Call for details!

Parts List		
AIR-KIT557PA	Aluminum Plate	(1)

Tools List
7/16 Socket Ratchet

Installation Instructions. Read Me!

*** Please Note: 2004 Duramax: VIN Eighth Digit '1', fits LB7 engine only**


1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Loosen hose clamps and slide off hose onto intake manifold and formed intake tube.
* Note: use 7/16 socket to remove hose clamps. (Ref. B & C)
3. Remove hose and install power plate (Ref. A) using illustration (Ref. D) for air direction.
* Note: Use a small amount of grease inside hose to install power plate. The edge of the air "IN" of the power plate should be approximately 1" from end of hose.
4. Reinstall the hose power plate assembly and slide clamps to location. (Reverse of Step 2)
5. Before tightening hose clamps, be sure that power plate has engaged both intake manifold and formed intake tube.

The sound of power...The "whistle" means its working!

Ref. "A"- Power Plate



Ref. "D"-

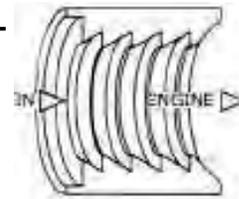

Ref. "C"- Hose Clamp Assembly

Ref. "B"- Formed Intake Tube

AIR-I20557C
Rev. 5.4.18