



**Installation Instructions
Part Number 400-602
Airaid Spacer For 05-07
Ford 6.0L Powerstroke Diesel**

Thank you for purchasing the Airaid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your Airaid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.



**THROTTLE BODY SPACERS FOR VEHICLES LISTED ARE
50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON
EACH PART FOR A SPECIFIC VEHICLE.**


Parts List

AIR-KIT602PA Aluminum Plate (1)

Tools Needed

5/16" socket and wrench

1. **Disconnect the negative battery cable!**
2. Loosen clamp at intake manifold leaving clamp on plastic tube.
3. Slide the plastic tube back and insert spacer into tube.
4. Reinstall the plastic tube making sure the spacer is engaged in manifold while locating and tightening the hose clamp.
5. When installing the spacer in the intake manifold, face the spacer using the illustration below.
6. Before tightening the intake manifold clamp, be sure that the spacer has engaged both the intake manifold and plastic intake tube. ****The outside diameters of the spacer will fit the inside diameters of the intake manifold and the plastic intake tube.**
7. Reconnect negative battery cable. Enjoy!

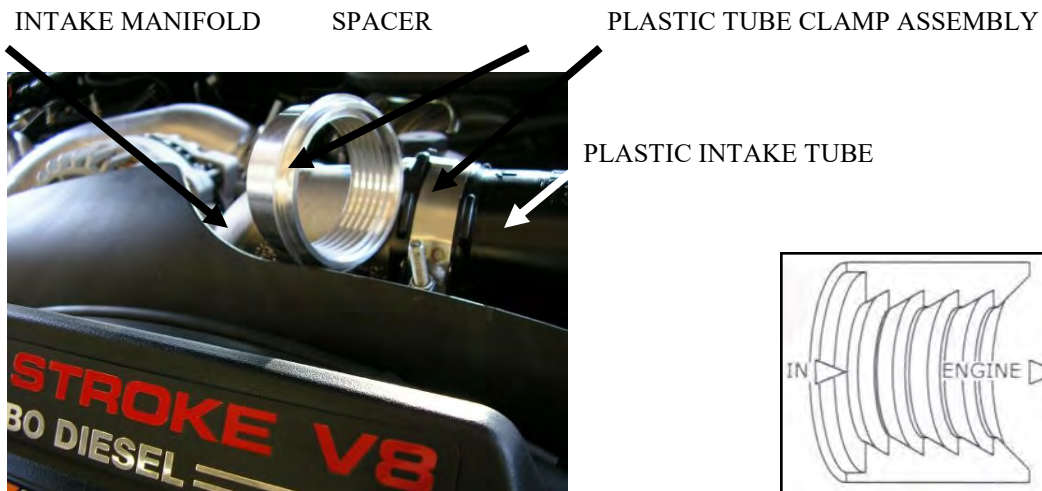

The sound of power...The "whistle" means its working!

Contact your nearest AIRAID dealer for an AIRAID Intake System for your car, truck or SUV.

AIR-I40602B
Rev. 10.27.20