



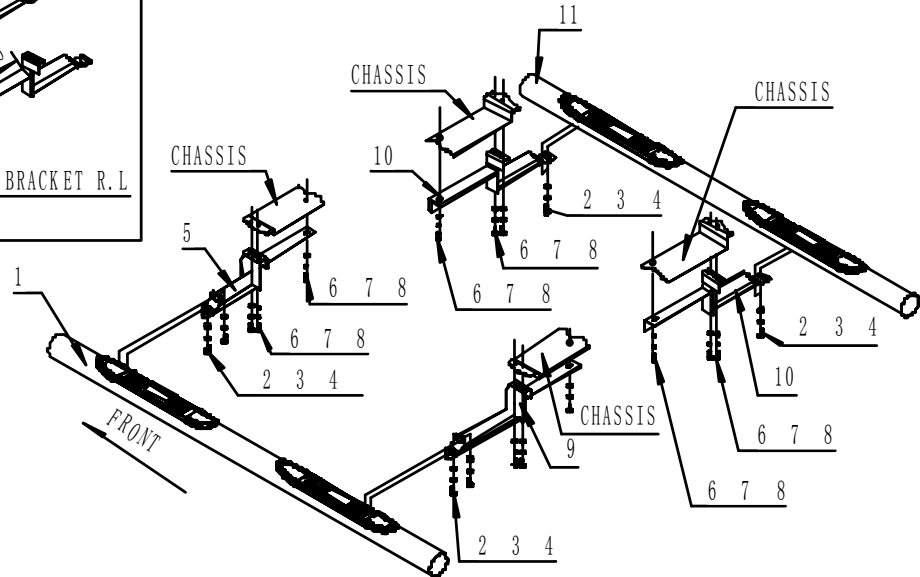

INSTALLATION INSTRUCTION  
SIDE BAR PART NO:206002  
(CRV3 " 02-06)

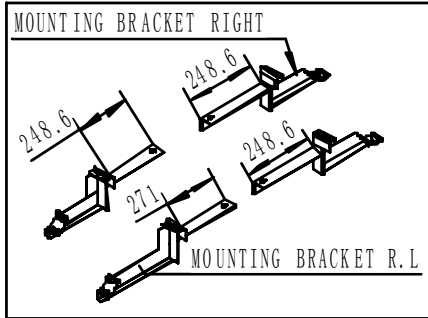

1. PLEASE PROTECT YOUR PRODUCT FROM BEING SCRATCHED DURING THE PROCESS OF INSTALLING THE SIDE BAR
2. FIRST, FIND HOLES FOR INSTALLATION . BE ATTENTION TO DISTINGUISH LEFT AND RIGHT MOUNTS, THEN INSTALATE THEM (DO NOT SCREW THE BOLTS TIGHTLY) , AFTER THAT COMES TO THE SIDE BAR. PUT IT IN PLACE. IN THE END, SCREW ALL THE BOLTS TIGHTLY.

| NO. | NAME                   | QTY | REMARKS  |
|-----|------------------------|-----|----------|
| 1   | LEFT SIDE BAR          | 1   |          |
| 2   | HEX BOLT               | 8   | M10*20   |
| 3   | SPRING WASHER          | 8   | $\phi 8$ |
| 4   | FLAT WASHER            | 8   | $\phi 8$ |
| 5   | MOUNTING BRACKET F. L  | 1   |          |
| 6   | HEX BOLT               | 12  | M8*20    |
| 7   | SPRING WASHER          | 12  | $\phi 8$ |
| 8   | FLAT WASHER            | 12  | $\phi 8$ |
| 9   | MOUNTING BRACKET R. L  | 1   |          |
| 10  | MOUNTING BRACKET RIGHT | 2   |          |
| 11  | RIGHT SIDE BAR         | 1   |          |