



## **INSTALLATION INSTRUCTIONS**


**3" SIDEBAR WITH BEND**

**03-08 NISSAN MURANO**

**PART #209005-2/209005**

**PARTS LIST:**

1	Driver/Left Sidebar	4	1/2" x 1 1/2" OD x 1/8" Flat Washers
1	Passenger/Right Sidebar	2	12-1.75mm x 50mm Hex Bolts
1	Driver/Left Front Mounting Bracket	2	12mm Lock Washers
1	Passenger/Right Front Mounting Bracket	4	12mm x 24mm OD x 2.5mm Flat Washers
1	Driver/Left Front Support Bracket	2	12mm Hex Nuts
1	Passenger/Right Front Support Bracket	4	10-1.25mm x 60mm Hex Bolts ( <b>fine thread</b> )
1	Driver/Left Rear Mounting Bracket	4	10mm Lock Washers
1	Passenger/Right Rear Mounting Bracket	4	10mm x 24mm OD x 2.2mm Flat Washers
4	1/2" x 2" Hex Bolts	2	8-1.25mm x 60mm Hex Bolts
4	1/2" Lock Washers	2	8mm Lock Washers
		2	8mm x 28mm OD x 3mm Flat Washers

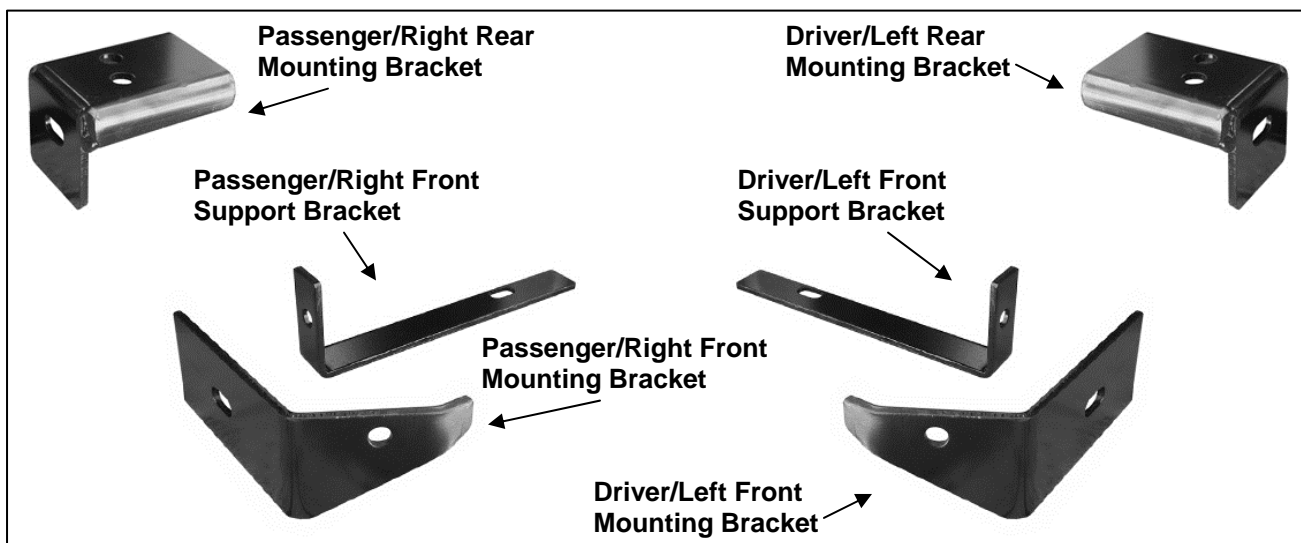

**PROCEDURE:**

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Starting on the driver side of the vehicle, locate the tie down loop welded to the sub-frame behind the front tire, **(Figure 1)**.
- Partially attach the front Mounting Bracket to the back side of the tie down loop using the included (1) 12mm x 50mm Hex Bolt, (1) 12mm Lock Washer, (2) 12mm Flat Washers and (1) 12mm Hex Nut, **(Figures 2A, 2B & 3)**.
- Locate the two factory 8mm hex bolts attaching the sub-frame reinforcement bracket to the bottom of the body. Remove only the outside mounting bolt from the bracket, **(Figure 5)**. Bolt the flat end of the driver side Front Support Bracket to the reinforcement bracket with the included (1) 8mm x 60mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm Flat Washer, **(Figures 5 & 6)**. Do not tighten hardware.
- Move toward the rear of the vehicle. Locate and remove the two factory 10mm hex bolts attaching the front of the rear sub-frame reinforcement bracket to the bottom of the vehicle, **(Figure 7)**. Line up the (2) holes in the rear Mounting Bracket and bolt in place over the factory bracket with the included (2) 10-1.25mm x 60mm **Fine Thread** Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers, **(Figure 8)**. Snug but do not tighten hardware.
- Position the Sidebar up to the Mounting Brackets and attach it using the included (2) 1/2" x 2" Hex Bolts, (2) 1/2" Lock Washers and (2) 1/2" Flat Washers **(Figure 9 & 10)**. Do not tighten at this time.  
**NOTE:** Insert the front hex bolt and washers through the slot in the bent end of the Support Bracket and into the end of the Sidebar, **(Figures 6 & 9)**.
- Level and adjust the Sidebar properly and tighten all hardware at this time. **(Continued)**



8. Repeat steps 2 – 7 for passenger Sidebar installation.
9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.




**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

### Driver Side Installation Pictured

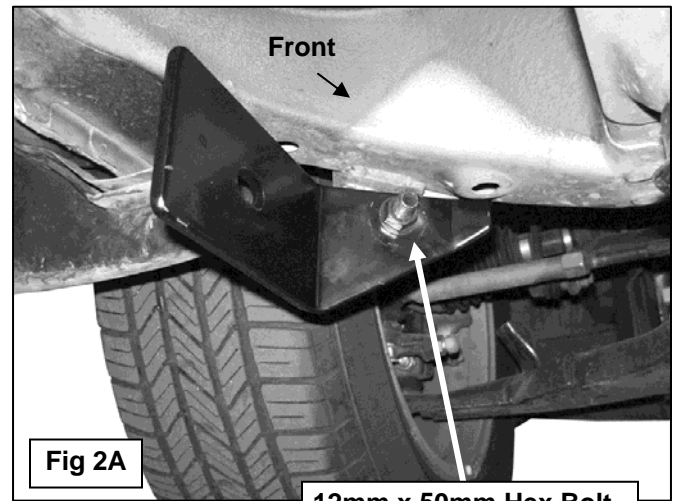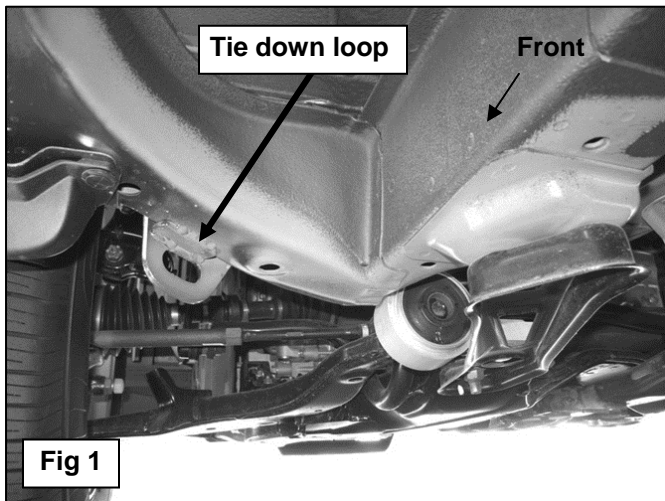

**12mm x 50mm Hex Bolt  
12mm Lock Washer  
(2) 12mm Flat Washers  
12mm Hex Nut**

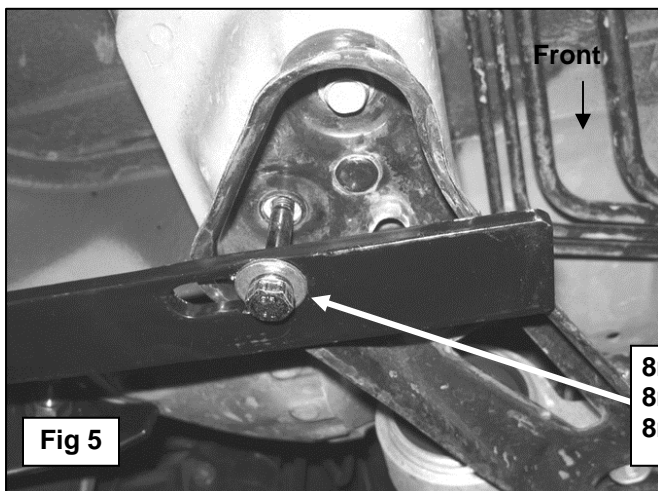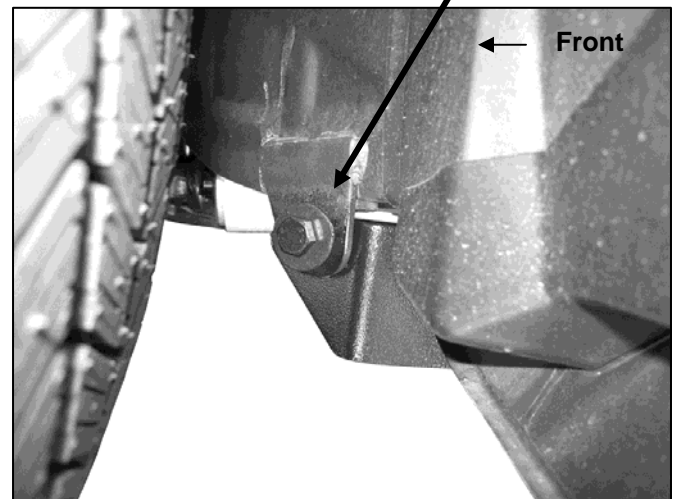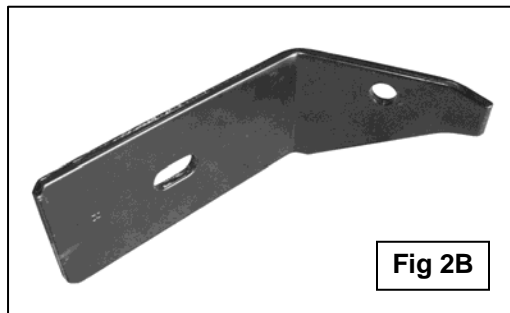

**8mm x 60mm Hex Bolt  
8mm Lock Washer  
8mm Flat Washer**

### Driver Side Installation Pictured

