



## INSTALLATION INSTRUCTION

SIDE BAR PART #234075-2

03-06 GMC H2

### ATTENTION


- λ Read the instructions completely before you begin the installation. NOTE: Pictures are for reference only, actual part may be different. Installation is the same.
- λ You may need to periodically re-tighten all hardware, such as one month or two month.

### PART LIST

No.	Name	Qty	Remarks
①	Side bar	2	
②	Hex bolt	16	M10×35
③	Flat washer	32	10mm
④	Lock nut	16	M10

### INSTALLATION STEPS

1. Begin installation by working on driver side of the vehicle (refer to Figures).
2. Line up holes of the driver-side Side Bar brackets to the back side of the vehicles rocker panel protection brackets as shown in Figure, and secure to each bracket using (2) M10×35 bolts, (4) 10mm flat washers and (2) M10 lock nuts. Hand tighten.
3. Adjust Side Bar so that it is level and centered and tighten the two inner brackets first, and then the two outer brackets to complete the driver-side assembly.  
Repeat process for passenger side of vehicle to complete installation.

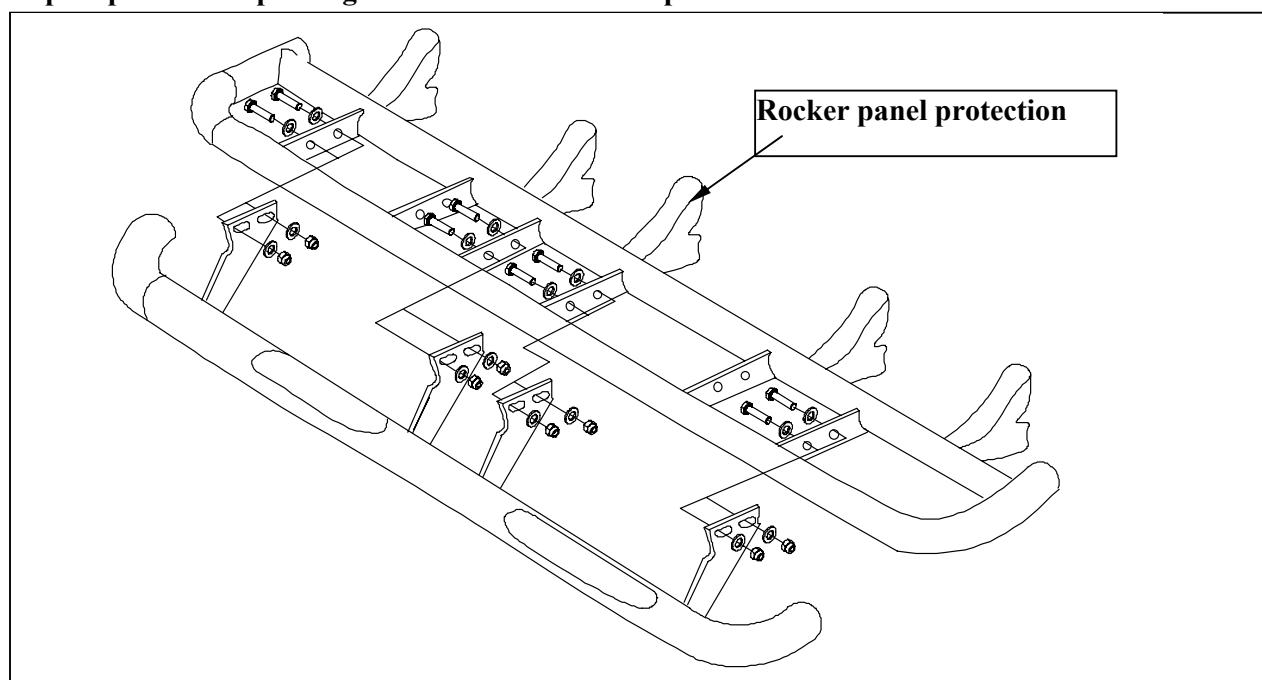

4. Test and make sure that the side bar is steadily fixed.
5. Installation is finished .