


INSTALLATION INSTRUCTIONS

11-2012 FIAT LOUNGE / POP BACK BUMPER

PART# B305556 / 305556

PARTS LIST:

Qty	Description	Qty	Description
1	Back Bumper	2	8mm x 35mm Hex Bolts
1	Driver/Left Mount Bracket	6	8mm x 25mm Hex Bolts
1	Passenger/Right Mount Bracket	16	8mm Flat Washers
1	Driver/Left Brace Bracket	8	8mm Lock washers
1	Passenger/Right Brace Bracket	8	8mm Hex Nuts

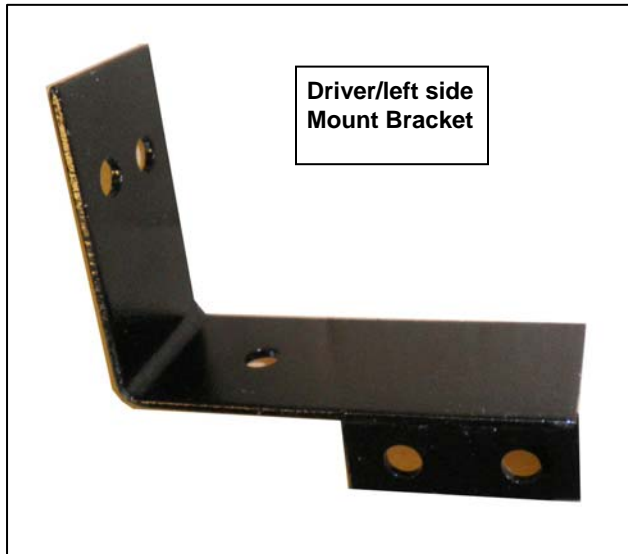

PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. Start by removing the two bolts securing the lip of the rear bumper cover as seen in **(Fig 1)** also remove the plastic clips the bolts screwed into seen in **(Fig 1A)**, with the bolt & the clips removed. Starting on the Passenger/right side select the Passenger/right side Mounting bracket and secure the side of the mounting bracket with the (1) 8mm x 25mm hex bolt (2) 8mm flat washer (1) 8mm lock washer and (1) 8mm nut, as shown in **(Fig 2)** Snug but do not tighten.
3. With the bracket in place & secured remove the factory bumper nut located Just above the bumper lip on the inner side as seen in **(Fig 3)** select the Passenger/right side brace bracket and slide it over the stud & re attach the factory nut attach the mount bracket to the bottom of the factory bumper bracket with (1) 8mm x 35mm hex bolt (2) 8mm flat washer (1) 8mm lock washer and (1) 8mm nut, as seen in **(Fig 3)** Snug but do not tighten.
4. Select the Driver/left side Mounting bracket and secure the side of the mounting bracket with the (1) 8mm x 25mm hex bolt (2) 8mm flat washer (1) 8mm lock washer and (1) 8mm nut, as shown in **(Fig 4)** Snug but do not tighten.
5. With the side secured remove the factory bumper nut located Just above the bumper lip on the inner side near the muffler as seen in **(Fig 5)** select the Driver/left side brace bracket and slide it over the nut re attach the nut and secure it along with the mount bracket to the bottom of the factory bumper bracket with (1) 8mm x 35mm hex bolt (2) 8mm flat washer (1) 8mm lock washer and (1) 8mm nut, as seen in **(Fig 6 & 6A)** Snug but do not tighten.
6. Now that the mounting brackets are installed select the rear bumper attach the rear bumper to the outside edge of the mounting brackets & secure with the (2) 8mm x 25mm hex bolt (4) 8mm flat washer (2) 8mm lock washer and (2) 8mm nut, per side Snug but do not tighten.
7. Align the rear bumper to the desired location; then tighten all hardware.
8. Do periodic inspections to the installation to make sure all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Product.

For gloss black finishes: Mild soap may be used to clean the Product.








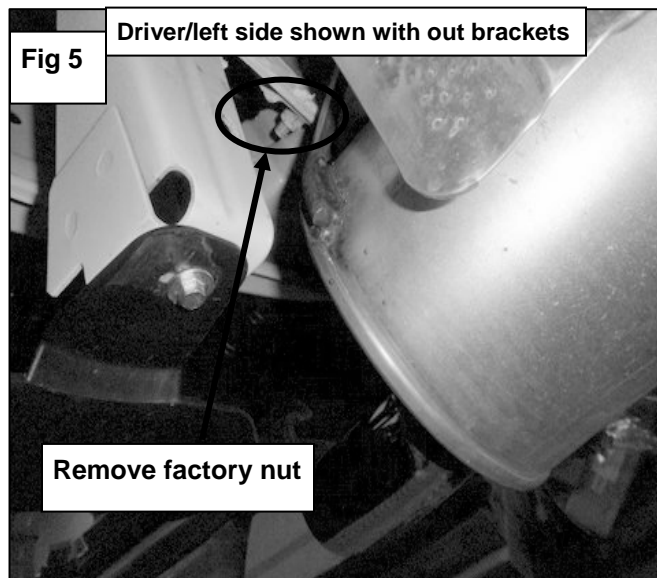


Fig 6

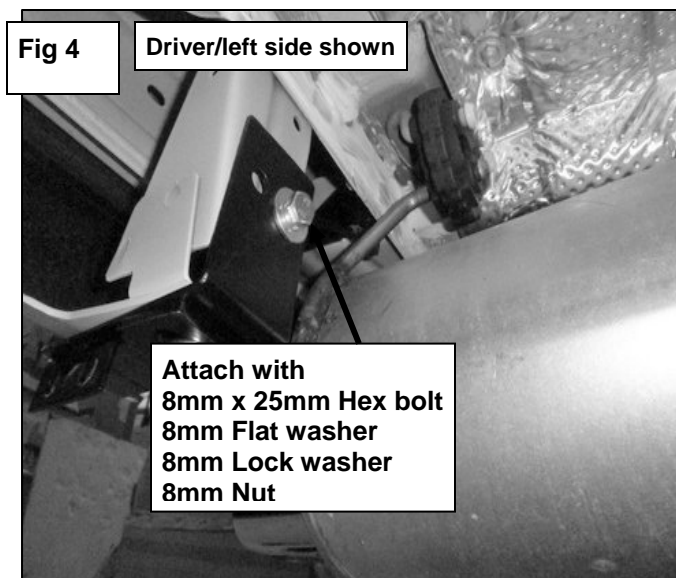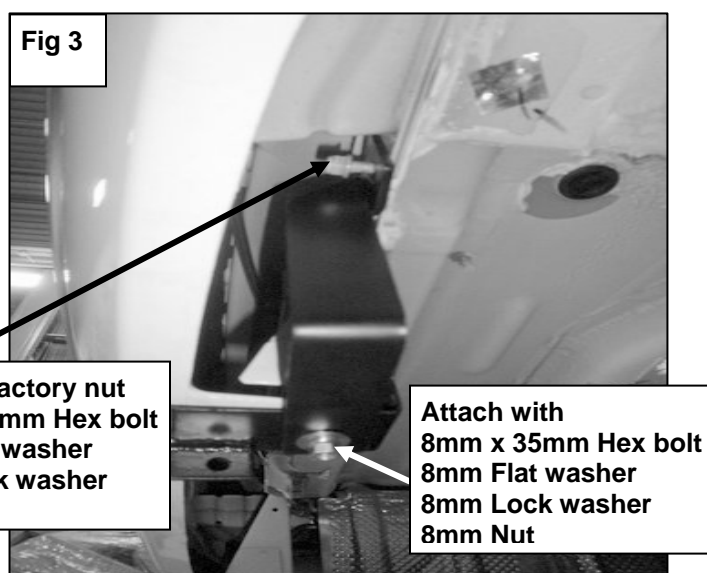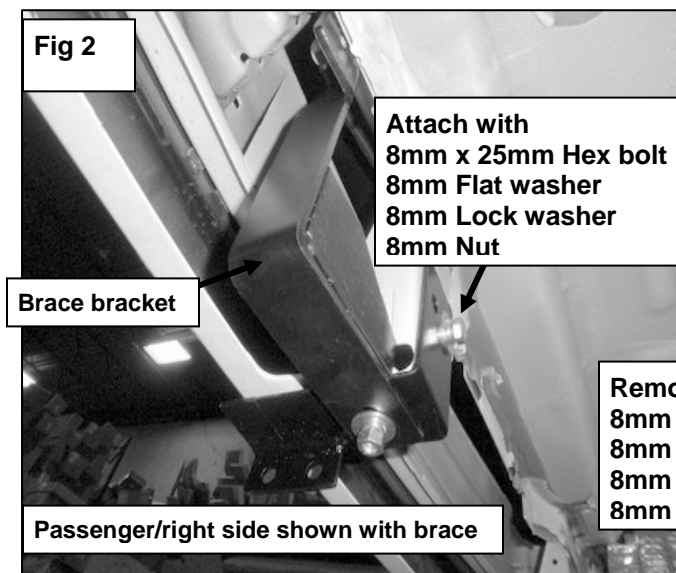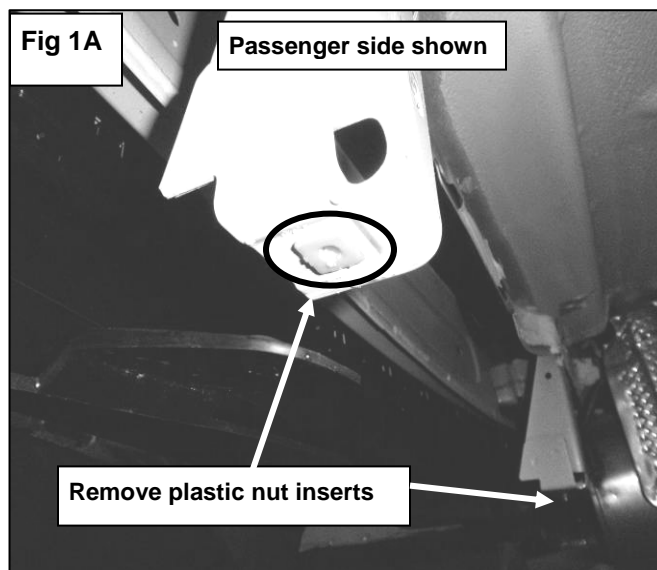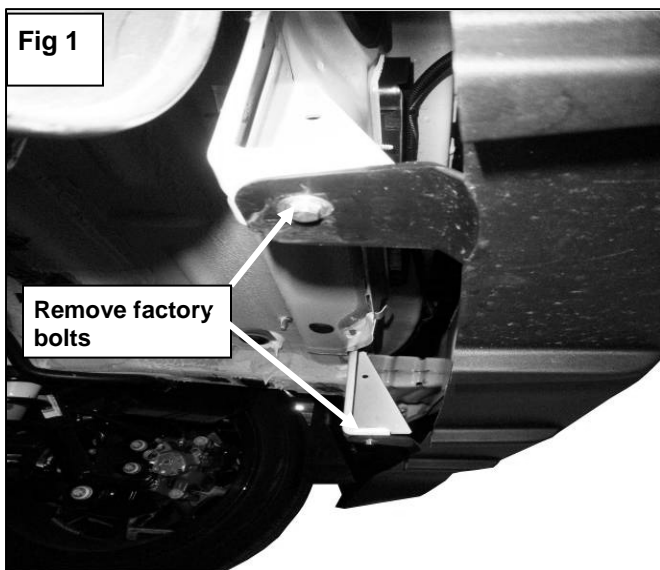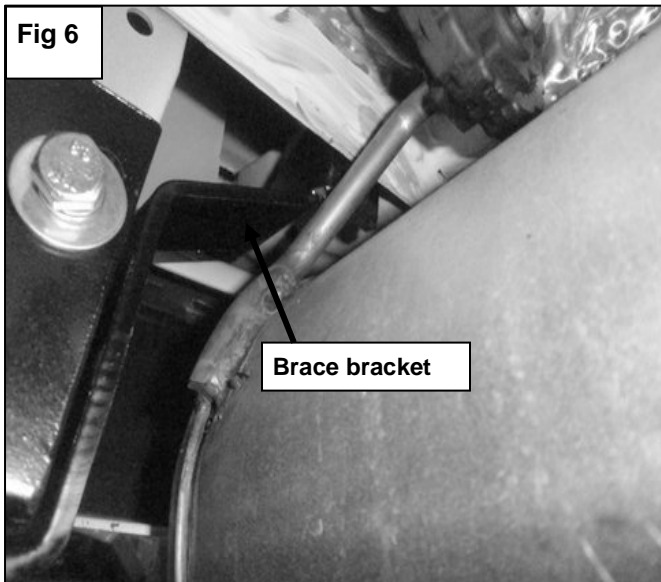

Brace bracket

Fig 6A

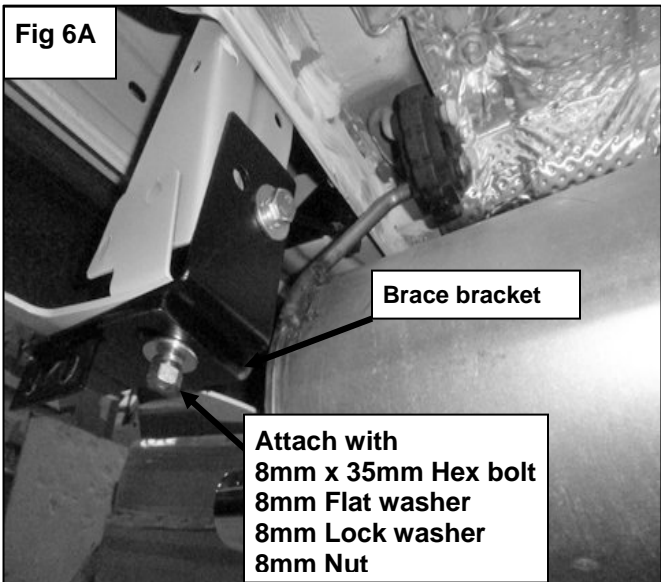

Brace bracket

**Attach with
8mm x 35mm Hex bolt
8mm Flat washer
8mm Lock washer
8mm Nut**



Installation complete