




**INSTALLATION INSTRUCTIONS
BULL BAR PART# B35-2003 / 35-2003
2007-10 TOYOTA FJ CRUISER**

PARTS LIST:

- 1 BULL BAR
- 2 BRACKETS DRIVER/ PASSENGER
- 4 7/16 X 1 1/4 HEX HEAD BOLTS
- 4 7/16 HEX NUTS
- 8 7/16 FLAT WASHERS
- 4 3/8 X 4 1/2 HEX HEAD BOLT
- 4 3/8 NYLOC HEX NUT
- 8 3/4 FLAT WASHERS


PROCEDURE:

- 1- REMOVE CONTENTS FROM BOX AND CHECK FOR DAMAGE. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
- 2- LOCATE FRAME MOUNT FOR LOWER BRACKET (DRIVER SIDE SHOWN). INSERT (2) 3/8 X 4 1/2 HEX HEAD BOLTS, (2) 3/8 FLAT WASHERS. INSTALL LOWER BRACKET USING (2) 3/8 HEX NYLOC NUTS, (2) 3/8 HEX NYLOC NUTS (2) 3/8 FLAT WASHERS, LEAVE LOOSE. SEE FIG. #1
- 3- REPEAT PROCEDURE #2 ON OPPOSITE SIDE
- 4- INSTALL BULL BAR ONTO VEHICLE USING (4) 7/16 X 1 1/4 HEX HEAD BOLTS, (4) 7/16 HEX NYLOC NUTS, (8) 7/16 FLAT WASHERS. LEAVE LOOSE SEE FIG #2.
- 5- LEVEL AND ADJUST BULL BAR AS DESIRED THEN TIGHTEN.

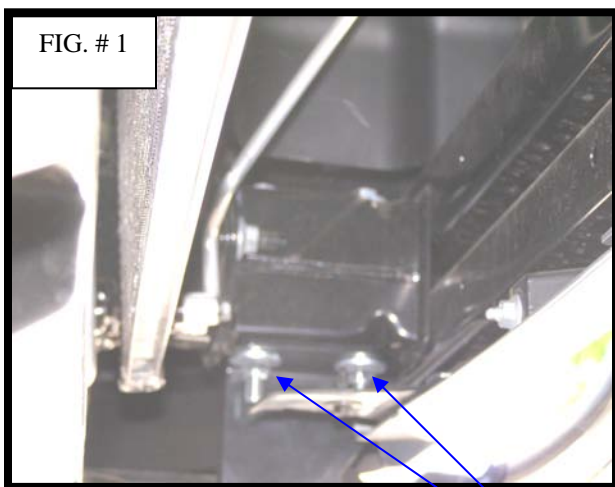

DRIVER SIDE SHOWN

3/8 x 4 1/2 HARDWARE

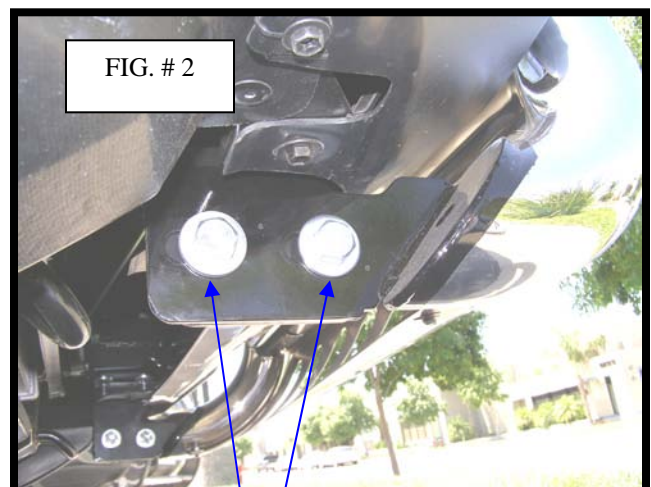

PASSENGER SIDE SHOWN

7/16 HARDWARE