



INSTALLATION INSTRUCTIONS

SPORT BAR PART#6547
2007-10 HONDA CRV

PARTS LIST:

1 Sport Bar	4 12-1.75mm x 35mm Hex Head Bolt
1 Driver Mounting Bracket	6 12mm Nylock Nuts
1 Passenger Mounting Bracket	12 12mm Flat Washer
2 12-1.75mm x 70mm Hex Head Bolt	

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
2. Locate and remove the passenger factory support bolt located on the inner side of plastic shroud underneath the vehicle (Figure 2). Save bolt for later use. **NOTE:** You do not need to remove plastic shroud underneath vehicle.
3. Position Passenger Side Mounting Bracket as shown in Figure 2 and re-attach factory bolt removed in step 2. Do not tighten at this time.
4. Use the included (1) 12-1.75mm x 70mm Hex Head Bolt, (1) 12mm lock Nut, and (2) 12mm Flat Washers to attach the second mounting hole on the bracket to the factory hole (Figure 2). Do not tighten at this time.
5. Repeat steps 2-4 for driver side.
6. Mount Sport Bar on the inner side of Mounting Brackets (Figure 3). Use the included (4) 12-1.75mm x 35mm Hex Head Bolts, (4) 12mm lock Nuts, and (8) 12mm Flat Washers to attach Sport Bar to both mounting brackets.
7. Once the Sport Bar is fully mounted on vehicle, level and adjust it and tighten all hardware at this time.

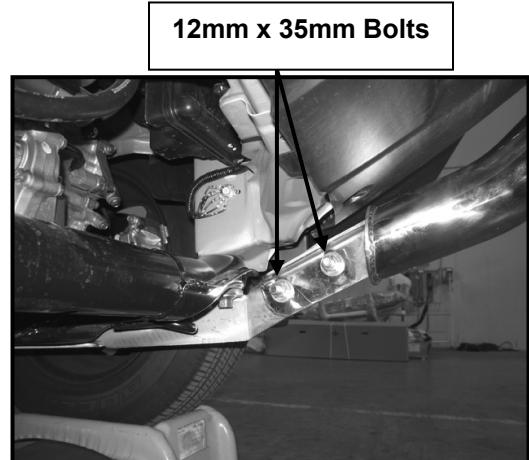
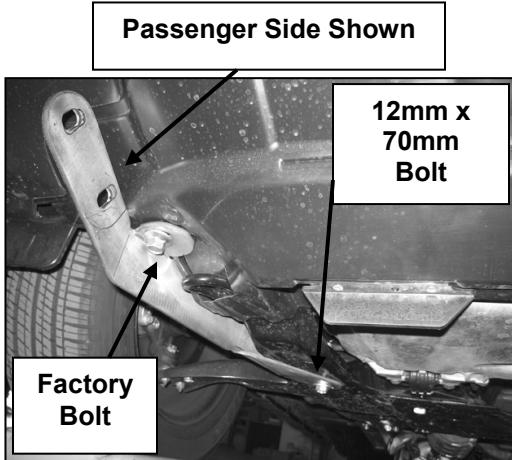
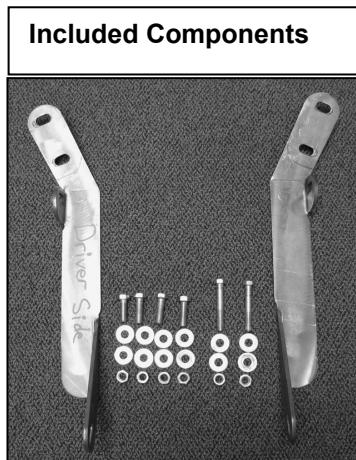


Figure 1

Figure 2

Figure 3