



## **INSTALLATION INSTRUCTIONS**

2005-13 TOYOTA TACOMA EXTENDED CAB SHORT BED 2/4WD  
SIDE BAR PART # **S222008 / S222008-2**


### **PARTS LIST**

- |                                |  |
|--------------------------------|--|
| (2) SIDE TUBES WITH STEPS      |  |
| (2) FRONT MOUNT BRACKETS       | (8) 8MM x 30MM 1.25 PITCH HEX HEAD BOLTS |
| (2) REAR MOUNT BRACKETS        | (8) 8MM FLAT WASHERS                     |
| (8) 10MM FLAT WASHERS          | (8) 8MM LOCK WASHERS                     |
| (8) 10MM X 30MM HEX HEAD BOLTS | (8) 10MM LOCK WASHERS                    |

### **PROCEDURE**

1. Begin installation by working on driver side of the vehicle.
2. Remove plastic plugs on rocker panel to locate mounting holes for brackets. Attach and secure Front and Rear Mount Bracket to existing holes using 8MM bolts, 8MM flat washers, and 8MM lock washers. For each outer hole and hand tighten.
3. Attach Side Tube to Front, and Rear Brackets using (4) 10mm hex bolts, (4) 10mm flat washers & (4) 10mm lock Washers, snug but do not tighten at this time.  
Adjust Side Tube so that it is level and centered, and tighten all bolts to complete the driver-side assembly.
4. Repeat process for passenger side of vehicle to complete installation.

### **Passenger side**

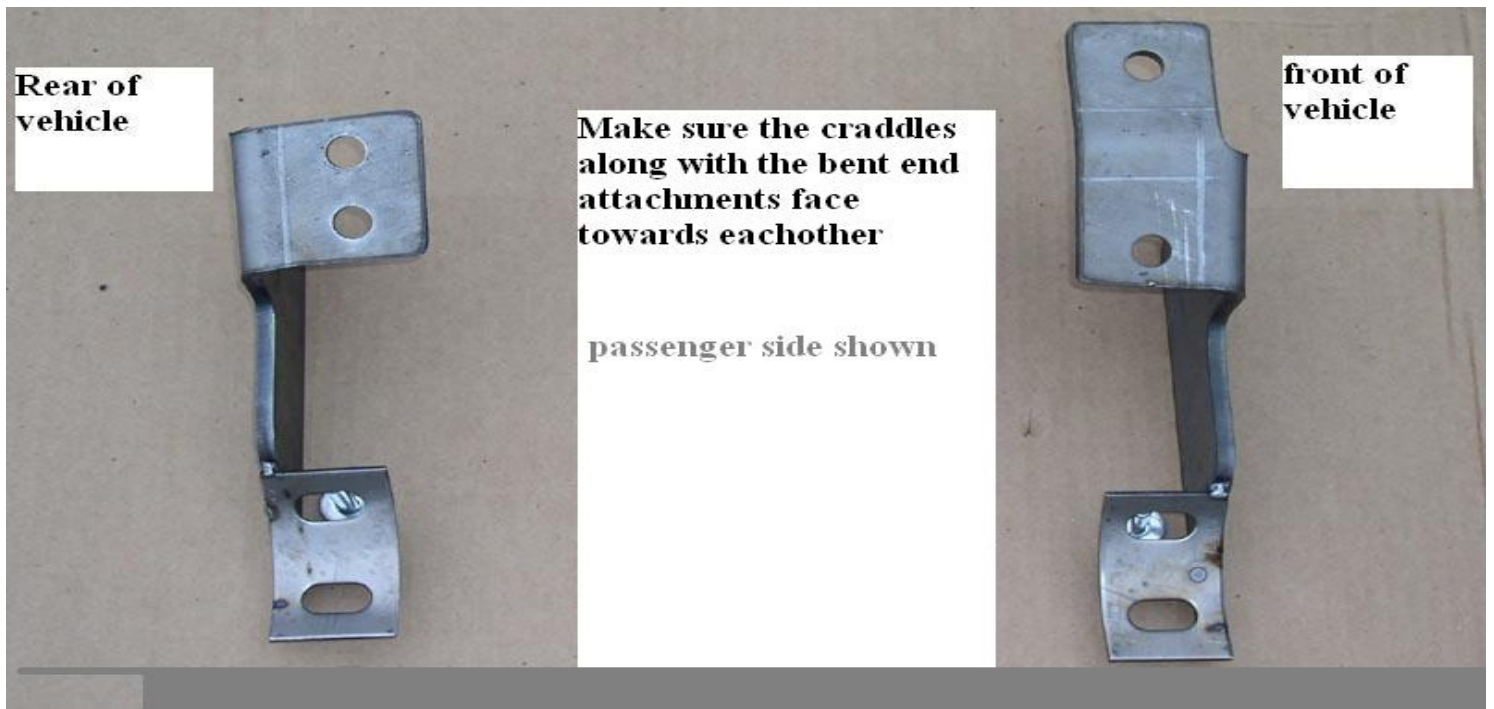

NOTE: IT IS ADVISABLE TO RE-CHECK ALL FASTENERS FOR TIGHTNESS AFTER ONE WEEK.