



INSTALLATION INSTRUCTIONS

TAILLIGHT GUARD PART # T1205-2/T1205
07 FORD EXPEDITION

PARTS LIST:

| | |
|---|--------------------------------|
| 1 | Driver Side Taillight Guard |
| 1 | Passenger Side Taillight Guard |

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Open the rear door and remove the driver's side screws holding the taillight housing (Figure 1).
3. Grasp the taillight housing with one hand and pull gently. **NOTE:** Be sure to pull straight back to avoid possible damage. This is the same procedure required to change a burn out taillight in the assembly. For more info see owner's manual on replacing burn taillight bulbs.
4. Fit Taillight Guard over the taillight lens. The Side Bracket should hook to the edge of the taillight housing (Figure 2). **NOTE:** If they don't fit properly, they can be adjusted to fit properly using a pair of pliers.
5. Return the assembly back to the vehicle making sure that the Taillight Guard is aligned and centered properly on the taillight housing.
6. Secure the Taillight Guard assembly using the same factory torx screws (Figure 1).
7. Repeat steps 2-6 to install the passenger side.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

(Driver Side Installation Shown)

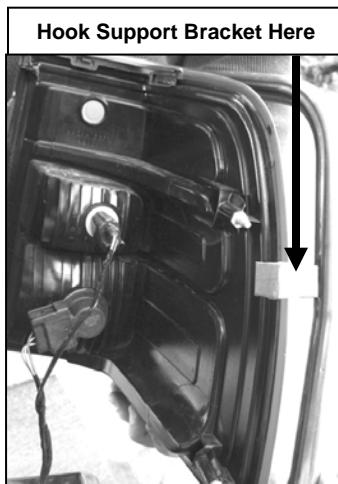


Figure 1

Figure 2

Figure 3