1979-04 Ford Mustang

BBK Quadrant &

Adjustable Cable Kits

Part # 3517,3519,1505,15055,1609,16095



Special Tools

Required:

 No special tools required Install Time:

Approximately 1 Hour 30 Mins

Difficulty:

3 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

Raise the front of the vehicle and place on jack stands. Remove the clutch cable inspection cover on the side of the bell housing.

STEP 2

 Using a large screwdriver or pry bar, pry the clutch fork forward and slip the cable end through the large hole in the fork. This disengages the cable from the clutch.

STEP 3

 Remove c-clip from the collar of the cable (located where the cable slips through the bell housing).

STEP 4

• Working from the engine compartment, remove the bolt holding the cable bracket to the frame rail (next to the power steering pump) and also remove the bolt which holds the cable head to the firewall. Next, remove the cable from the car and discard (You may have to unhook the cable from the quadrant assembly under the dashboard).

STEP 5

 Working from under the dash board on the driver's side, remove the cotter clips from both shafts. Using a screw driver, pry the large quadrant piece off of the shaft and discard along with the spring attached to it.

STEP 6

Remove the spring from the pawl gear, then
push the clutch pedal to the floor and slide the
pawl gear off the shaft. Many '87 and later cars
will run into a support bracket before it slips
completely off the shaft. If the pawl gear slides
off completely, discard it and go to step 8.

STEP 7

To remove the pawl gear, first pull the carpet back until you can put the clutch pedal all the way to the floor. Position pawl gear on its shaft by rotating it, slip a large screwdriver or pry bar under the pawl gear and across the quadrant shaft and push downward (toward the floor of the vehicle). A large amount of pressure may be needed to pry the gear and sometimes actually breaking it, which is okay because whatever is left of the gear will easily slide off the shaft.







Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE -

WWW.BBKPERFORMANCE.COM

For any questions, email us: tech@bbkperformance.com

Installation instructions

1

1979-04 Ford Mustang

BBK Quadrant &

Adjustable Cable Kits

Part # 3517,3519,1505,15055,1609,16095

STEP 8

Bring the clutch pedal back down to normal position and install the BBK Aluminum Quadrant so both shafts slip through the 2 holes in the quadrant. Using a screwdriver or pry bar, pry the quadrant over the 2 shafts evenly and far enough to allow the installation of the 2 cotter

STEP 9





Installation of the cable is the reverse of the removal.

FOR KITS 15055 &16095

You need to remove the rubber bushing from the cable by removing the metal clip with a small screwdriver FIG.1






Feed the end of the cable down to the bell housing and slide it through the hole in the bell housing, position the threaded end of the cable through the clutch fork.

- Feed the clutch pedal end of the cable and housing into and through the BBK firewall adjuster. FIG.2
- From under the dash, position the cable end onto the clutch quadrant.

STEP 10

Once the cable is installed, slide the adjustable end through the small hole in the clutch fork and then install the rounded end adjuster. With the engine running and the vehicle in gear, Adjust the clutch cable until the pedal is grabbing approximately 2-1/2" off the floor. Once the pedal is in position install the jam nut and tighten it and the adjuster together.

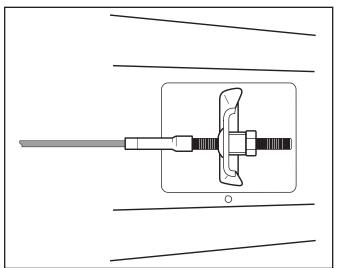

STEP 11

Re-install the cable inspection cover. (Sometimes the cover will have to be clearanced as not to come into contact with the adjustable end of the cable).



Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE -

WWW.BBKPERFORMANCE.COM



For any questions, email us: tech@bbkperformance.com

installation instructions

1979-04 Ford Mustang

BBK Quadrant &

Adjustable Cable Kits

Part # 3517,3519,1505,15055,1609,16095

Hardware Included

3517- SCP045- Clutch Cable (1pc)

3519- SCP007- Clutch Cable (1pc)

1505- MAS385- Quadrant (1pc)

SCP045- Clutch Cable (1pc)

15055- MAS385- Quadrant (1pc)

SCP045- Clutch Cable (1pc)

MAS265- Fire Wall Adjuster Insert (1pc)

MAS266- Fire Wall Adjuster Threaded Piece (1pc)

1609- MAS385- Quadrant (1 pc)

SCP007- Clutch Cable (1pc)

16095- MAS385- Quadrant (1pc)

SCP007- Clutch Cable (1pc)

MAS265- Fire Wall Adjuster Insert (1pc)

MAS266- Fire Wall Adjuster Threaded Piece (1pc)








GO TO NEXT PAGE -





Installation instructions

