



## 2005-UP S197 MUSTANG STRUT TOWER BRACE

### INSTALLATION INSTRUCTIONS

**Tools required; 3/8" ratchet, 13mm socket. 4mm & 5mm Allen wrenches.**

- STEP 1** Attach the logo plate to the cross brace using the supplied nuts and bolts.
- STEP 2** Remove the 4 nuts from the top of both strut towers.
- STEP 3** Set the BBK polished strut mounts onto the strut towers over the studs.
- STEP 4** Use the original nuts to secure the polished strut mounts. Torque to 26 ft-lbs.
- STEP 5** Place the cross brace over the polished strut mounts and secure it to the polished strut mounts using the supplied Allen bolts.
- STEP 6** Once the cross brace is attached to the brackets, attach the cover plates to the polished strut mounts with the supplied Allen bolts.




1.



3.



5.

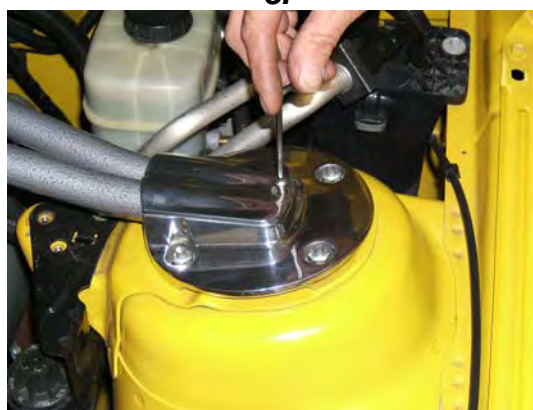

6.

WWW.BBKPERFORMANCE.COM

GO

IMPORTANT: All appropriate safety equipment (i.e. gloves, tools) must be used during the installation of these product(s).  
BBK Performance, Inc. accepts no responsibility for injuries resulting in the installation of any product(s).