

Part# 1049601C

2001-2007 Turbo-Back 6.6L Chevrolet Duramax 2500/3500 2WD/4WD Cat-Back System (Single Outlet) (Off-road only for models equipped with a Catalytic Converter) -- Not for Commercial Trucks --

Removal of Stock System:

1.) Remove the four (4) nuts at the flange located approximately under the passenger side seat using a 15mm socket or wrench. Remove the rear exhaust from the rubber hangers and remove the system from under the truck.

Installation of BD Stainless Exhaust:

- 1.) Install the extension pipe to the catalytic converter.
 - (Installation tip: Temporarily hang the muffler and tail pipe in place using the two OEM rubber hangers and measure to the down-pipe to determine the length needed). Approximately $9\frac{1}{2}$ & 20" needs to be cut off for extended cab and regular cab. Included is an 18" extension for the longer wheelbase truck.
- 2.) Install the muffler over the extension(s) and tailpipe.
- 3.) Install the clamps around pipes where needed, but be sure the exhaust is in place before tightening any clamps. Starting at the front-pipe, tighten all connections.


NOTE: Clamps with steel hooks are to be used as hangers for different locations on exhaust.

BD recommends that exhaust systems be installed by a trained automotive technician. If these parts are installed by a do-it-yourself person, or end user, please take all necessary precautions to ensure a safe installation.



Part# 1049601C

Kit Contents:

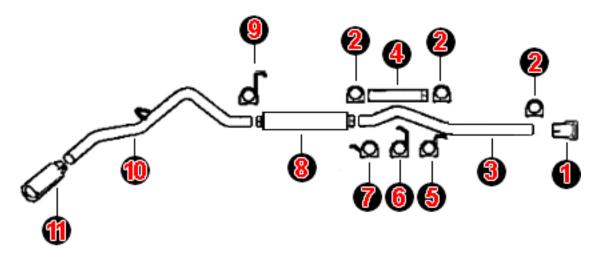

- 1. Flange [1]
- 2. 4" Exhaust Clamps [3]
- 3. 48.5" Intermediate Pipe [1]
- 4. 18" Intermediate Pipe [1]
- 5. 4" Exhaust Clamp w/ right hook [1]
- 6. 4" Exhaust Clamp w/ long left hook [1]
- 7. 4" Exhaust Clamp w/ left hook [1]
- 8. Muffler [1]
- 9. 4" Exhaust Clamp w/ long right hook [1]
- 10. Tail Pipe [1]
- 11. Polished 5" Exhaust Tip [1]