

# ***BEDRUG, Inc.***


## **BEDRUG® TAILGATE MAT INSTALLATION INSTRUCTIONS**

**WARNING: IMPROPER INSTALLATION WILL RESULT IN TAILGATE FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!**

APPROXIMATE INITIAL INSTALLATION TIME LESS THAN 10 MINUTES

1. (2) Loop fasteners are sewn to the tailgate Mat. Attach the hook fasteners that have a self-adhesive backing to the loop fasteners. (14) hook fasteners are included in the kit.
2. Lay the tailgate Mat on the tailgate of the truck to determine the exact location and fit.
3. Roll one side of the tailgate up exposing the area where the hook fasteners are to be adhered.
4. Using a cloth, soap and water, clean and dry this area thoroughly removing all dirt and debris. With a separate cloth, clean the area again with alcohol. Once the area has been cleaned, apply adhesive promoter on surfaces that have a spray in type liner or plastic tailgate cap applied to the tailgate. The adhesive promoter is not required for applying hook fasteners to painted sheet metal.
5. Remove the protective liner exposing the adhesive and lay the tailgate Mat down and **FIRMLY** rub the fastener down **VERY AGGRESSIVELY** to assure full engagement of the fastener and the adhesive.  
**NOTE: TAILGATE SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENER TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.**
6. Repeat for the opposite side of the tailgate Mat.

### **FASTENER LOCATIONS**

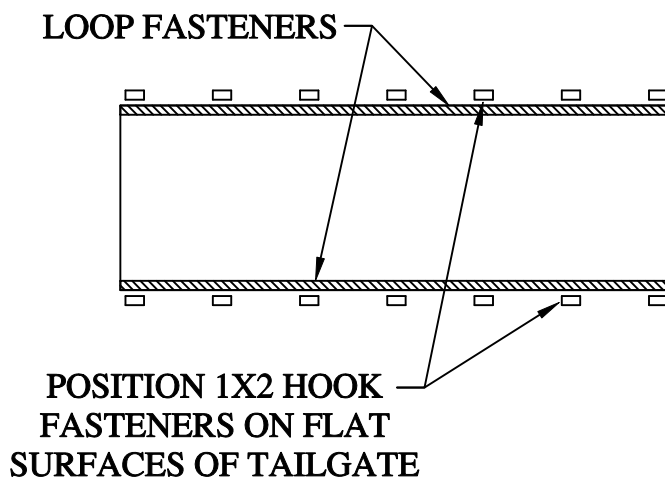

# BEDRUG<sup>®</sup> CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

## **Cleaning your BedRug is easy:**

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug, Inc. customer service at 800-462-8435.

**Retain this cleaning information with your vehicle owner's manual for future reference.**

## **BedRug, Inc.**

### **LIMITED WARRANTY**

BedRug, Inc. warrants BedRug, BedTred, VanRug, and VanTred, for pickup trucks and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact BedRug, Inc. Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

**Retain this warranty information with your vehicle owner's manual for future reference.**

**FOR WARRANTY SERVICE CALL 800-462-8435**