

BEDRUG, Inc.

HONDA RIDGELINE **BEDRUG® BEDLINER INSTALLATION INSTRUCTIONS**

WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!

1. Read all instructions before installing the BedRug. THE TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENERS TO ACHIEVE MAXIMUM ADHESION. NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.
2. Zip the front half of the BedRug floor to the bulkhead and sidewalls. Apply the hook fasteners to the BedRug before putting the BedRug into the truck bed. Do NOT remove the protective liner on the back of the hook fasteners at this time.
3. Apply the hook fasteners to the BedRug per Illustration 1.

HOOK FASTENER LOCATIONS

BULKHEAD:


Top Edge- Apply (1), 1"x60" strip, trim to fit.
Mid Section-Apply (5), 1x2" pcs per locators.
Lower Edge-Apply (5), 1x2" pcs per locators.

SIDEWALLS:

Top Edge- Apply (5),1x2" pcs each side.
Mid Section- Apply (4),1x2" pcs each side.
Locator marks are molded into back side of part.

Floor Sections:

Inner-Cut (2), 1"x36"pcs (with red liner) in half to apply to the (4) inner locations.
Edges-Apply (3), 1"x60" pcs, trim to fit

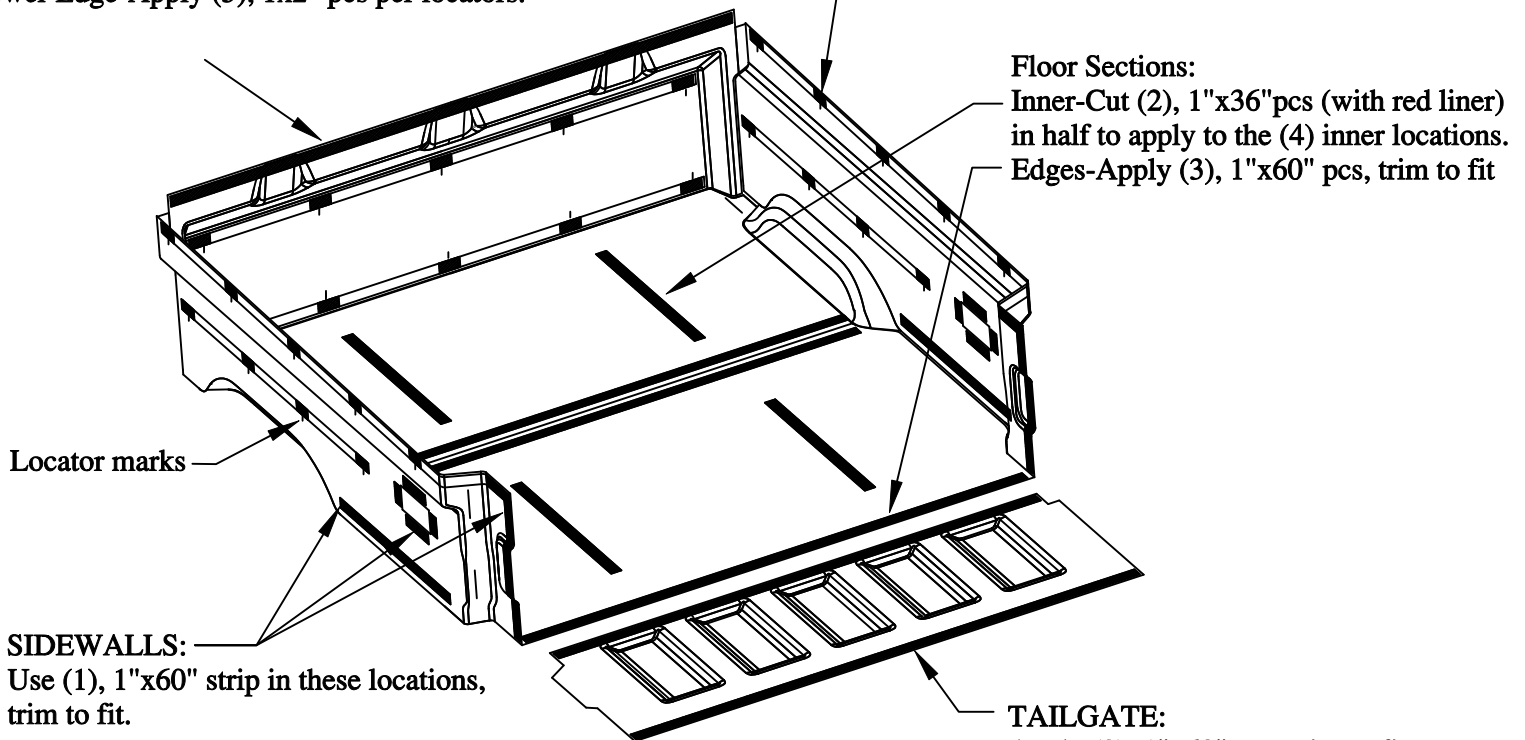

(Illustration 1)

4. Lay the front section of the floor with the bulkhead and sidewalls into the truck bed. Ensure that it is positioned up against the front of the truck bed where the rear edge of the floor does not interfere with the trunk lid.


Clean the areas where the hook fasteners will attach to the truck bed. Clean the areas with alcohol first, then apply the 3M 4298 adhesive promoter and let dry before adhering hook fasteners.

Note: Clean, apply promoter and adhere each hook fastener before moving to the next. Do not clean and apply adhesive promoter to multiple areas before adhering hook fasteners because these surfaces may become contaminated where the adhesive will not adhere permanently.

5. Attach BedRug components in the following sequence:

- a. Floor- Roll each side up to locate and attach the inner hook fasteners with the red liner. Slide the cargo hooks through the slits in the front corners of the floor. Attach the rear edge of the floor last. Be sure the rear edge of the front floor section does not interfere with the trunk lid when the trunk lid is opened.
- b. Bulkhead-Work from the bottom up and the center out.
- c. Sidewalls-Attach the lower and mid section fasteners toward the front first. Use the cut outs for the lights to locate the rear section of the sidewalls.

Important: There is minimal clearance between the trunk lid and sidewalls. Attach the lower strip of hook fastener on the lower edge of the truck bed sidewall. There is extra material at the lower edge of the sidewall that is designed to be tucked into the seam between the sidewall and floor of the truck bed. This will ensure that the trunk lid does not interfere with the bottom edge of the BedRug sidewall. (See Illustration 2)

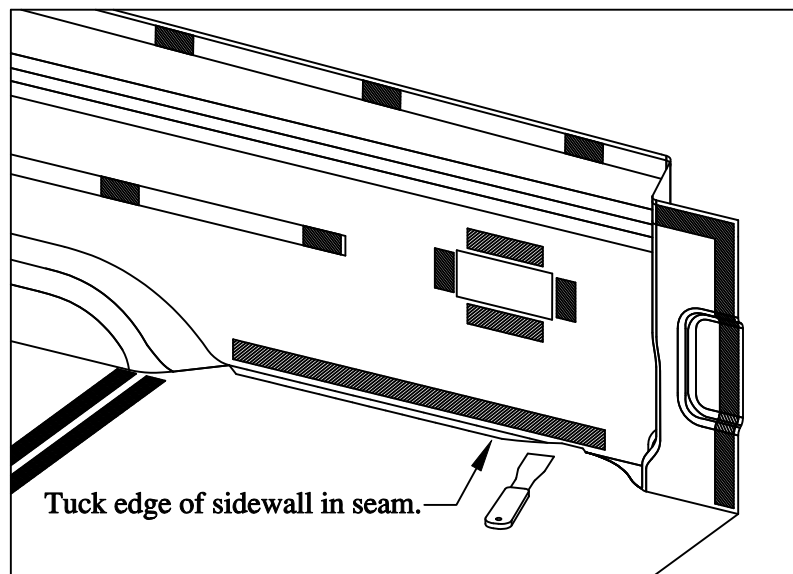

(Illustration 2)

6. Attach rear floor section to truck lid. Attach the inner hook fasteners with the red liner first then the front and rear edges. Ensure that the front edge does not interfere with the front section of the BedRug.

7. Attach the top and bottom hook fasteners to the tailgate.