

BEDRUG, Inc.

TOYOTA TUNDRA DOUBLE CAB (2004-2006)


BEDRUG[®] BEDLINER INSTALLATION INSTRUCTIONS

WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!

APPROXIMATE INITIAL INSTALLATION TIME LESS THAN 1 HOUR

1. Read all instructions before installing.
2. The BedRug floor and siderugs are shipped unzipped.
3. Remove BedRug floor and siderugs from box.
4. Zip BedRug floor and siderugs together to form the one-piece soft bed liner.
5. A very aggressive hook and loop fastening system has been designed to hold the BedRug bedliner in open bed trucks.
6. A continuous loop fastener is sewn around the liner. The bulkhead and tailgate have two continuous strips of loop fastener sewn along the top and bottom. The hook fasteners have a self-adhesive backing to stick to the bed of the truck.

HOOK FASTENER LOCATIONS

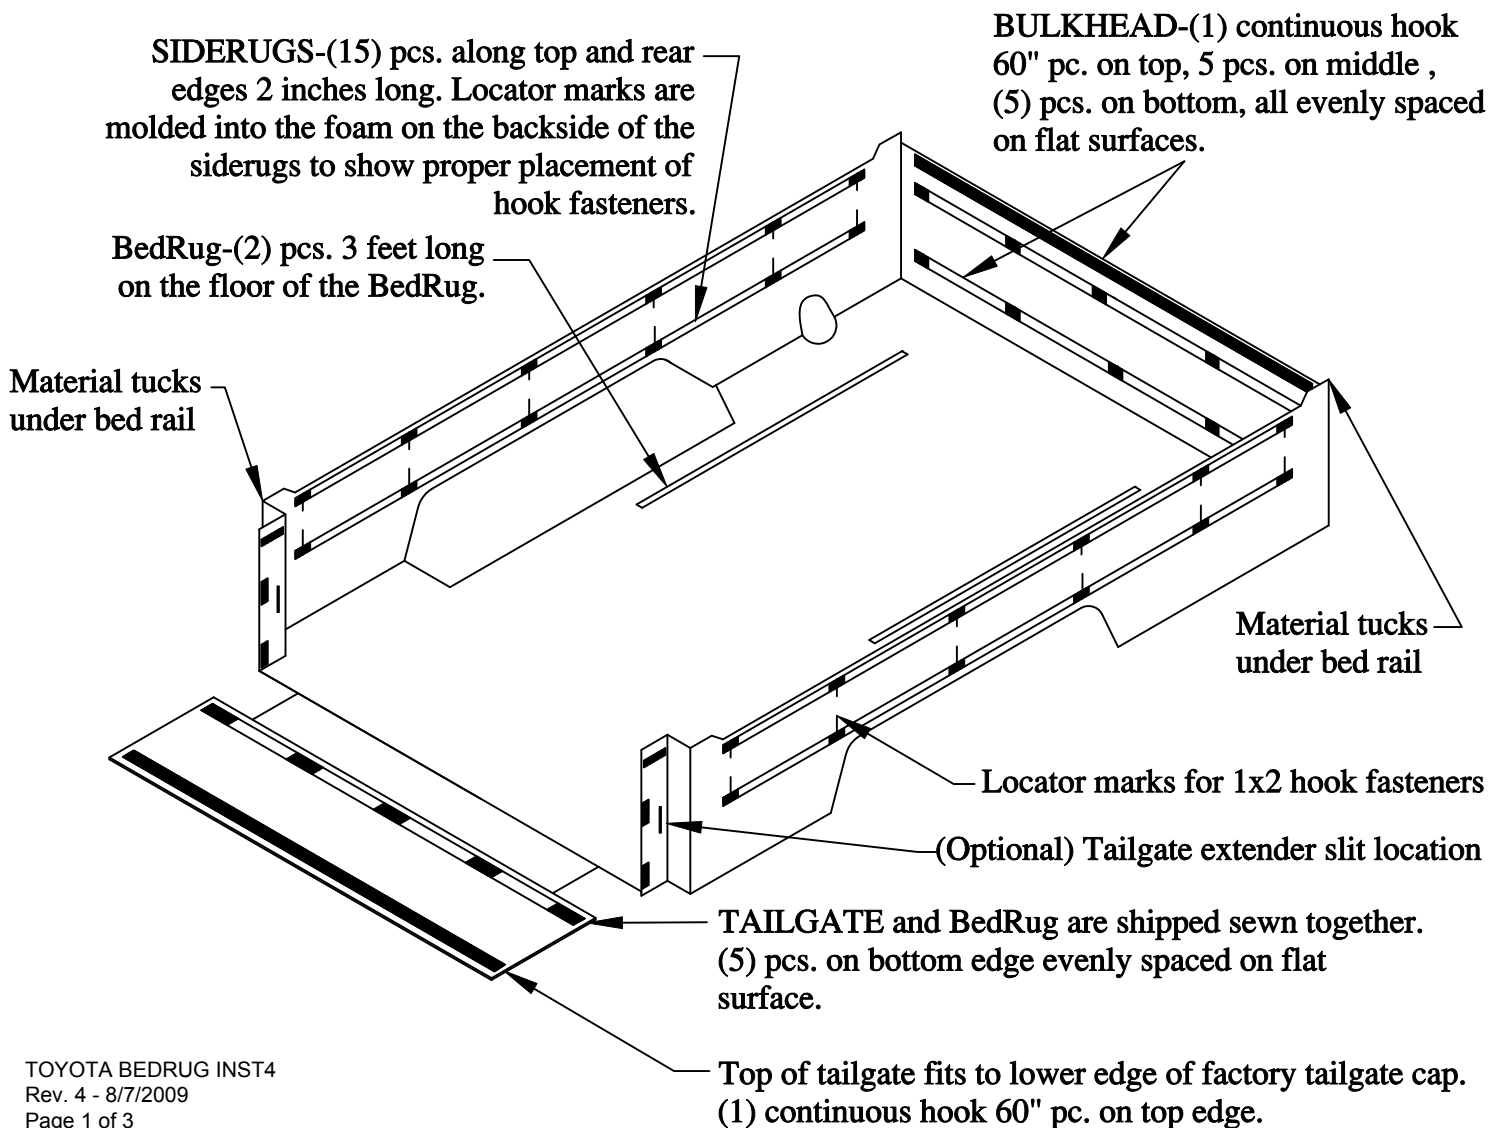

BEDRUG, Inc.

7. Lay the BedRug soft bed liner in the bed of the truck to determine the exact location and fit.

IMPORTANT: Never cut or put slits through any seams or sewn areas of the BedRug. This will cause the seam to come completely apart.

Refer to illustration for completing steps 8-14

8. Roll one side of the BedRug up exposing the floor area where the 3' strip of hook fastener is to be adhered.
9. Using a clean lint-free cloth, clean this area thoroughly using NON-PETROLEUM based solvent. Then with a separate cloth, clean the same area again with alcohol. If the cloths become visually soiled, replace them with clean ones.
10. Attach hook fastener to the loop. Remove the protective liner exposing the adhesive.

NOTE: TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENER TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.

Lay the BedRug down, then **FIRMLY** rub the fastener(s) down **VERY AGGRESSIVELY** to assure full engagement of the fastener(s) and the adhesive.

NOTE: For siderugs, be sure to place the 2" long hook fasteners at the locator marks which are molded into the foam. If factory tailgate extender is to be installed, cut slit from foam side of siderug on locator mark at D pillar area. Refer to illustration.

11. Repeat steps 9 and 10 for the opposite side of the BedRug.
12. Repeat steps 9 and 10 on the bulkhead.
13. Repeat steps 9 and 10 on the siderugs.
14. Repeat steps 9 and 10 on the tailgate.

BEDRUG[®] CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

Cleaning your BedRug is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug, Inc. customer service at 800-462-8435.

Retain this cleaning information with your vehicle owner's manual for future reference.