



BXR4508
Pullrite SuperGlide 24K
Model# 3600
Installation Instructions

Serial Number



The act of uncoupling your fifth wheel trailer can be one of the most dangerous tasks performed when RVing. Accidents can cause broken bones, severed limbs and even death by crushing. Such accidents can be avoided by following a few simple steps:

- Chock your trailer wheels
- Extend your front jacks until you see no weight is on the hitch
- **NEVER** place any part of your body between the trailer frame and tow vehicle or hitch

Safety Information

1. Blue Ox® strongly recommends Dealer installation.
2. Do not attempt to install this product without reading these instructions.
3. **Warning!** Failure to install this product properly can result in damage to your fifth wheel trailer, tow vehicle, fifth wheel hitch and/or cause bodily injury.
4. The BedSaver™ should be inspected for damage after each use.

If the BedSaver™ is in an accident it must be replaced. **DO NOT** use it again! An accident, no matter how minor, can cause unseen damage. Using the BedSaver™ again could result in more damage or serious injury. DO NOT use the BedSaver™ if missing parts.




BXR4508

Pullrite SuperGlide 24K

Model# 3600

Installation Instructions

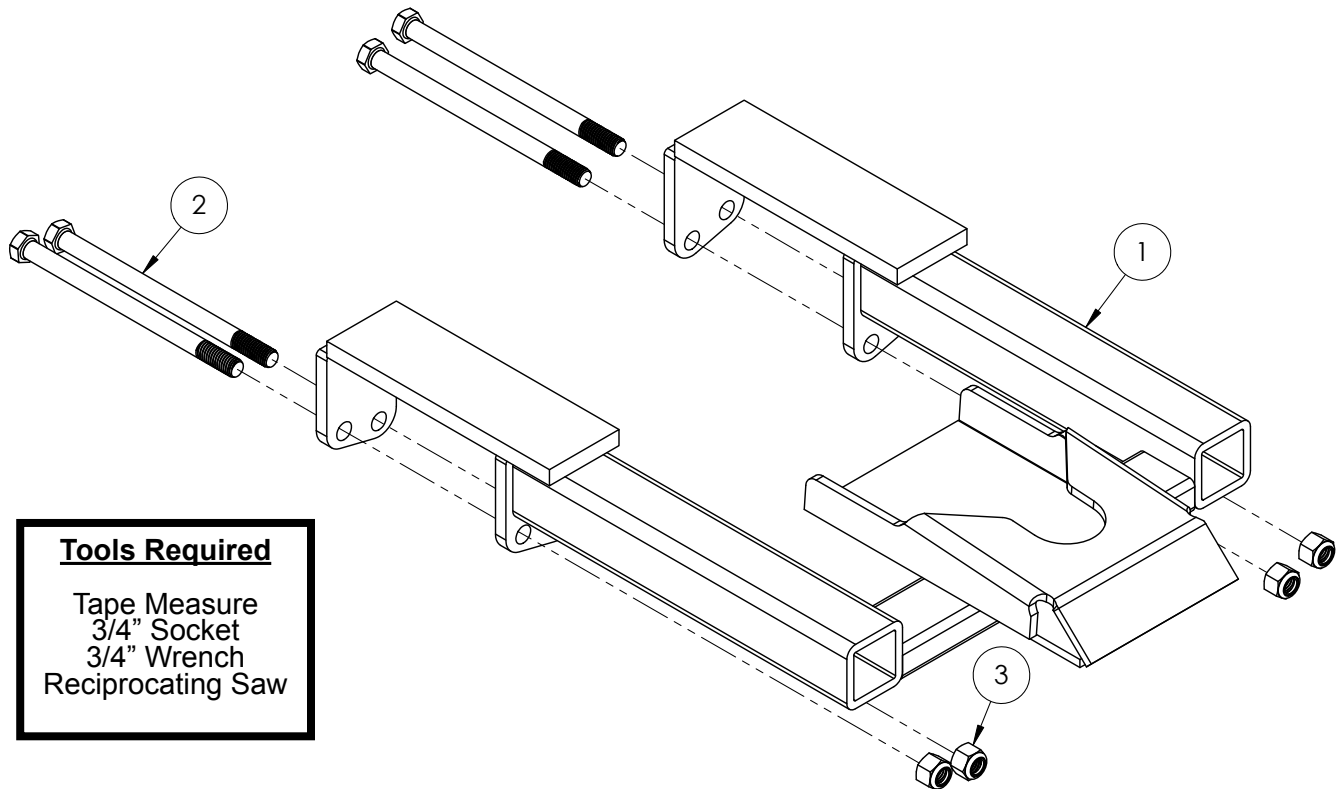

Tools Required

Tape Measure
3/4" Socket
3/4" Wrench
Reciprocating Saw

Item No.	Part No.	Description	Qty.
1.....	61-7152	BXR4508 Bedsaver™	1
2.....	201-0801	1/2"-13 x 7-1/2" Hex Head Bolt, Grade 5, ZP	4
3.....	202-0094	1/2"-13 Hex Nylon Lock Nut, ZP.....	4

IMPORTANT: Use only genuine factory replacement parts on your bracket kit. Do not substitute homemade or nontypical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your bracket kit, be sure to use a replacement bolt of the same grade. Repair parts may be ordered through your nearest **Blue Ox**® Dealer or Distributor.



1. Remove the pins, one (1) on each side, from the hitch head assembly and remove the hitch head assembly from the base.




BXR4508


Pullrite SuperGlide 24K

Model# 3600

Installation Instructions

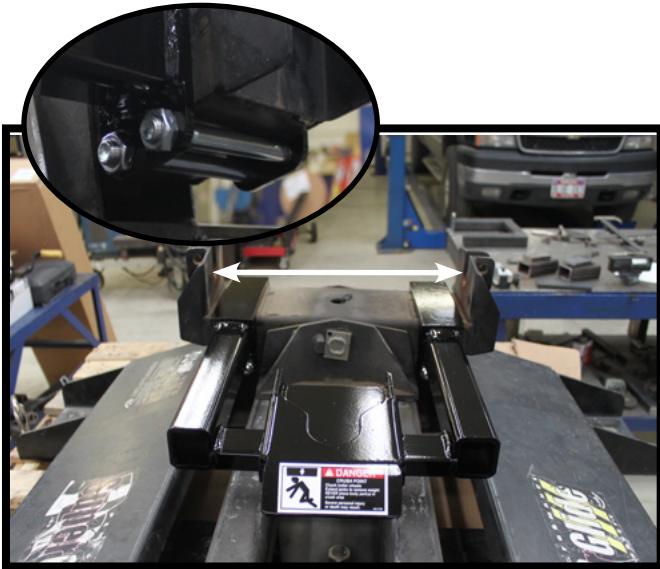

2. Install the Bedsaver™ onto the hitch and center on the base. Use 1/2"-13 x 7-1/2" bolts and 1/2" lock nuts to fasten to the base.

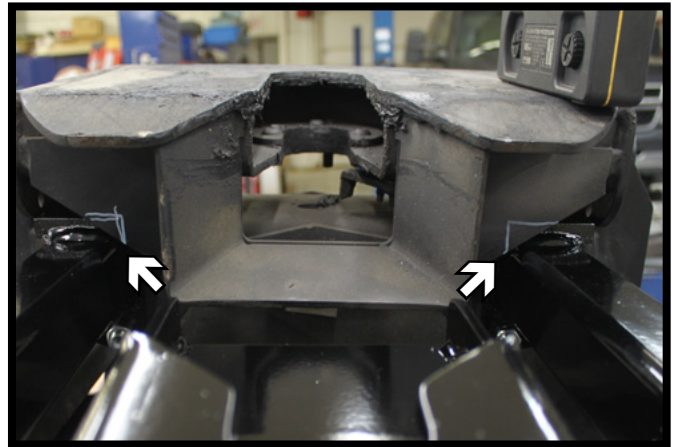

3. Reinstall the hitch head assembly. Mark and trim the head to allow the proper 10-1/2 degree downward tilt. Reinstall the hitch head pins.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2012 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com