



Thank you for purchasing a Borla Performance Cat-Back™ Exhaust System.

Precision manufactured using aircraft quality T-304 stainless steel; this system is designed to endure years of heavy use. Installing a Borla Performance Exhaust System on your vehicle will eliminate the restrictive design of the stock exhaust, allowing your engine to discharge exhaust gas easier. The result is more horsepower and torque, longer engine life, and a distinctive throaty growl- all this, with easy bolt-on installation. These installation instructions have been written to help you in the installation of your Borla Performance Exhaust System. Please read it completely before installing your system.

This Borla Performance Cat-Back™ Exhaust System (Part number 140029) has been designed for the 2002-2004 Cadillac Escalade EXT and 2003-2004 Cadillac Escalade ESV equipped with 6.0L V8 engine and an automatic transmission.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...


By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

Borla Performance Cat-Back™ Bill of Materials

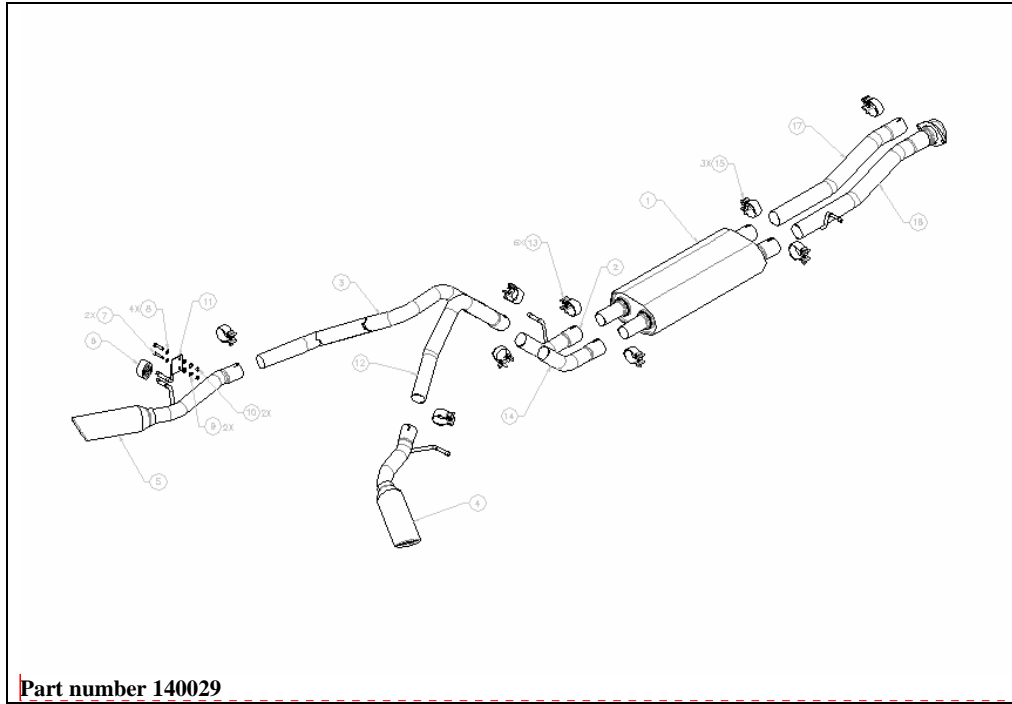

1. Muffler assembly
2. Left muffler outlet pipe
3. Left intermediate pipe
4. Right tail pipe assembly
5. Left tail pipe assembly
6. Rubber bracket
7. Bolt (qty 2)
8. Flat washer (qty 4)
9. Lock washer (qty 2)
10. Hex nut (qty 2)
11. Hanger/bracket assembly
12. Right intermediate pipe
13. 2.25" Accuseal™ clamp (qty 6)
14. Right muffler outlet pipe.
15. 2.50" Accuseal™ clamp (qty 3)
16. Right front pipe assembly
17. Left front pipe assembly

Caution!!! Never work on a hot exhaust system. Serious injury in the form of burns can result If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Cat-Back™ Exhaust System.

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Cat-Back™ Exhaust System.

Original Exhaust System Removal

Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.

1. Remove spare tire as recommended by vehicle manufacturer.
2. Remove bolts from flange on the right pipe and loosen clamp on left pipe, both shown in figure 1.
3. Cut the exhaust just after the muffler as shown in figure 2.
4. Lubricate all hangers and rubber brackets.
5. Remove hanger from rubber bracket and remove tail pipe assembly from vehicle.
6. Using a muffler stand or an additional person to hold the remaining exhaust system up in place, remove all hangers from the rubber brackets.
7. Finally, remove the old exhaust system from your vehicle.

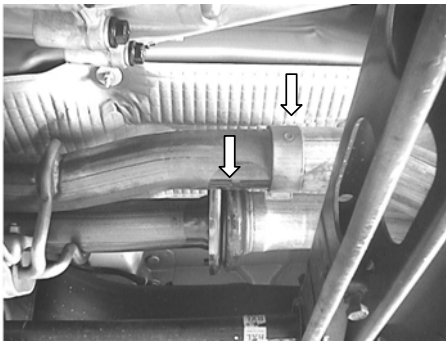


Figure 1

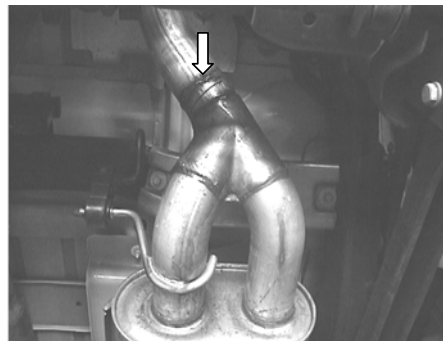


Figure 2

Borla Performance Cat-Back™ Exhaust System Installation

Warning: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. DO NOT use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks. If any welding is performed, protect vehicle brake, fuel, vacuum or similar lines. Always check for any damage after welding has been done. Also check inside vehicle for damage to such items as carpet, inner liner, etc. Always have a class C fire extinguisher and a bucket of water available during any welding process.

1. Place right front pipe assembly in position as shown in figure 3 and bolt flanges together finger tight using the hardware provided. Now place the hanger into the rubber bracket.
2. Place a clamp over the expanded end of the left front pipe assembly and place it into position as shown also in figure 3. DO NOT tighten the clamp.
3. Place a clamp over each expanded end of the muffler assembly and place into position as shown in figure 4. DO NOT tighten the clamps.

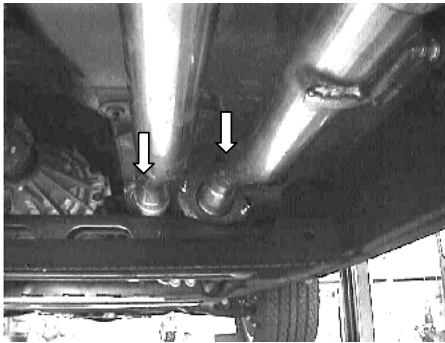


Figure 3

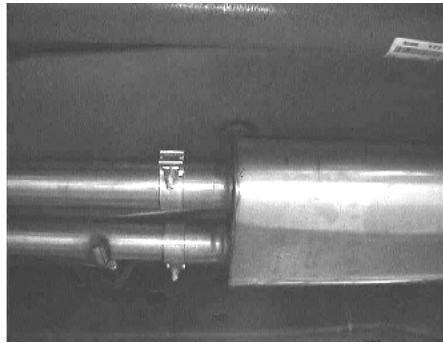


Figure 4

4. Place a clamp over the expanded end of left and right intermediate pipes and place into position as shown in figure 5. On left intermediate pipe install hanger into rubber bracket. DO NOT tighten the clamps.
5. Place a clamp over the expanded end of left and right over axle pipes and place into position. DO NOT tighten the clamps.
6. Using the hardware provided, install hanger/bracket assembly on driver side of vehicle just behind rear tire as shown in figure 6.



Figure 5


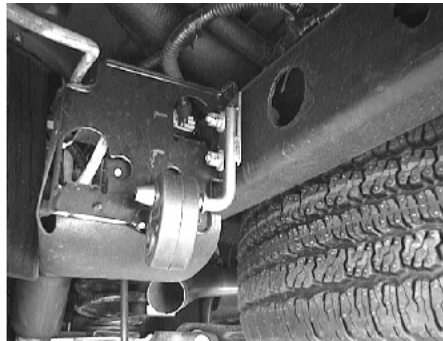


Figure 6

7. Place a clamp over the expanded end of left and right tail pipe assemblies. Place into position and install hangers into rubber brackets.
8. Check your exhaust system for proper clearance under the vehicle and also for tip alignment.
9. Once position has been determined to be correct, tighten the Accuseal™ clamps to 32-35 ft. lbs. working from the rear of the vehicle to the front.
10. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
11. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.
12. Install spare tire as recommended by vehicle manufacturer.

Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.

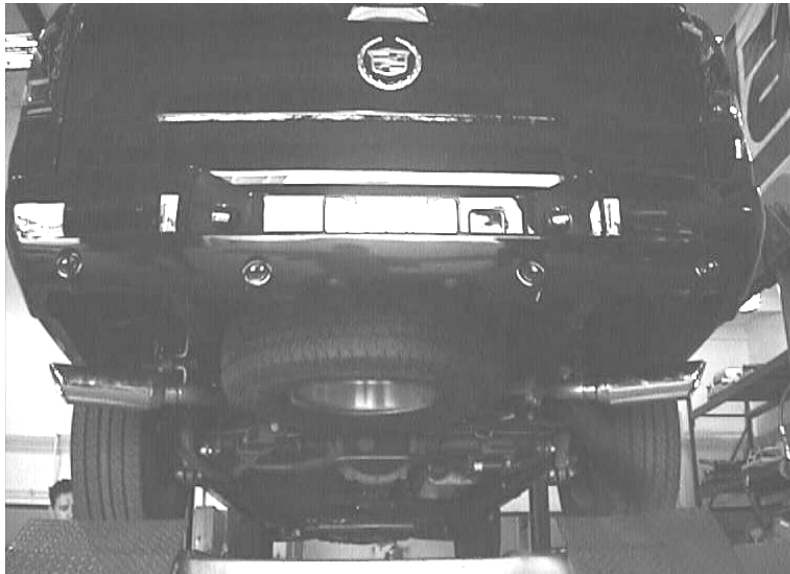

Congratulations!!! You have completed the installation of the world famous Borla Performance Stainless Steel Exhaust System.