

2006-2007 BMW M5 Exhaust System Installation



Precision manufactured using aircraft quality T-304 stainless steel; this system is designed to endure years of heavy use. Installing a Borla Performance Exhaust System on your vehicle will eliminate the restrictive design of the stock exhaust, allowing your engine to discharge exhaust gas easier. The result is more horsepower and torque, longer engine life, and a distinctive throaty growl- all this, with easy bolt-on installation. These installation instructions have been written to help you in the installation of your Borla Performance Exhaust System. Please read it completely before installing your system.

Thank you for purchasing a Borla Performance Cat-Back™ Exhaust System.

Borla Performance Cat-Back™ Exhaust System (Part number 140196) has been designed for the 2006-2007 BMW M5 equipped with 5.0L V10 engine, rear-wheel drive and automatic or manual transmissions.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.


Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

Minimum Required Tool List:**TOOLS:**

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Socket
- 4 Reciprocating saw or chain style pipe cutter

SHOP SUPPLIES:

- 1 Spray Lubricant

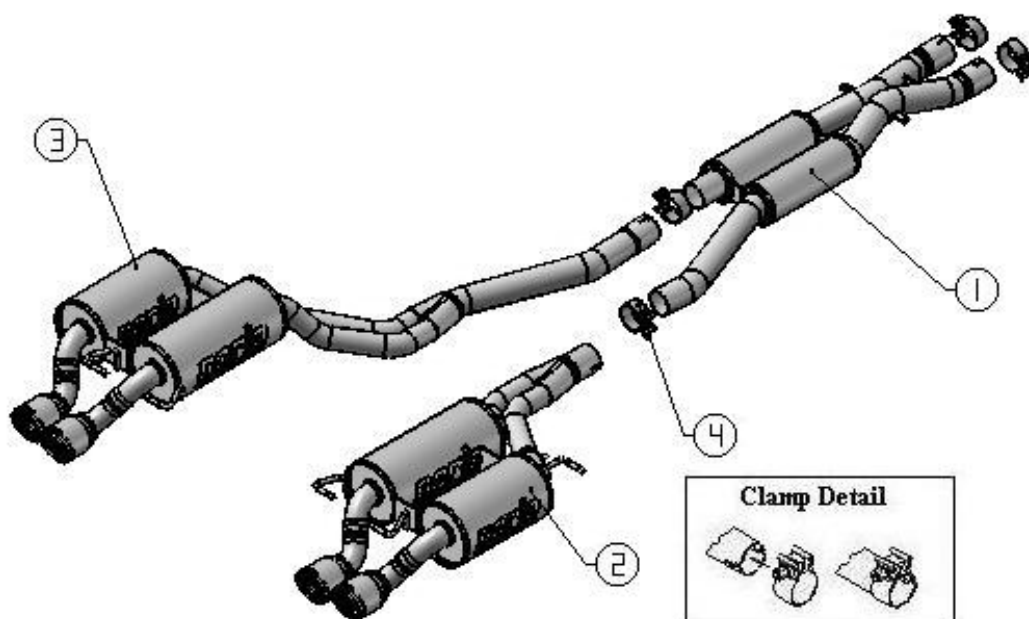Borla Performance Cat-Back™ Bill of Materials

1. X-pipe assembly
2. Right rear muffler assembly
3. Left rear muffler assembly
4. 2.50" clamp (qty 4)

Caution!!! Never work on a hot exhaust system. Serious injury in the form of burns can result If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Cat-Back™ Exhaust System.

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Cat-Back™ Exhaust System.

Original Exhaust System Removal

Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.

1. Measure back 4 inches from the welds at the rear of the catalytic converters and mark each pipe as shown in figure 1.
2. Cut the pipes using a reciprocating saw or a chain style pipe cutter as shown in figure 2.
3. Unbolt the side support bars shown in figure 3 from the center support bracket and swing them out of the way. Place the hardware to the side for use during the installation of your new exhaust system.
4. Unbolt the and remove the ground straps from the exhaust located on both driver (right) and passenger side (left) at the rear of the vehicle. Place the hardware to the side for use during the installation of your new exhaust system.
5. Using a muffler stand or an additional person to hold the exhaust system up in place, unbolt all the hangers from the vehicle and remove the entire exhaust system shown in figure 4 from the vehicle. Place the hardware to the side for use during the installation of your new exhaust system.
6. Debur the inside and outside of the remaining pipes to allow the new exhaust to slide on the pipes properly.

Warning: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. DO NOT use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

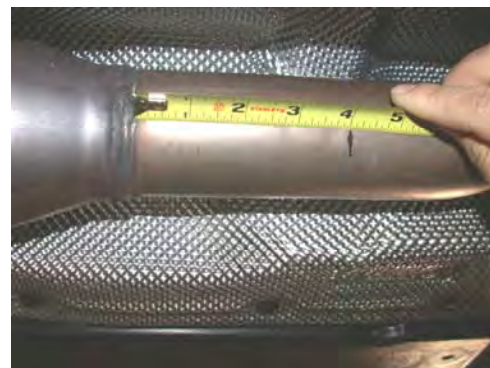


Figure 1



Figure 2

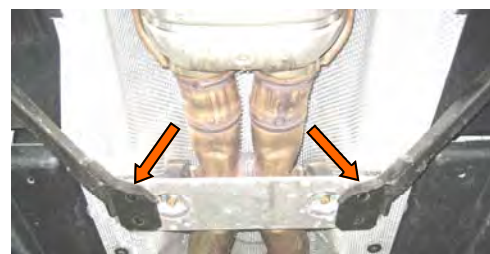


Figure 3

Borla Performance Cat-Back™ Exhaust System Installation

1. Remove the center support and all the hangers from the original exhaust paying attention to their location and install them onto your new exhaust system.
2. Place a clamp over the expanded ends X-pipe assembly and set it into position as shown in figure 5. Do Not tighten the clamps. Reinstall the side support bars using the original hardware.
3. Place a clamp over the expanded end of the left muffler assembly and set it into position as shown in figure 6. Do Not tighten the clamp. Using the original hardware reinstall the hanger onto the vehicle.
4. Place a clamp over the expanded end of the right muffler assembly and set it into position as shown in figure 7. Do Not tighten the clamp. Using the original hardware reinstall the hanger onto the vehicle.
5. Using the original hardware, install the ground straps onto each rear muffler assembly.
5. Check your exhaust system for proper clearance under the vehicle and also for tip alignment.
6. Once position has been determined to be correct, tighten the Accuseal™ clamps to 32-35 ft. lbs. making sure the clamp openings are not over any of the notches in the pipes.
7. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
8. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose hardware or incorrectly positioned clamp) and repair as necessary.

Congratulations!!! you have completed the installation of the world famous Borla Performance Stainless Steel Exhaust System.

Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.



Figure 4



Figure 5

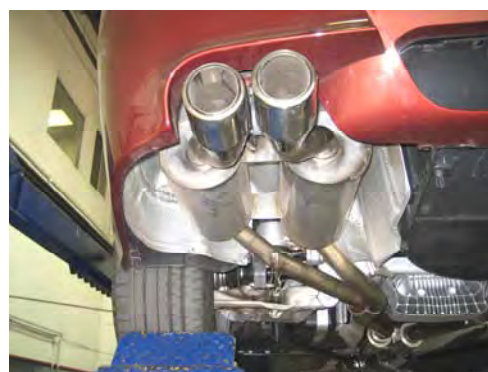


Figure 6



Figure 7