

START HERE

The goods: (4) riv nuts, (4) 5/16" x 2" bolts, (1) riv nut tool
 (4) 5/16 split lock washers. (6) button cap screws, (4) 5/16x3/8
 button head socket, (4) 5/16-18 serrated flange nuts. (4) D-rings,
 (10) T-Slot nuts, (2) 1/4 x 1 7/8 pancake bolts, (2) 1/4 serrated nuts.



The tools: Drill, 1/2" drill bit, pen, tape measure, 1/2" and 7/8" wrench,
 5/16" allen wrench.


Follow steps closely and watch for cautions

1.

1st. Loosen deck bolts and attach headboard between plywood and frame.

Install side rails

Tighten deck bolts. Then bolt down headboard with 2 pancake head bolts.

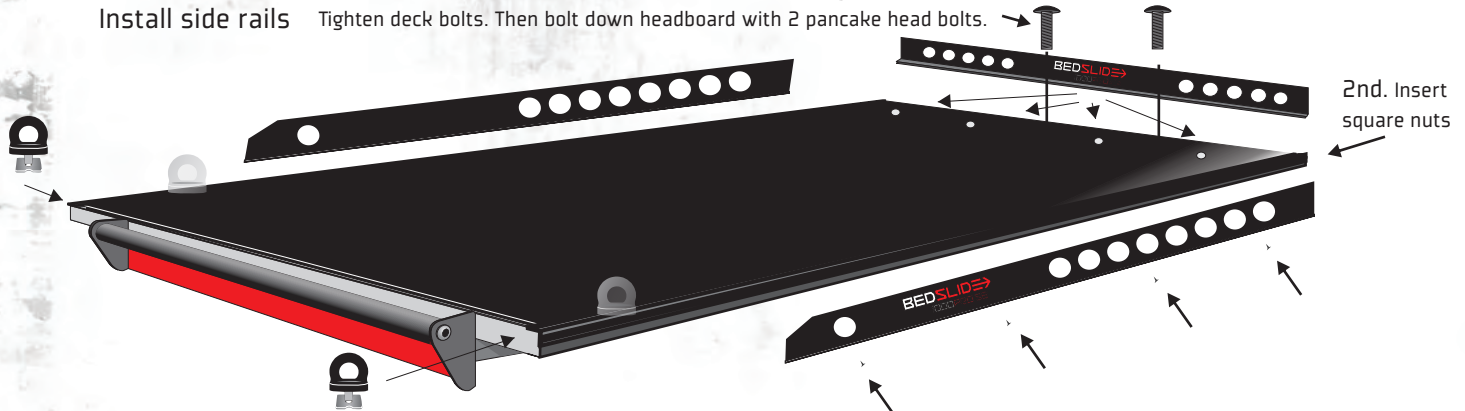


2nd. Insert square nuts

4th. Loosely attach Tie down nut to D-ring tie downs and slide into T-Slot from rear. Tighten at desired location.

3rd. Slide side rails into T-Slot from rear and tighten using set screws and square nuts. Repeat on each side. Attach rails to headboard using screws.

2.

Test fit & center BEDSLIDE

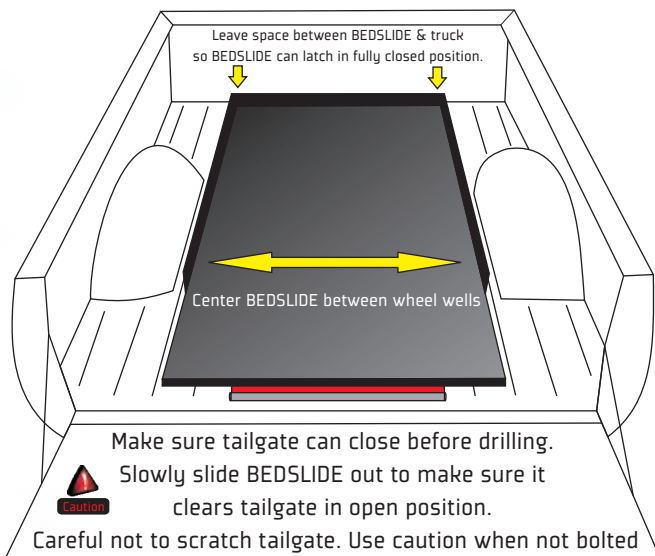


*If BEDSLIDE clears tailgate skip step 2.5


2.5.

If needed, adjust bearing tab to clear tailgate

1st. Open upper tray a few inches and lift up to access the bearing tab.

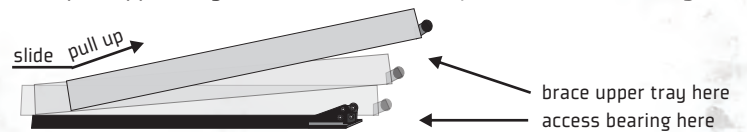


2nd. Rotate bearing tabs to the high position.

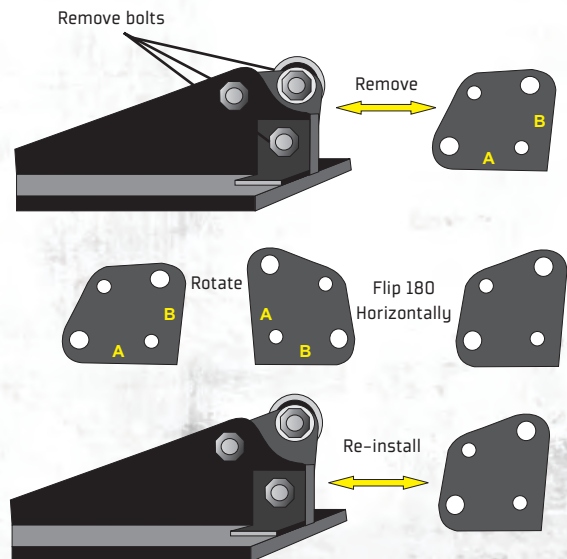

Repeat on other side and lower top tray.

3.

Mark and drill mounting holes

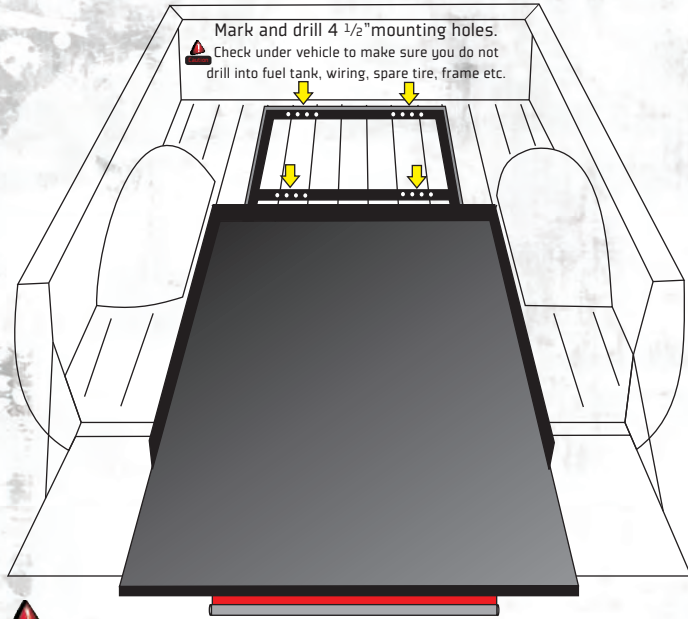


⚠️ **Caution** Slowly move upper tray out from closed position and avoid shifting hole placement. Use caution with non-mounted BEDSLIDE.

⚠️ **Caution** Use cross member closer to tailgate on long box BEDSLIDES that have 2 center cross members.


5.

Bolt top cross member in place

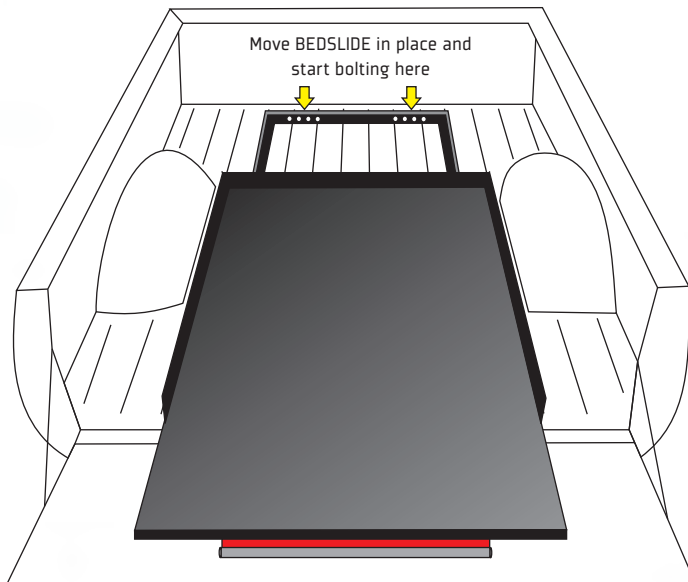

4.


Bolt in riv nut anchors into holes

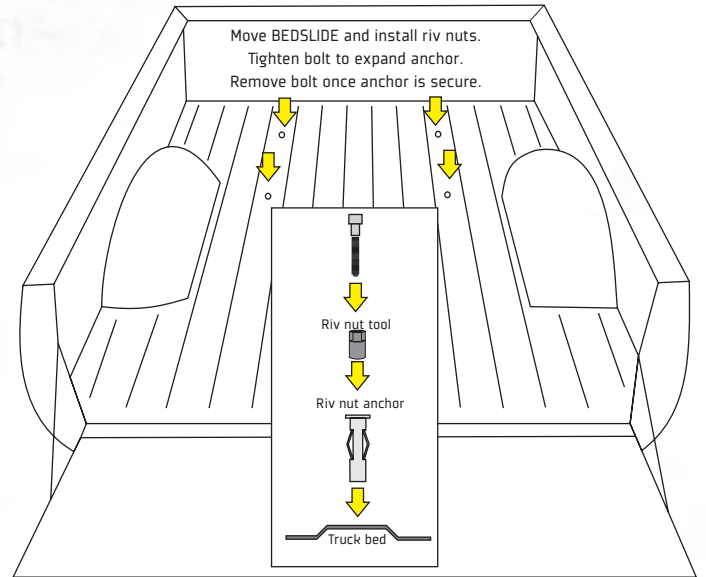

⚠️ **Caution** Do not over tighten. Do not use air impact tools with riv nuts.

6.

Bolt center cross member in place

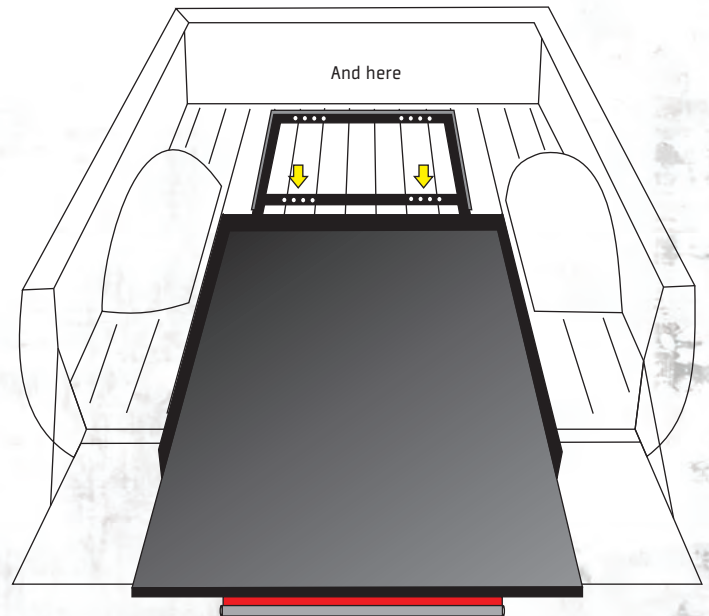

That's it! Your BEDSLIDE is installed. Now you can GET TO IT like never before.