



## STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only** approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

## Ford Extend-A-Fender® Fender Flares Rear Pair

Rear Part #20070-02

Rev-4 4/24/2014

For complete fitment info visit : [www.bushwacker.com](http://www.bushwacker.com)

### TOOLS FOR EASY INSTALLATION:

- Utility Knife
- #2 Phillips Driver
- Socket Wrench
- 7/32" Socket
- 10 mm Socket
- Grease Pencil

### LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

## Included in Hardware Kit:

- |    |  |    |   |    |   |    |   |    |  |    |   |    |   |
|----|--|----|---|----|---|----|---|----|--|----|---|----|---|
| 1. |  | 2. |  | 3. |  | 4. |  | 5. |  | 6. |  | 7. |  |
|    | CL1-0009,<br>Long "U" Clip,<br>Magni 565<br>8 pcs                                  |    | ET1-0002,<br>Edge Trim Tool,<br>1 pc  |    | GP1-0005,<br>Large Wiper Style<br>Edge Trim,<br>178 inches                          |    | MT1-0014,<br>1" x1.5" x.01"<br>Black Tab,<br>8 pcs                                  |    | SP1-0003,<br>1/2" x .260" x 1/4"<br>Nylon Spacer,<br>4 pcs                           |    | SW1-0025,<br>M6-1 x 35mm<br>Screw w/ Washer,<br>4 pcs                                 |    | SW1-0058,<br>#10 x 5/8" Phillips<br>SS Truss Screw,<br>8 pcs                          |

# Component List:



## STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.




## Rear Flare Installation Procedures (Passenger's Side):




Remove two factory bolts with a 10mm socket wrench and discard. (Note: New hardware is supplied, see Step 6)



Hold flare to vehicle and mark the location with a grease pencil of the four holes in the flare. *Note: Rear flares are similar enough that either will fit against the body of both sides. The wheel well hole locations will be wrong if the flare is on the wrong side. Driver's side flare is marked with an "L" and passenger's side flare is marked with an "R".*

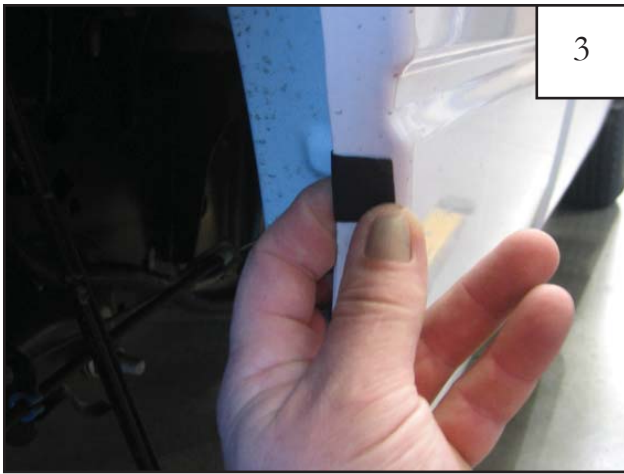


3  
Wrap a black tab (MT1-0014) around the wheel well sheet metal, centered over each of the four marks made in Step 2.

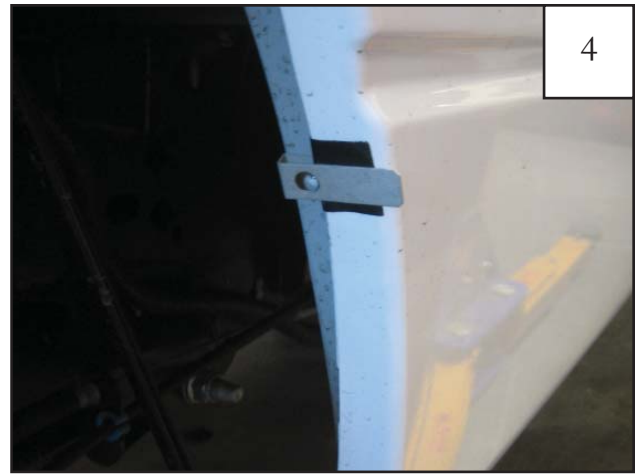

4  
Install supplied clips (CL1-0009) over each of the four black tabs placed on the sheet metal in Step 3.



5  
Hold flare to vehicle and start supplied truss head screws (SW1-0058) through the two topmost holes in wheel well. Then start supplied truss head screws (SW1-0058) through remaining two holes in flare. Tighten all screws.

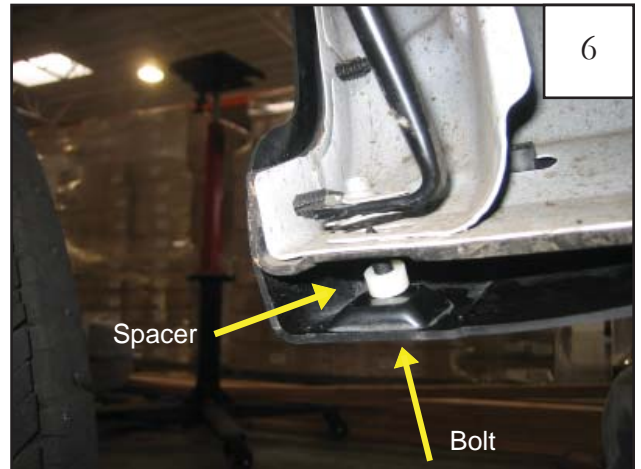

6  
Slide supplied spacer (SP1-0003) between flare and sheet metal. Thread supplied 35mm screw (SW1-0025) through hole in flare, through spacer, and through factory hole in sheet metal. See Step 7.




7  
Using a 10mm socket wrench, tighten 35mm bolt through spacer and factory hole in sheet metal.




8  
Completed rear flare installation.

## Edge Trim Tool Procedures:

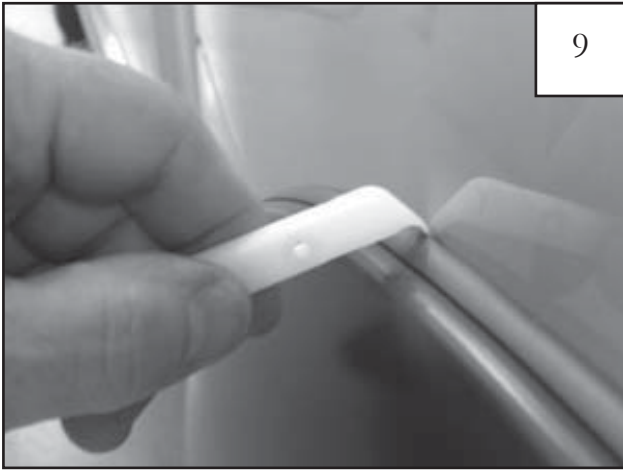

Using supplied Edge Trim Tool, seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.

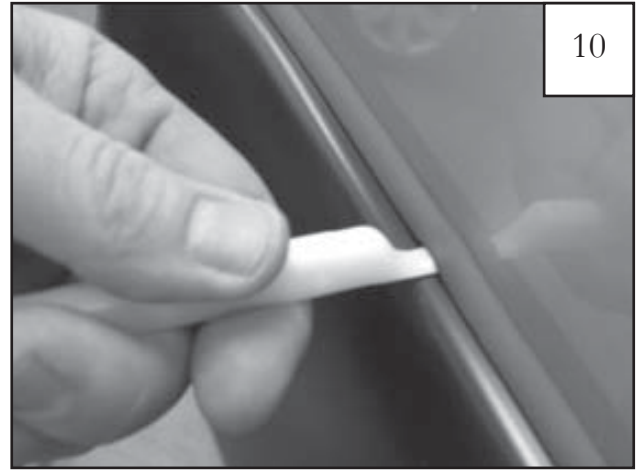

Using flat end of supplied Edge Trim Tool, seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.