

# 55245

LEXUS LX 470  
LEXUS RX 300  
TOYOTA 4RUNNER  
TOYOTA HIGHLANDER  
TOYOTA LANDCRUISER

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

01/26/09

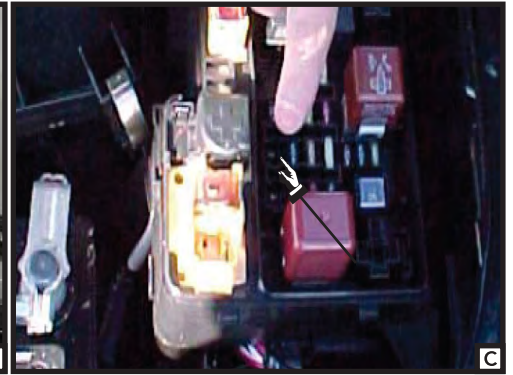

## English

1. Locate the vehicles factory tow plug location (S6) behind the bumper. On some vehicles the tow plug will be hidden under a black box. remove the 10 mm hex bolts and temporarily remove cover to reveal the tow plug. [A][B]

2. Insert harness connector into vehicle harness. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

3. On the Highlander and RX300 locate the vehicles fuse panel on the drivers side of the engine compartment. Insert a 20 amp fuse in the location marked towing. [C]

4. Re-install anything removed during installation.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55245